

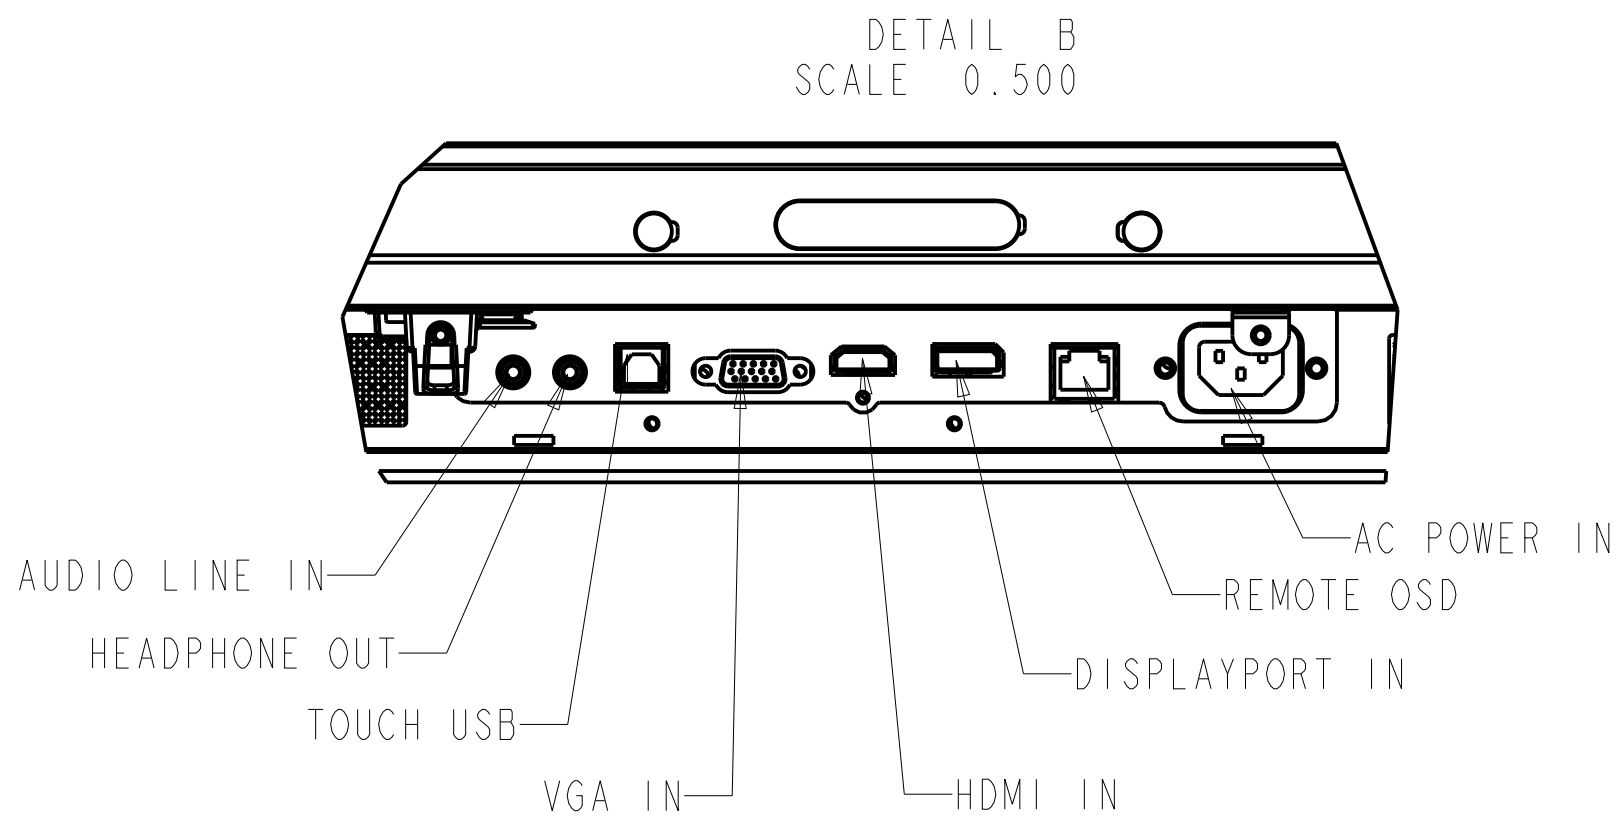
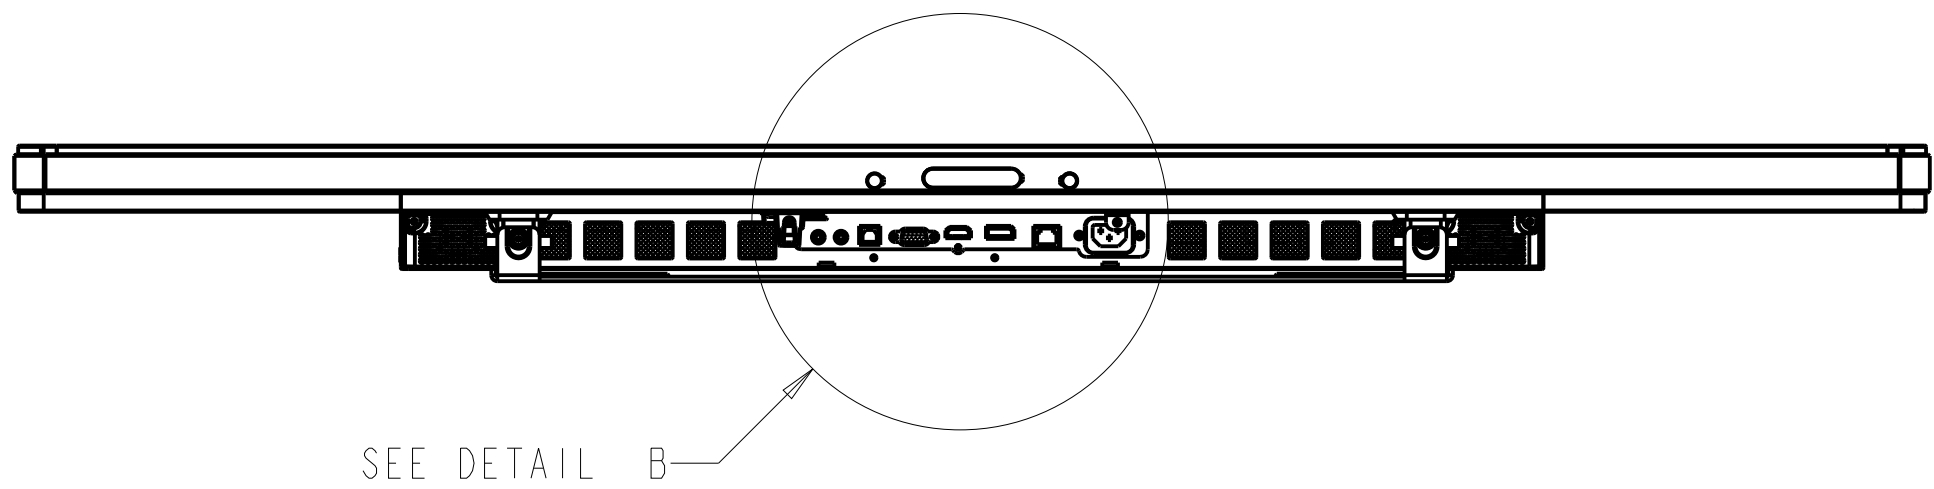
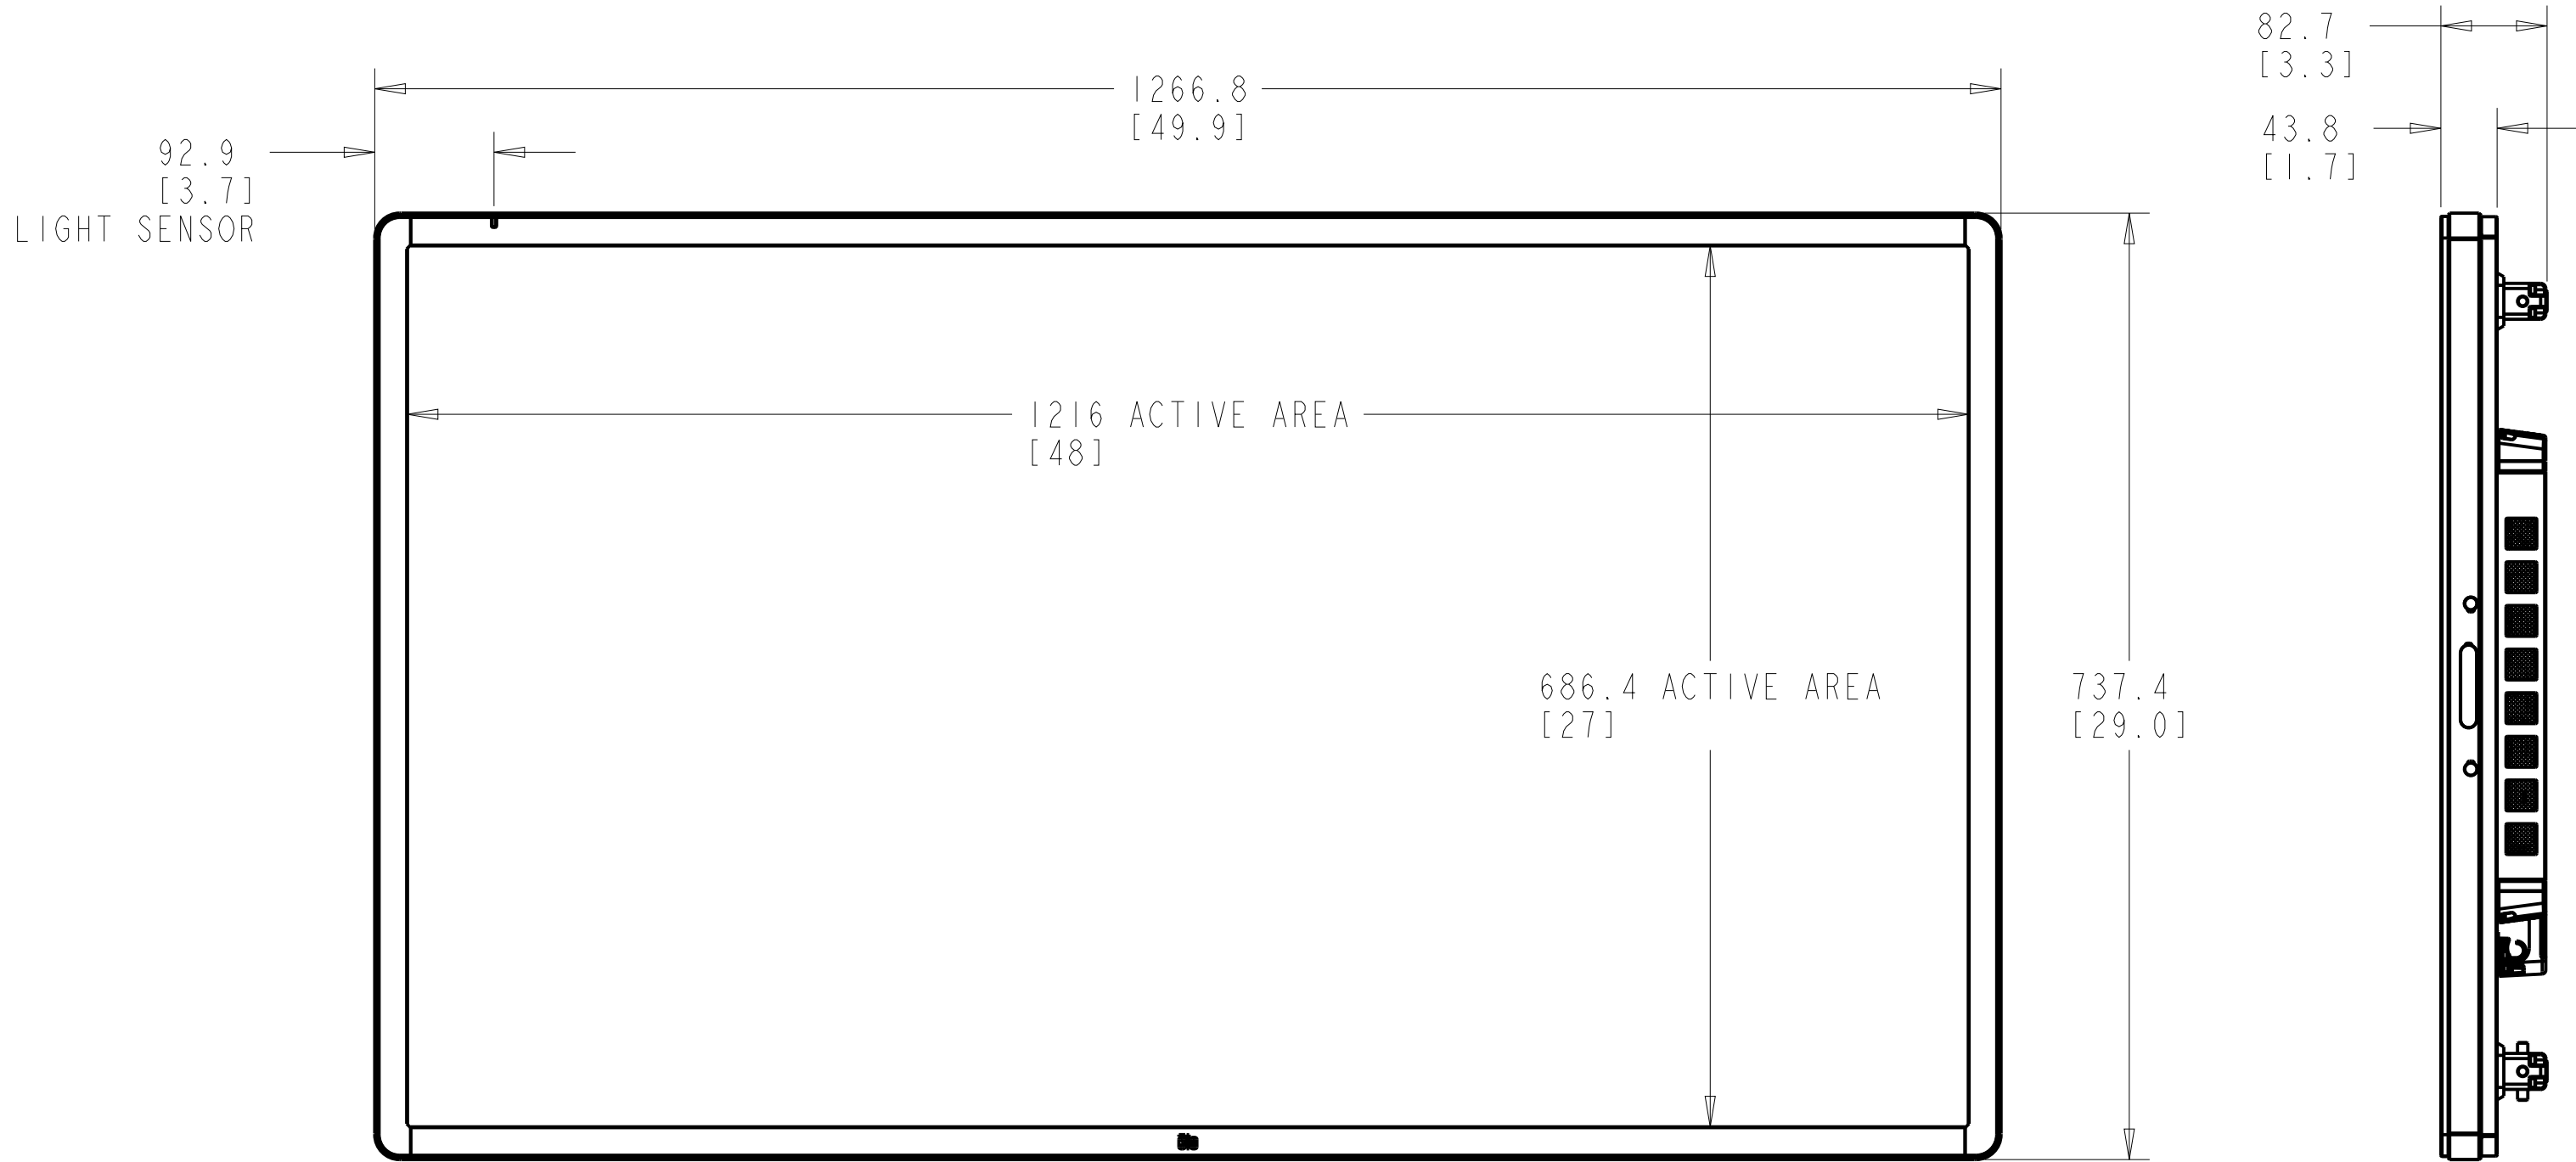
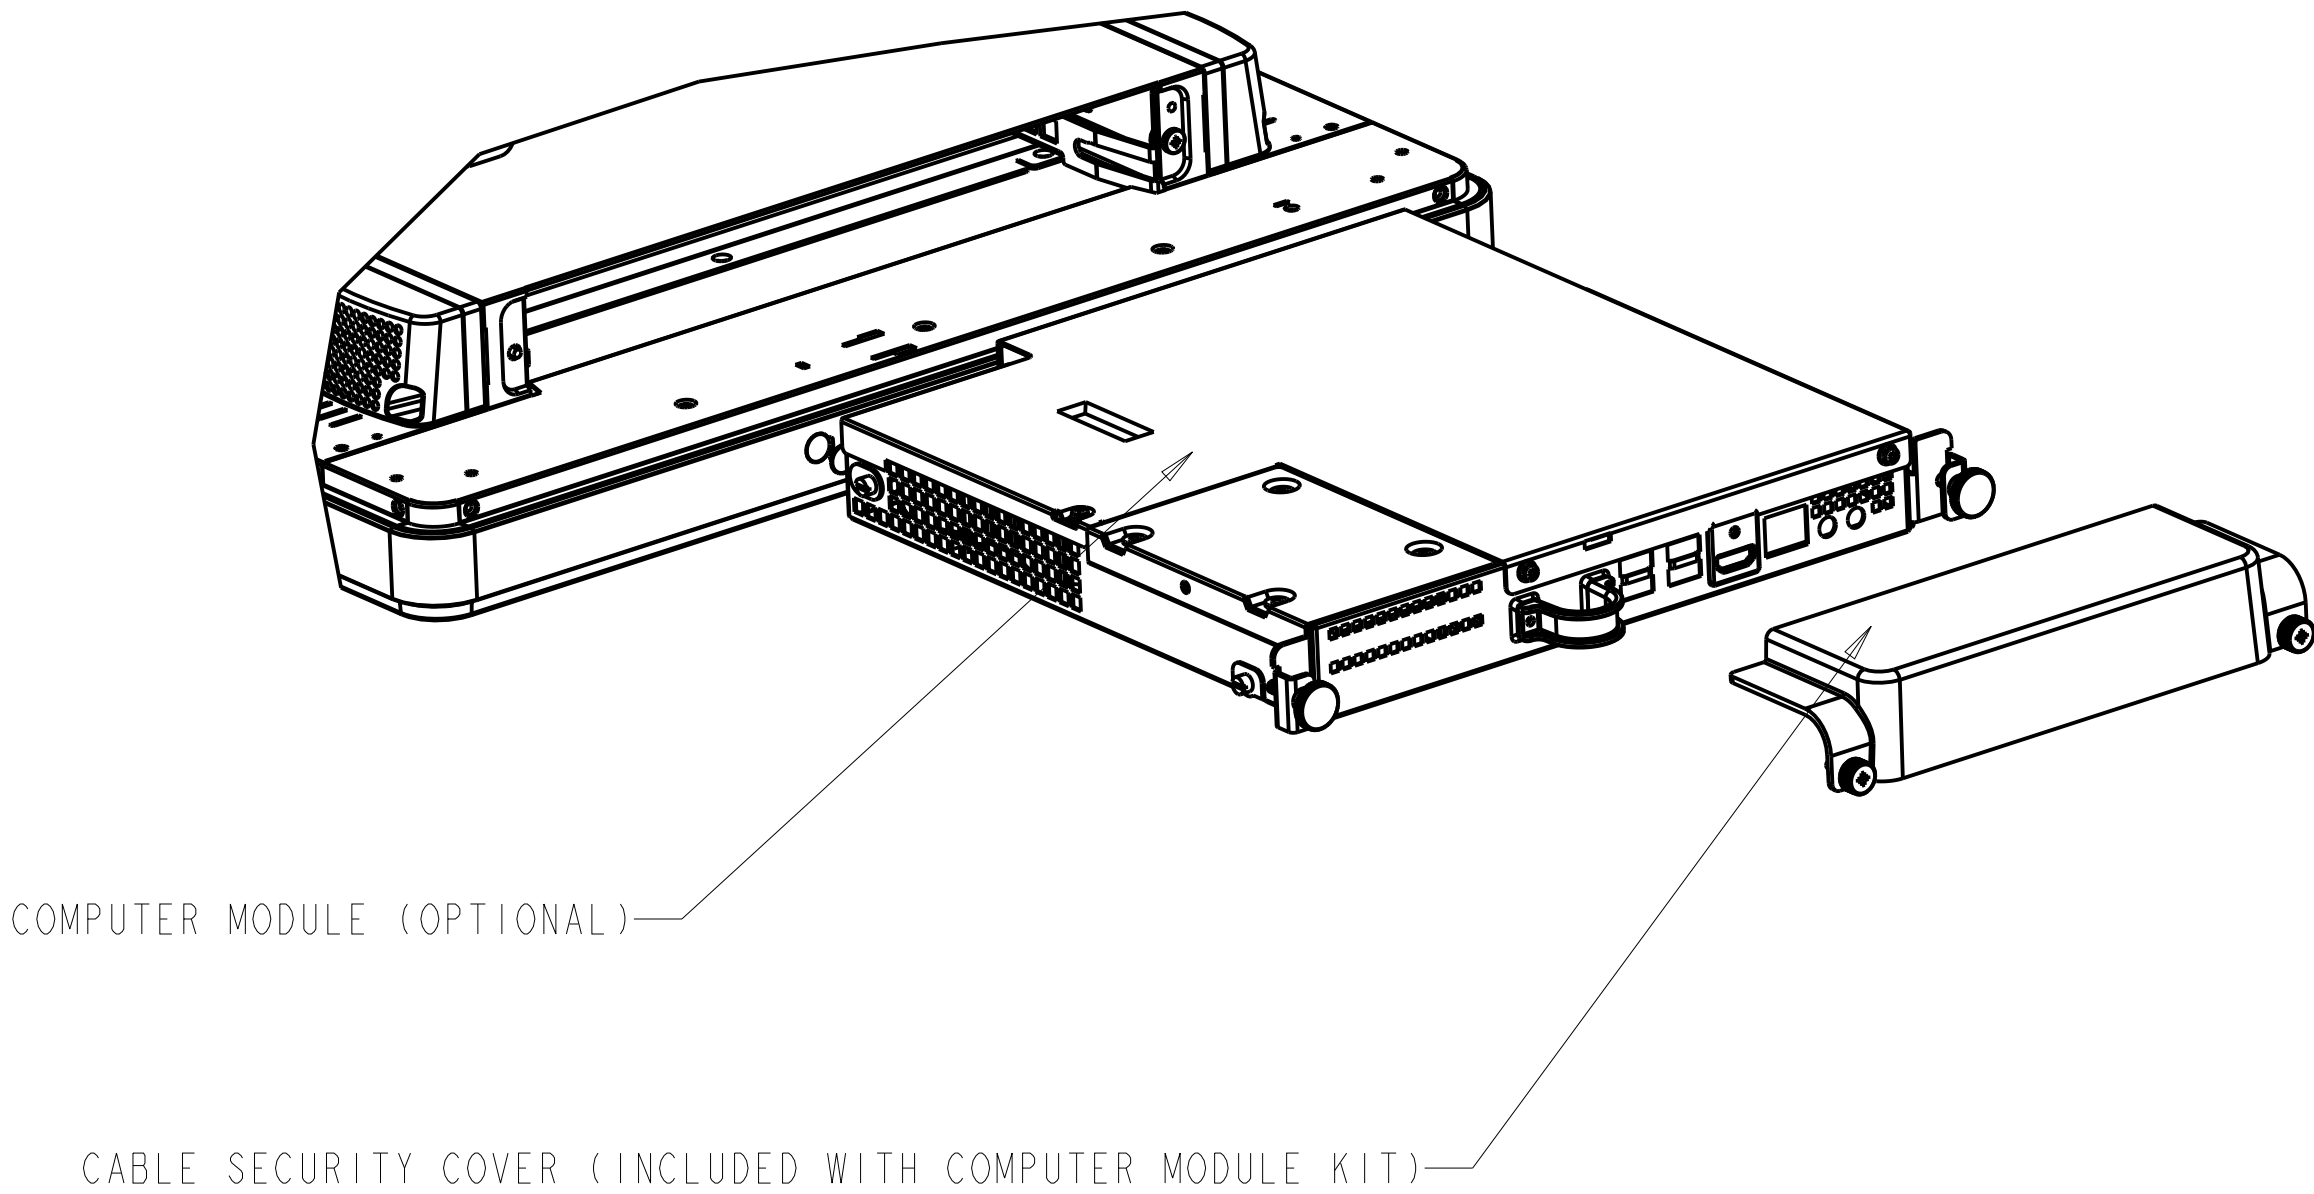



TITLE: DIMENSIONAL DRAWING: 5501L

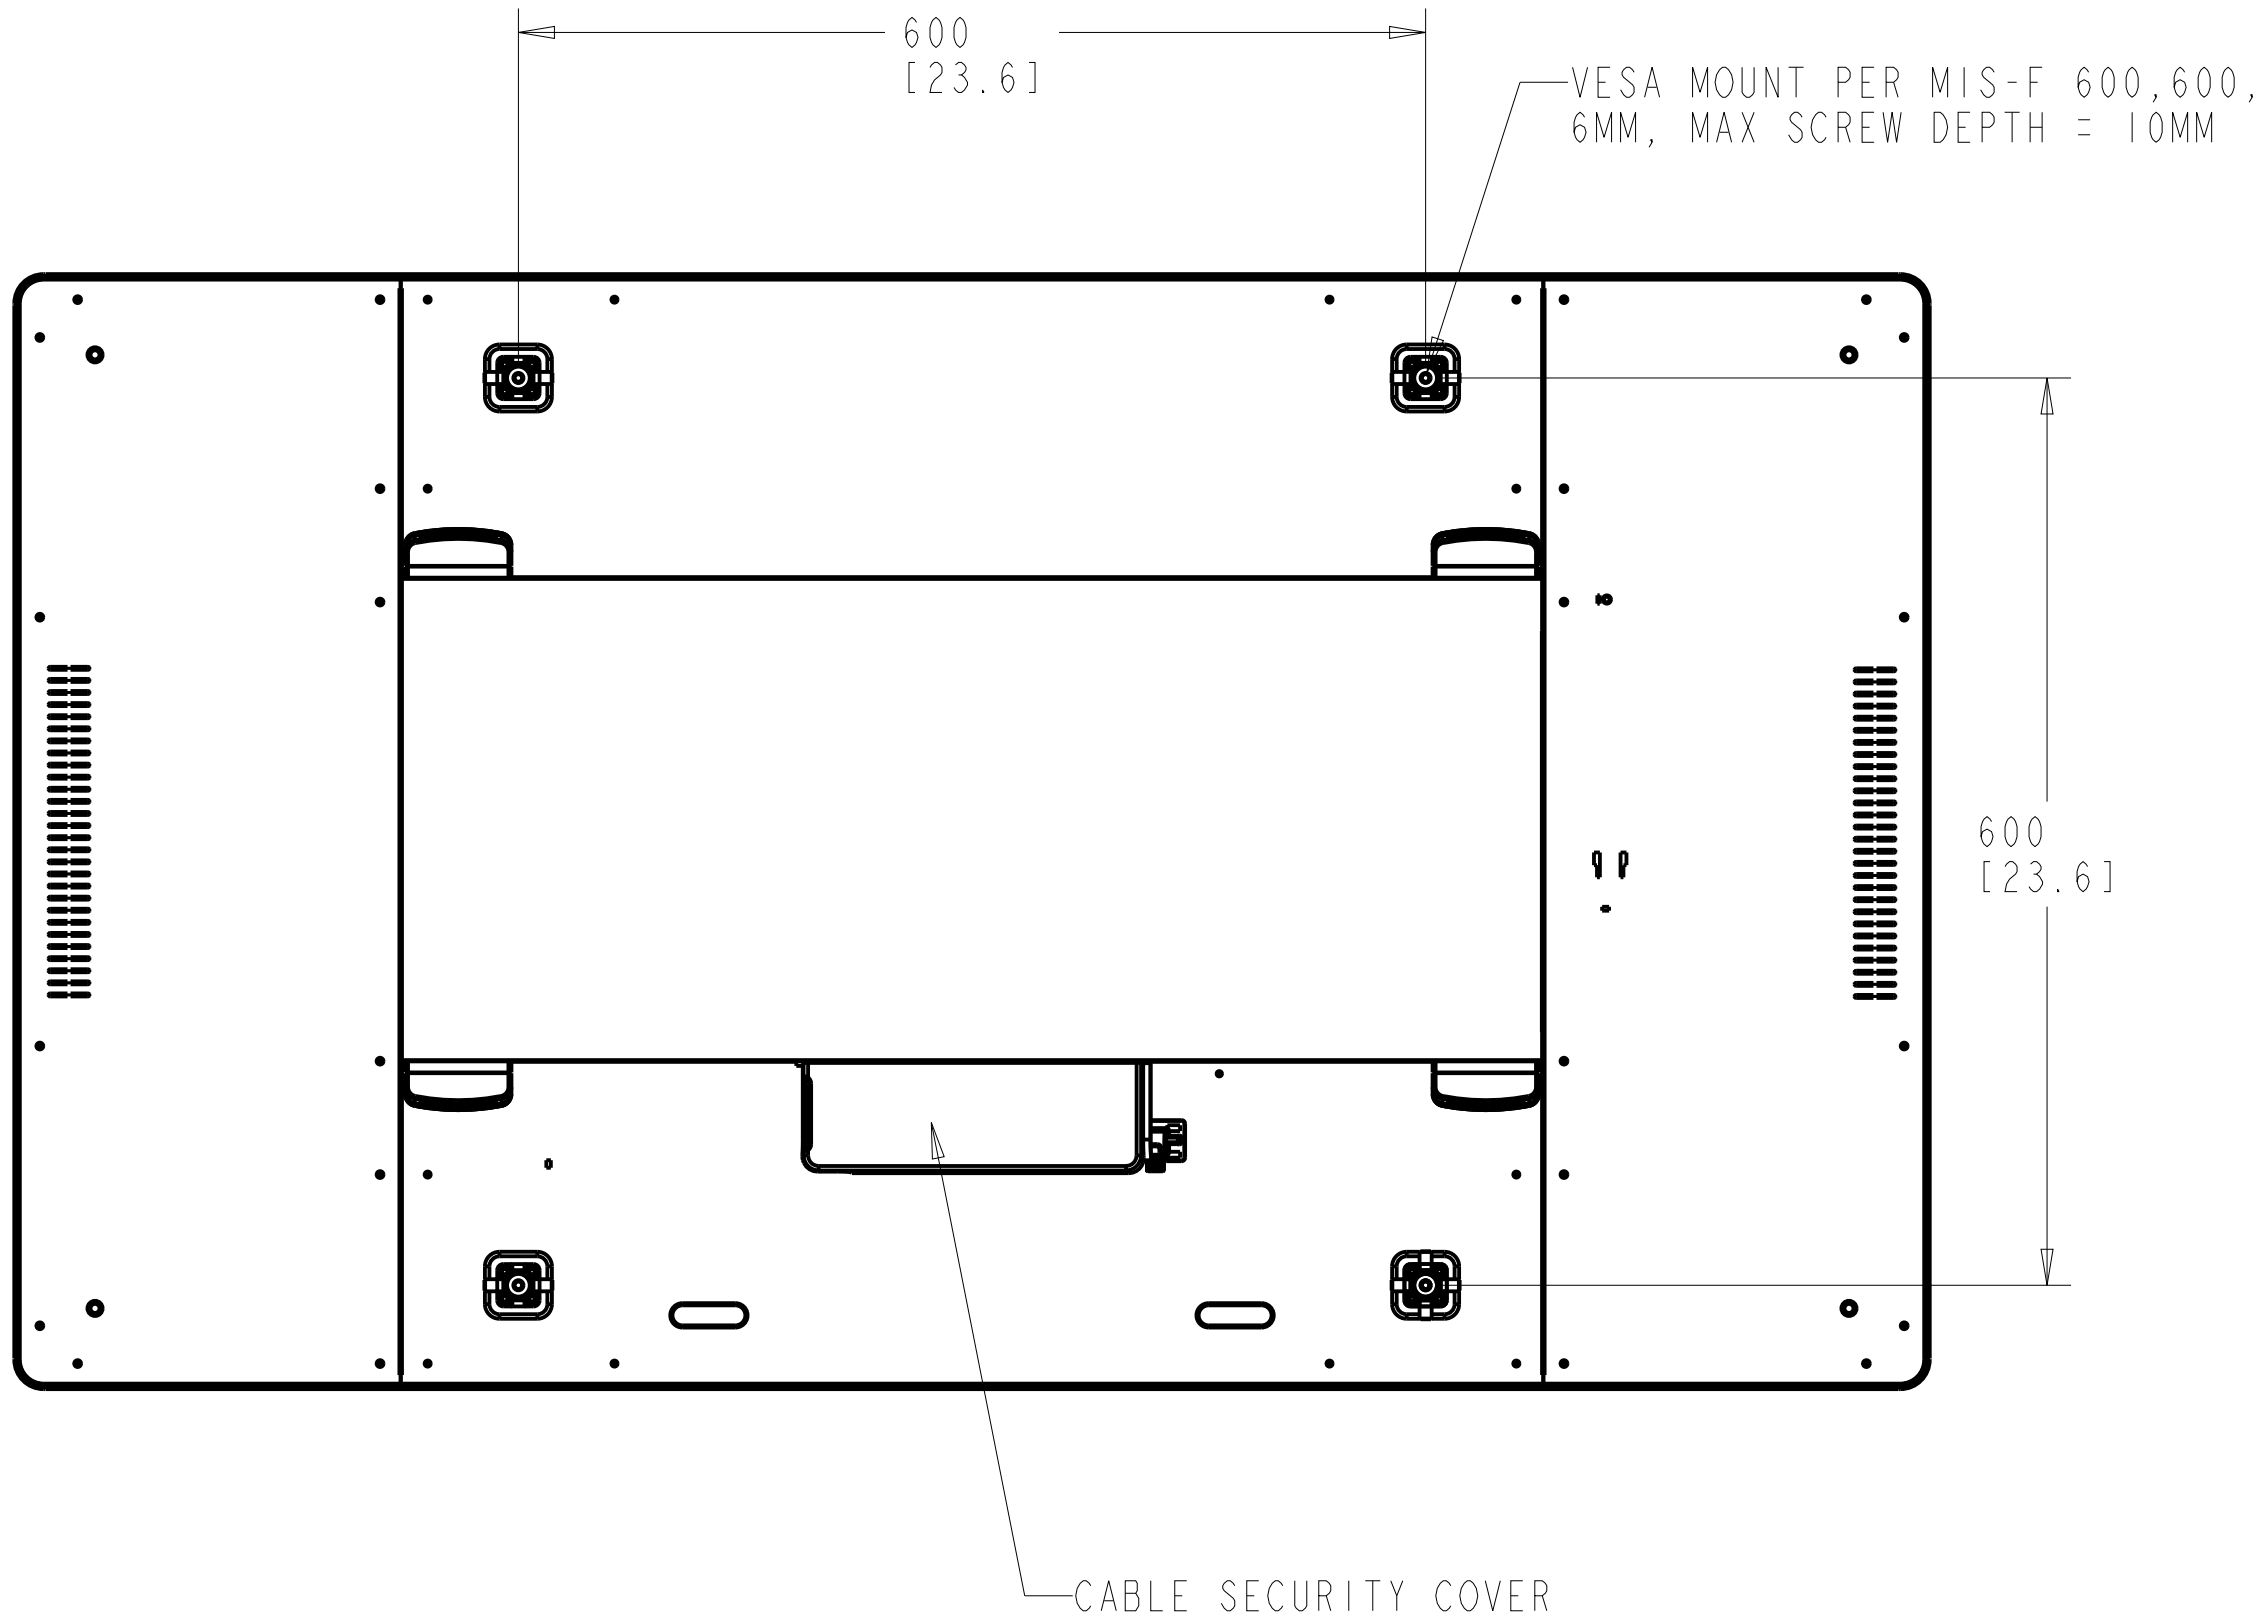

REMOTE OSD (1 INCLUDED WITH TOUCHMONITOR)
P/N E483757

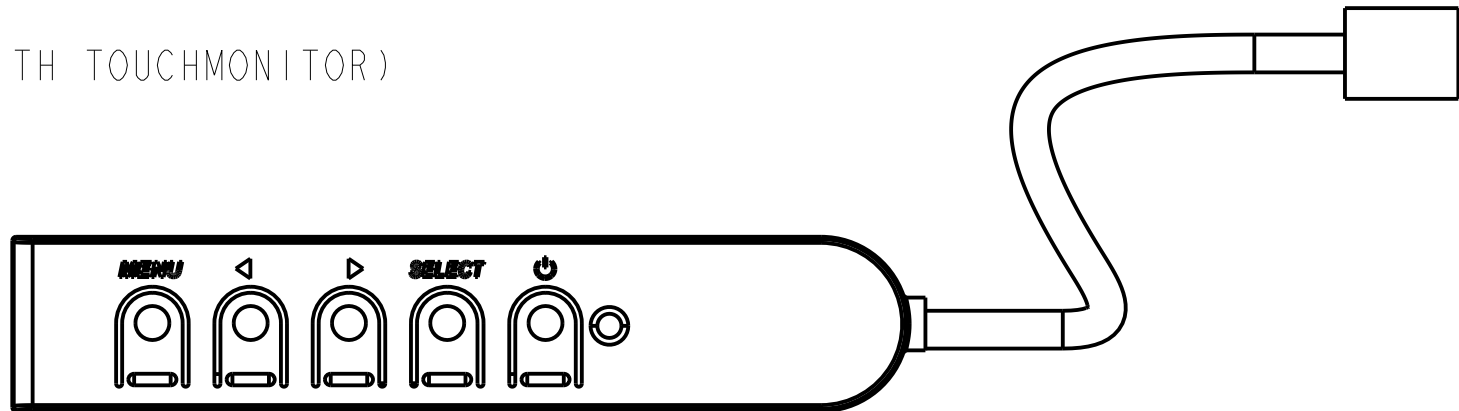

MOUNTING INTERFACE FOR PERIPHERALS
ONE PER SIDE (FOUR TOTAL)

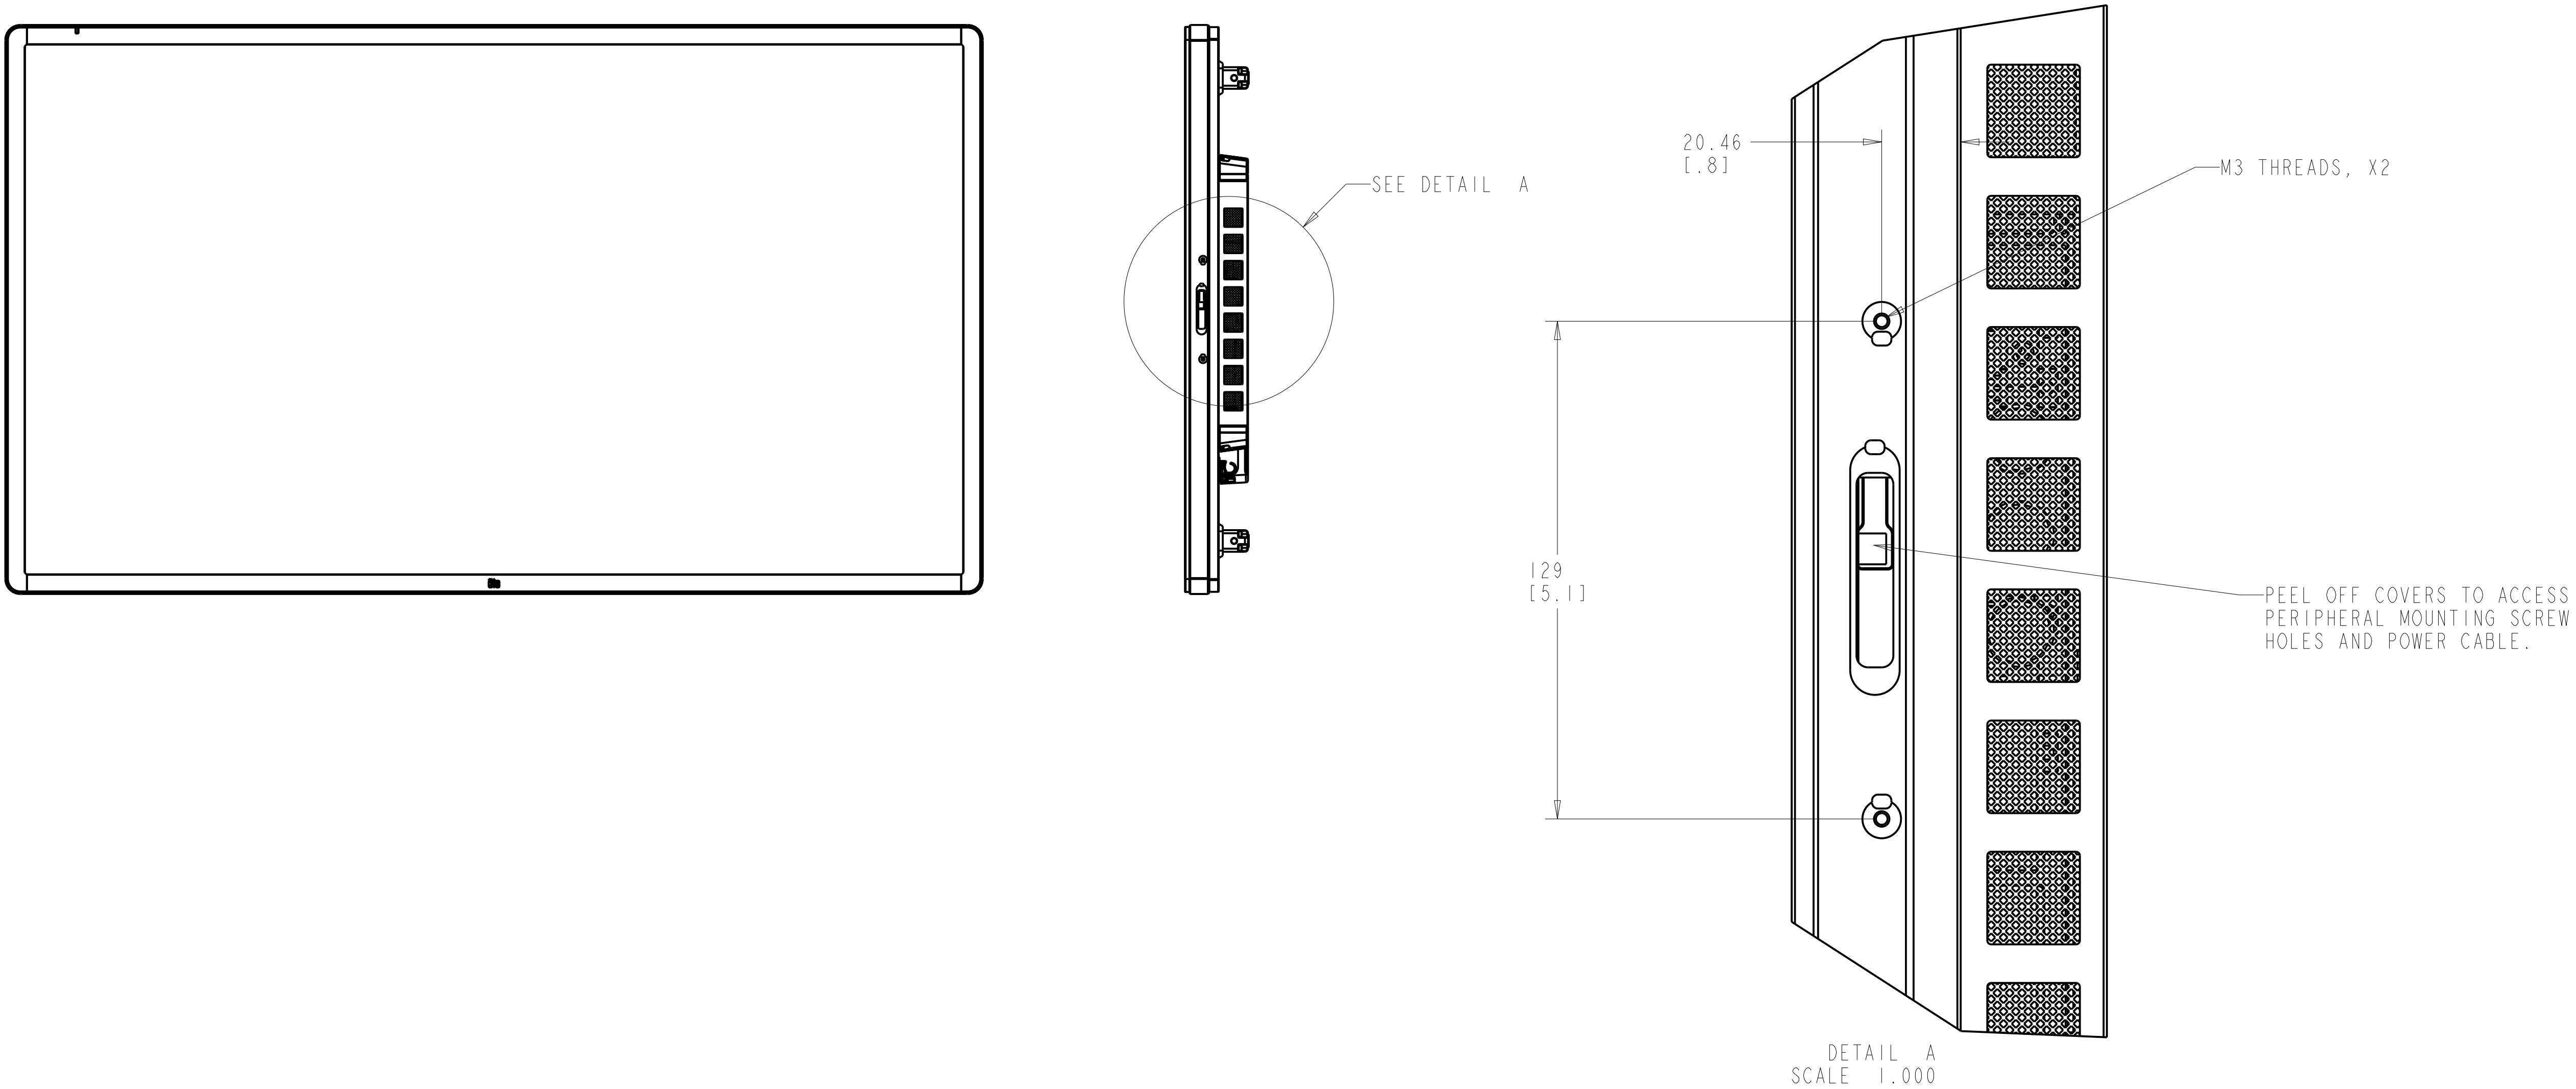


THERMAL RECOMMENDATIONS
PORTRAIT AND LANDSCAPE ORIENTATION

WALL MOUNTING

MAINTAIN AMBIENT ROOM TEMPERATURE
BELOW 40C

AIRFLOW DIRECTION

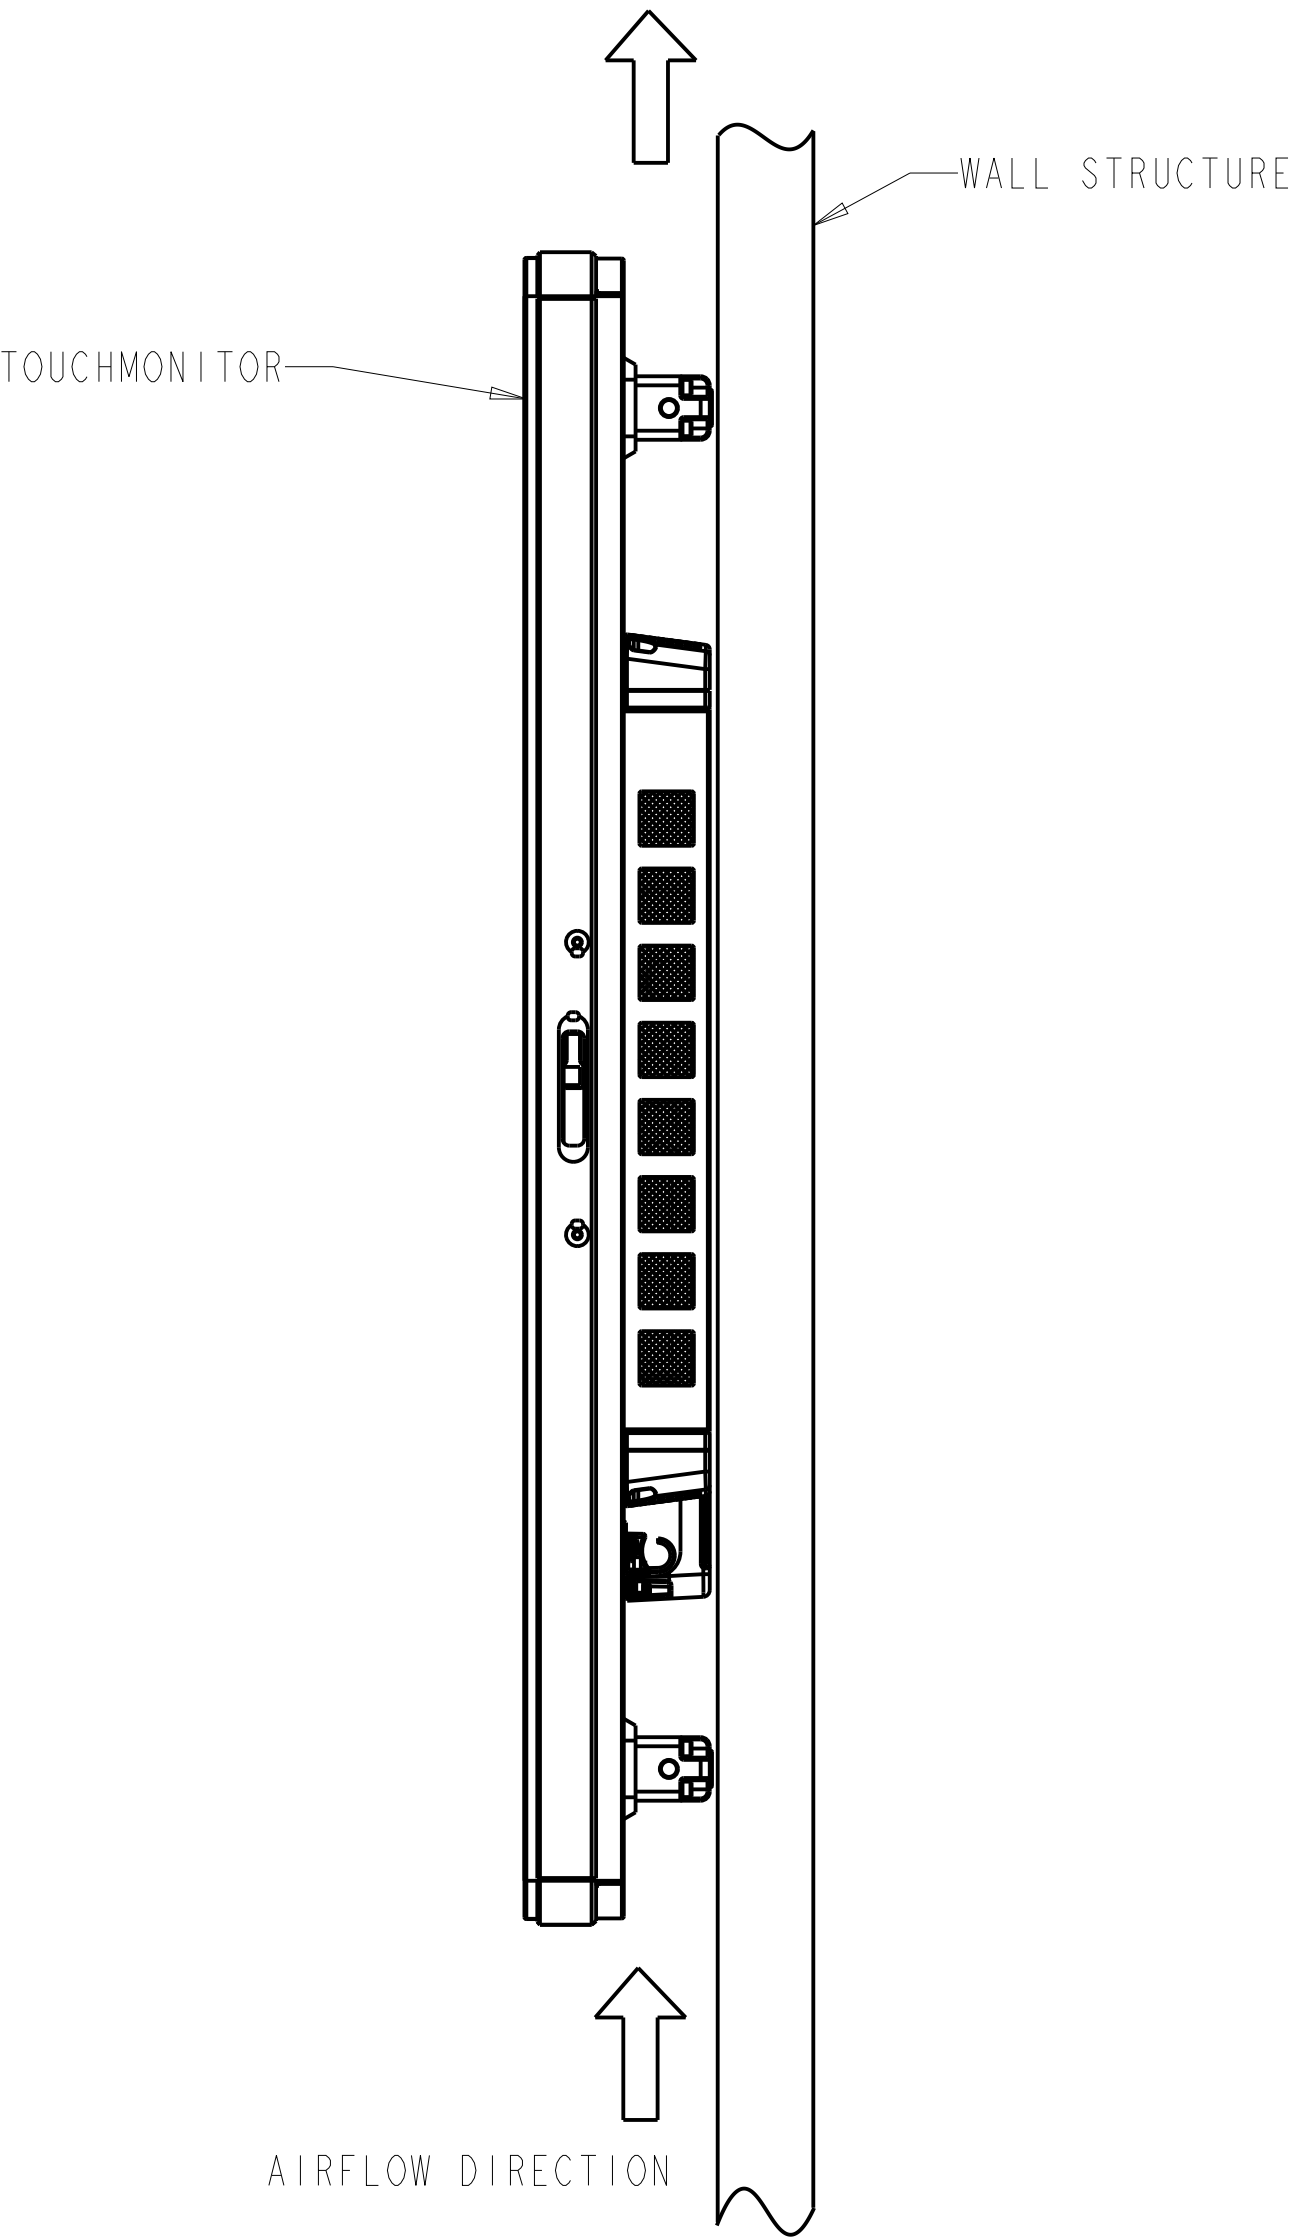


FLUSH MOUNTING


AIR BEHIND MONITOR MUST NEVER EXCEED
40C DURING OPERATION. INSTALL VENTING
AND/OR FANS IN WALL STRUCTURE TO CIRCULATE
AIR AND MAINTAIN SAFE OPERATING TEMPERATURE.

WALL STRUCTURE



TOUCHMONITOR

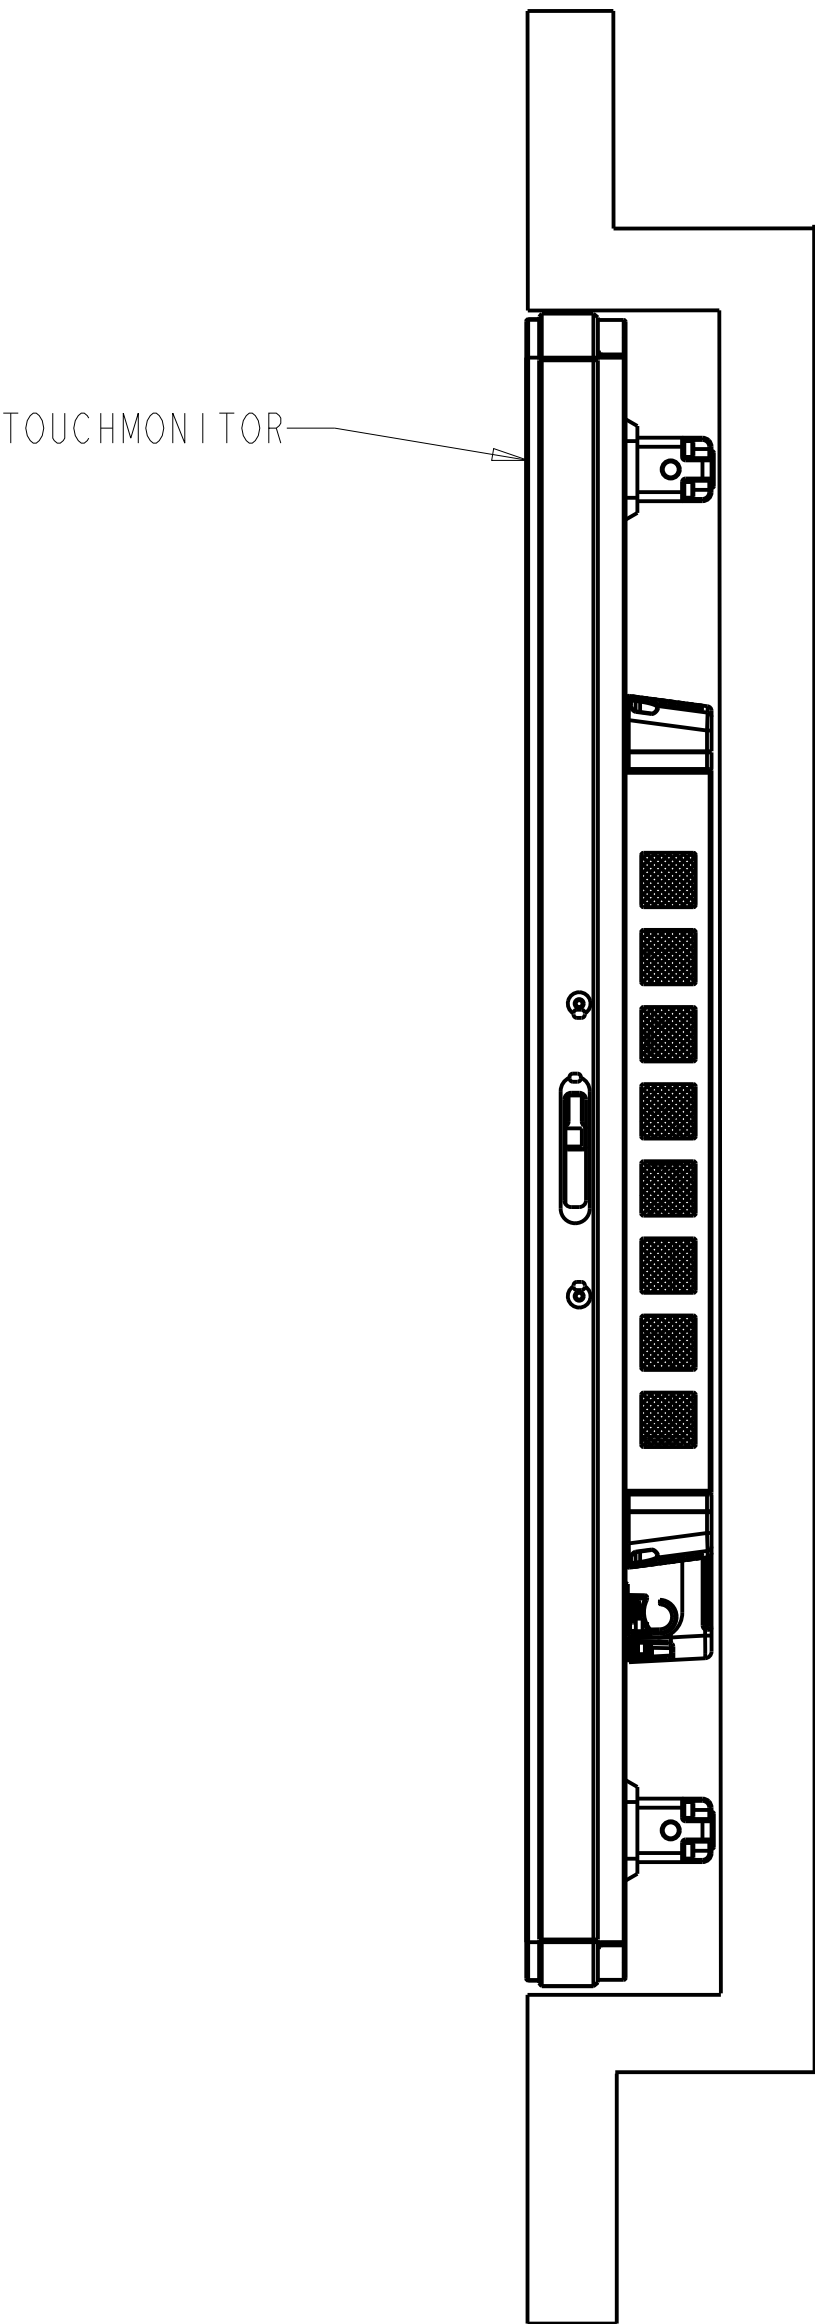

PRODUCT VENTING LOCATIONS
DO NOT BLOCK DURING OPERATION

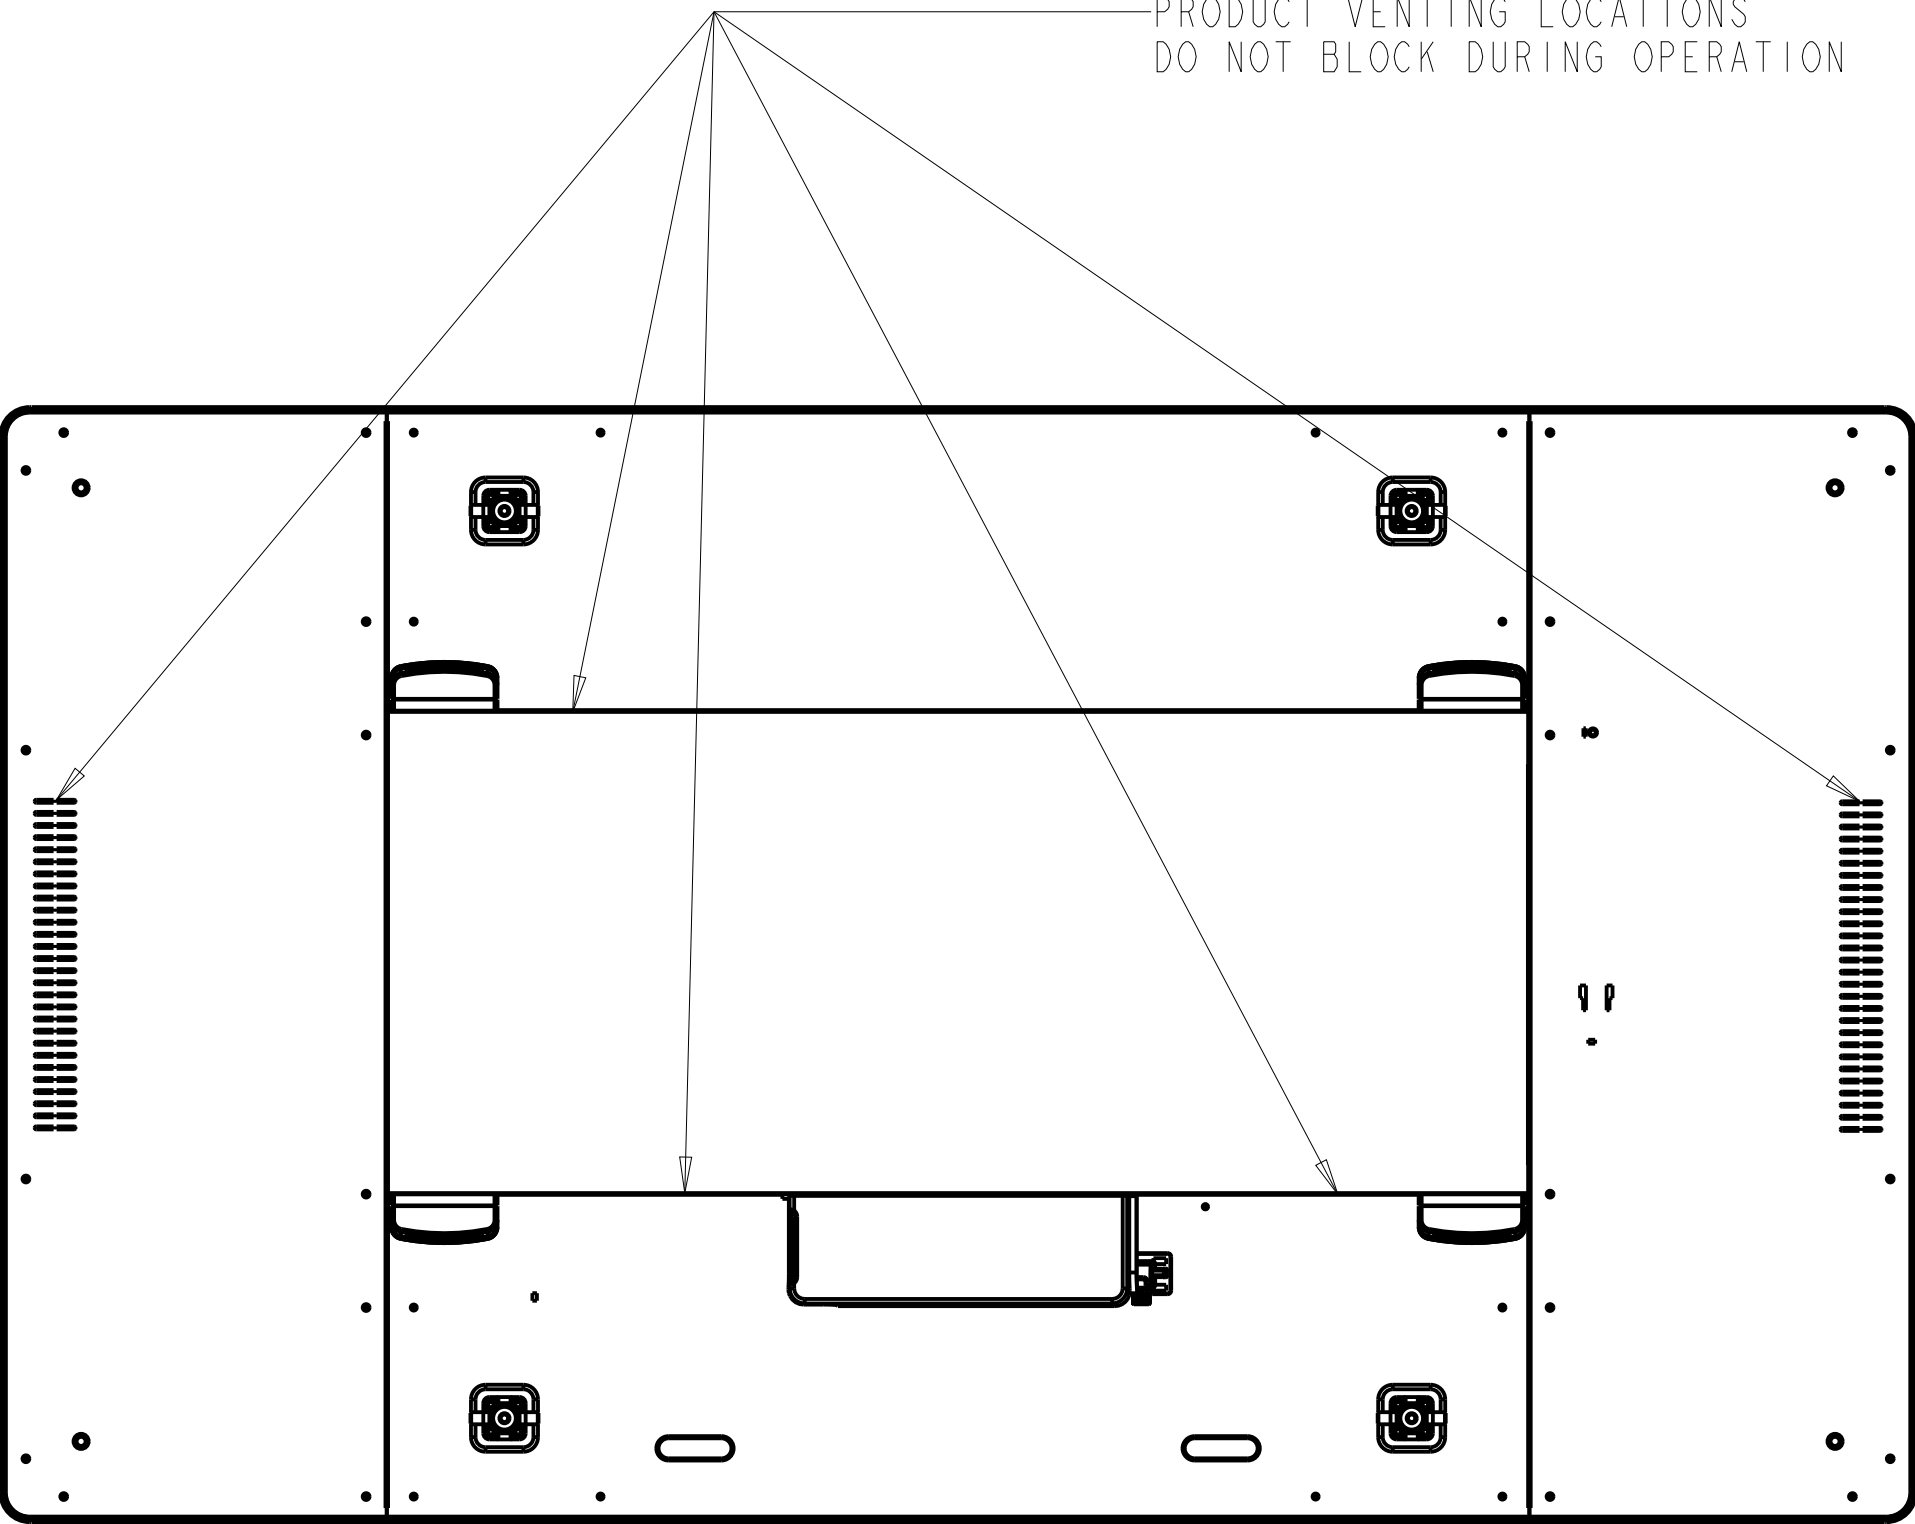




 
THERMAL RECOMMENDATIONS
TABLE-TOP ORIENTATION

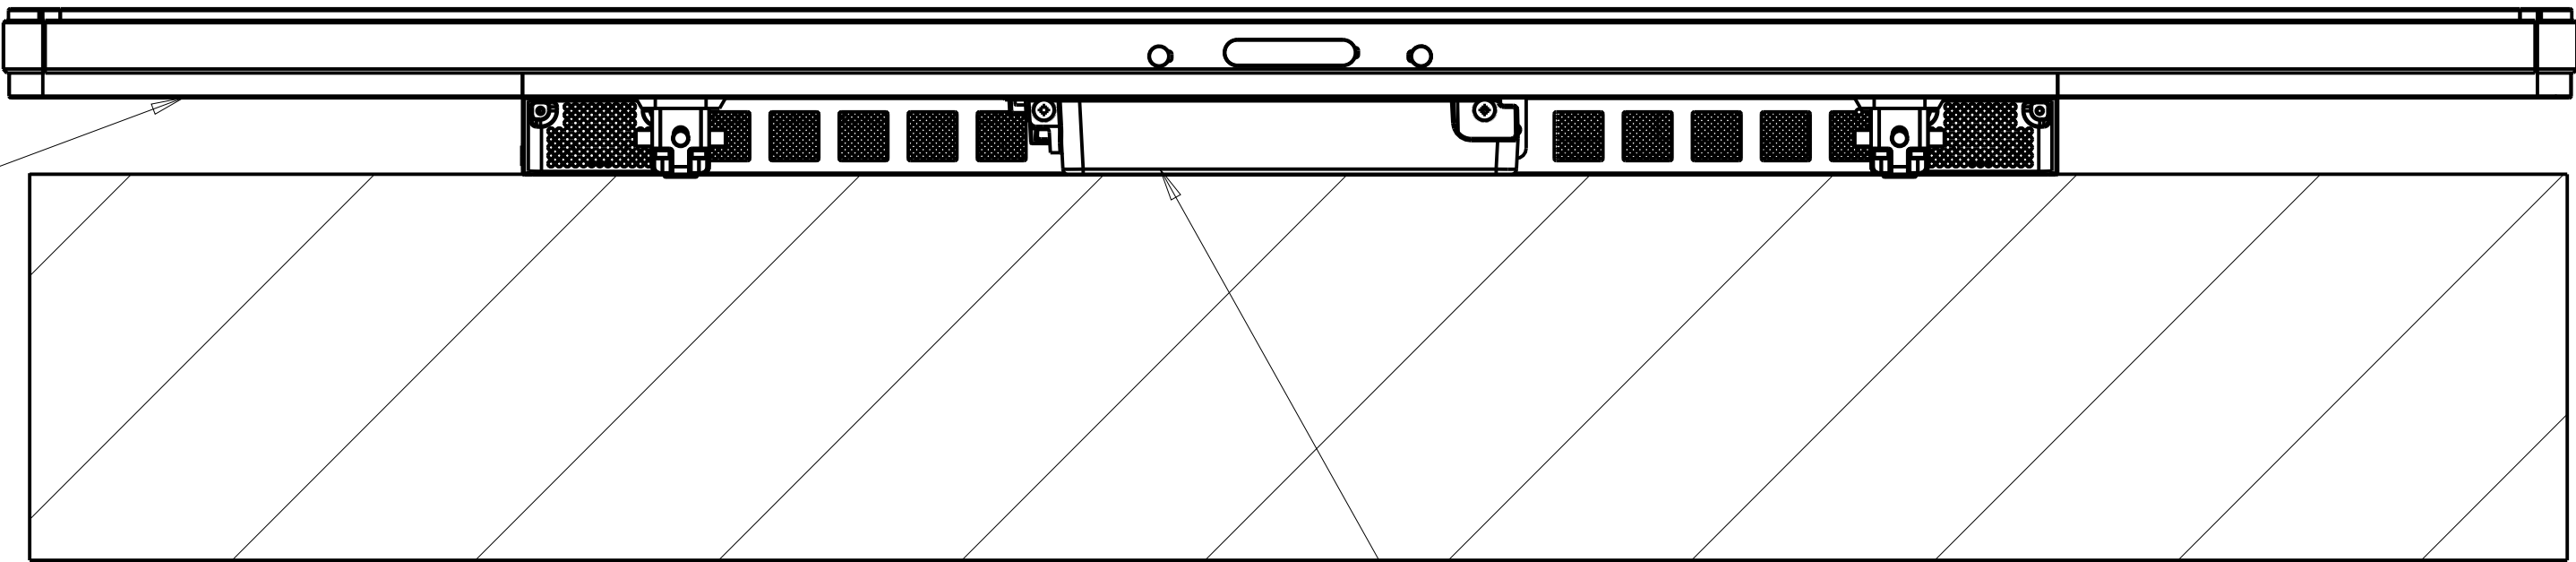


PRODUCT VENTING ALL AROUND MONITOR
MUST BE KEPT OPEN DURING OPERATION
TO MAINTAIN SAFE OPERATING TEMPERATURE

WHEN MOUNTED IN TABLE-TOP ORIENTATION, DO NOT ALLOW
AIR TEMPERATURE BELOW MONITOR TO EXCEED OPERATING TEMPERATURE SPECIFICATIONS.
RECOMMENDATION: INSTALL AIR CIRCULATION DEVICES ABLE TO MONITOR AND CONTROL
AIRSPACE TEMPERATURE UNDER THE TOUCHMONITOR SO IT WILL COMPLY WITH
OPERATING TEMPERATURE SPECIFICATIONS

OPTIONAL WALLMOUNT KIT
P/N E000802

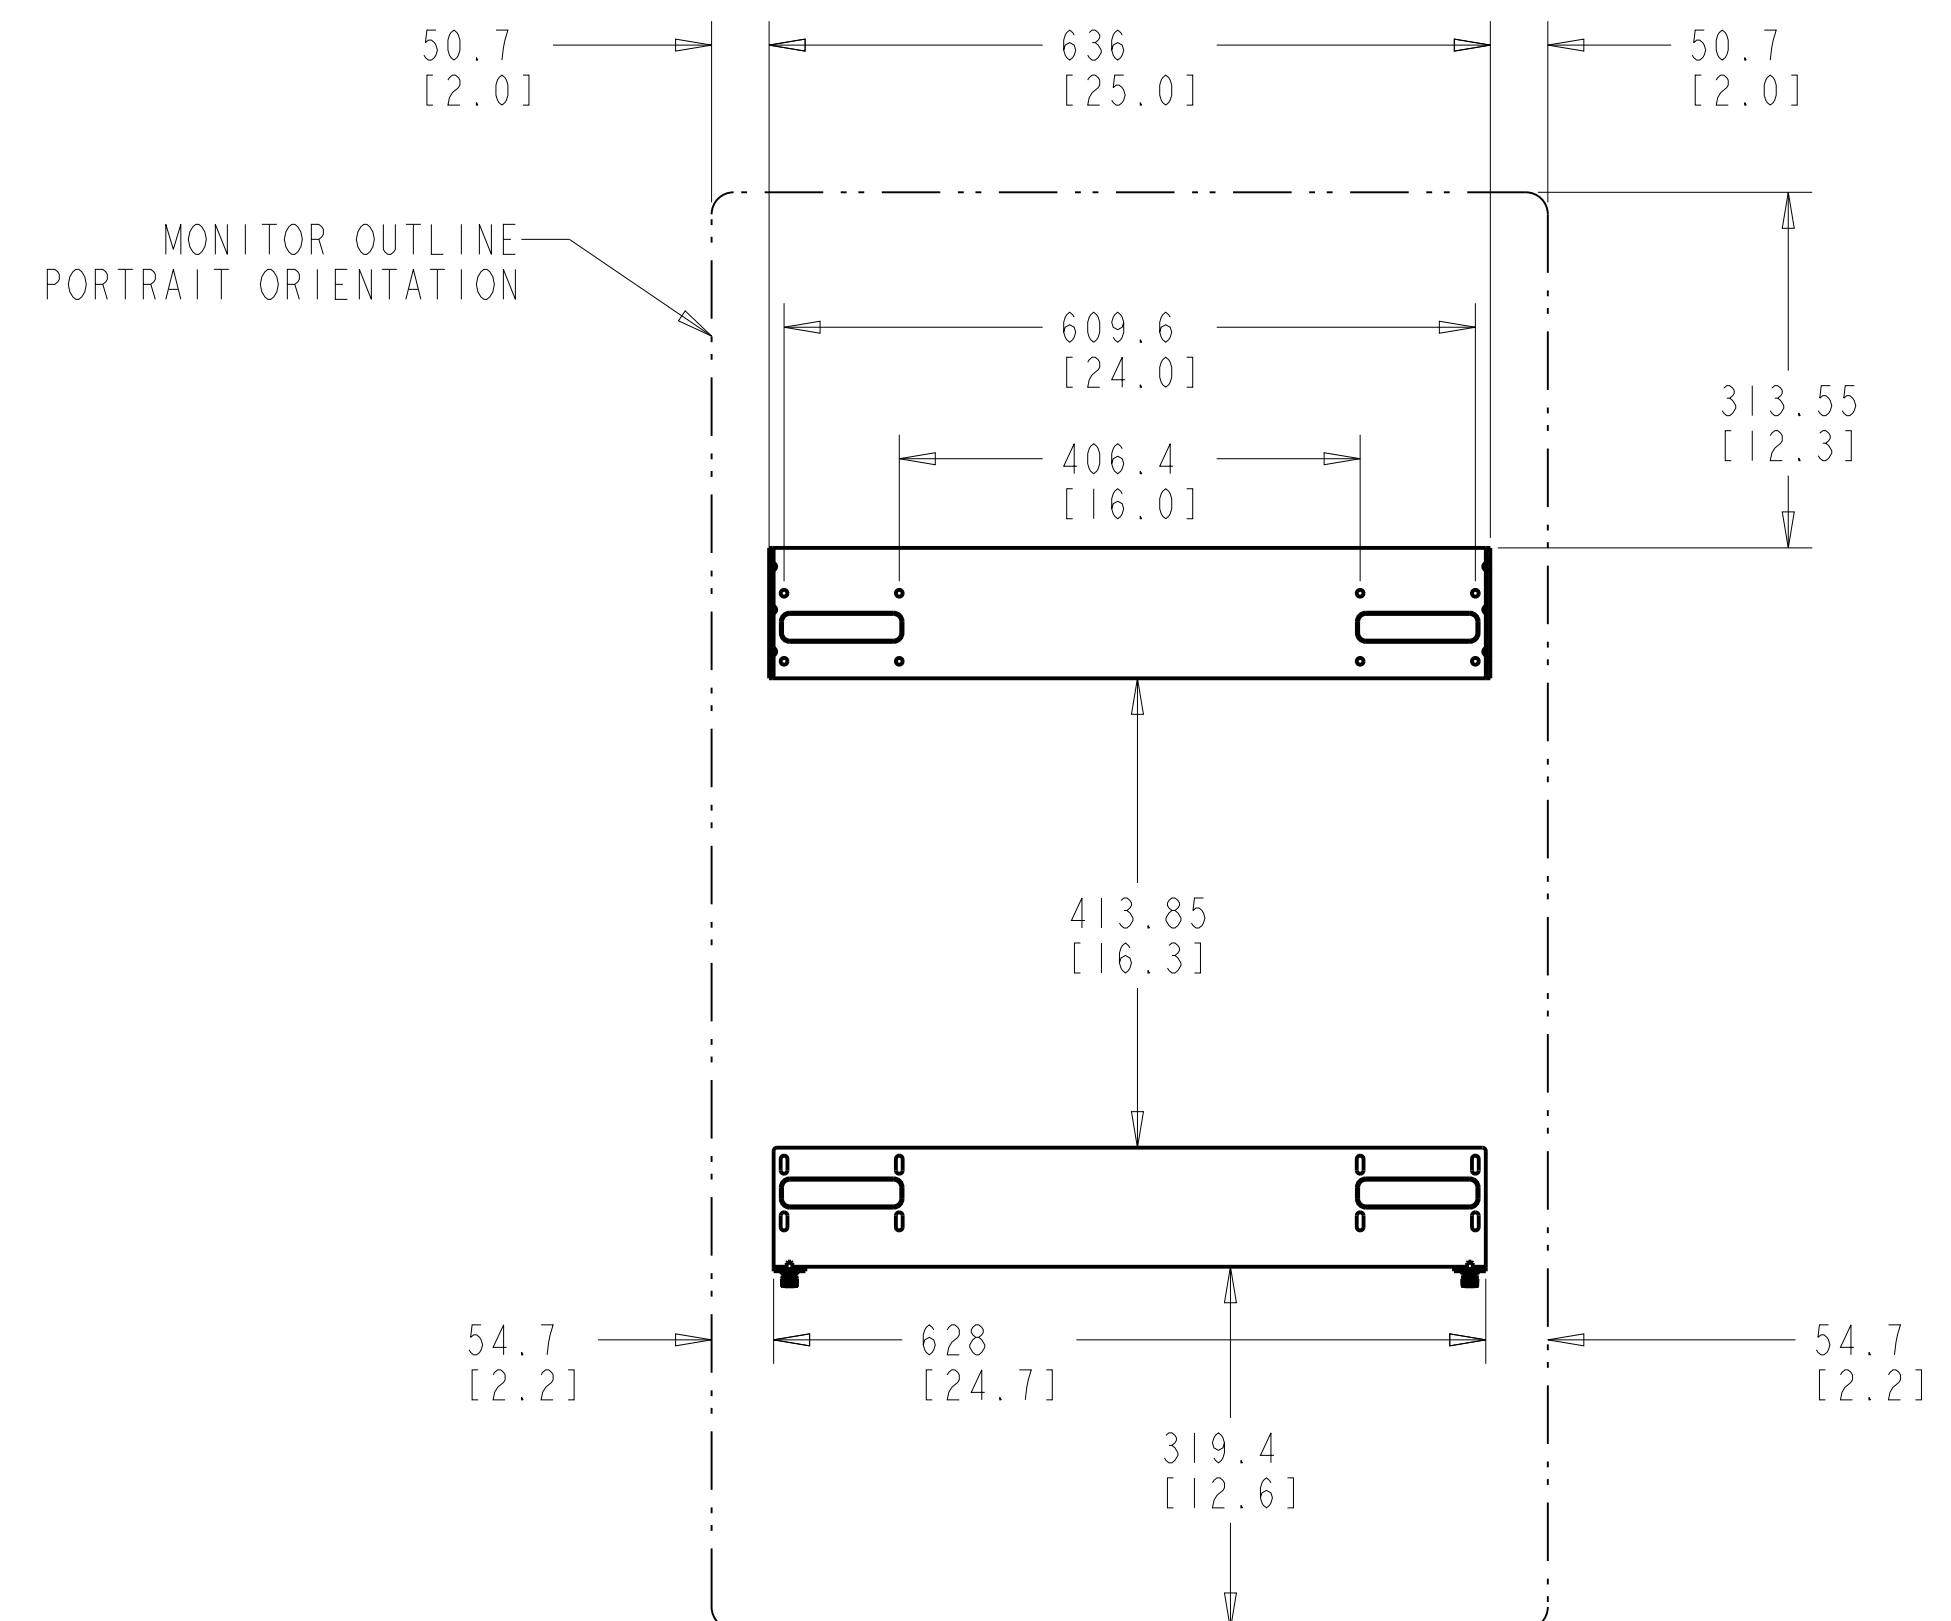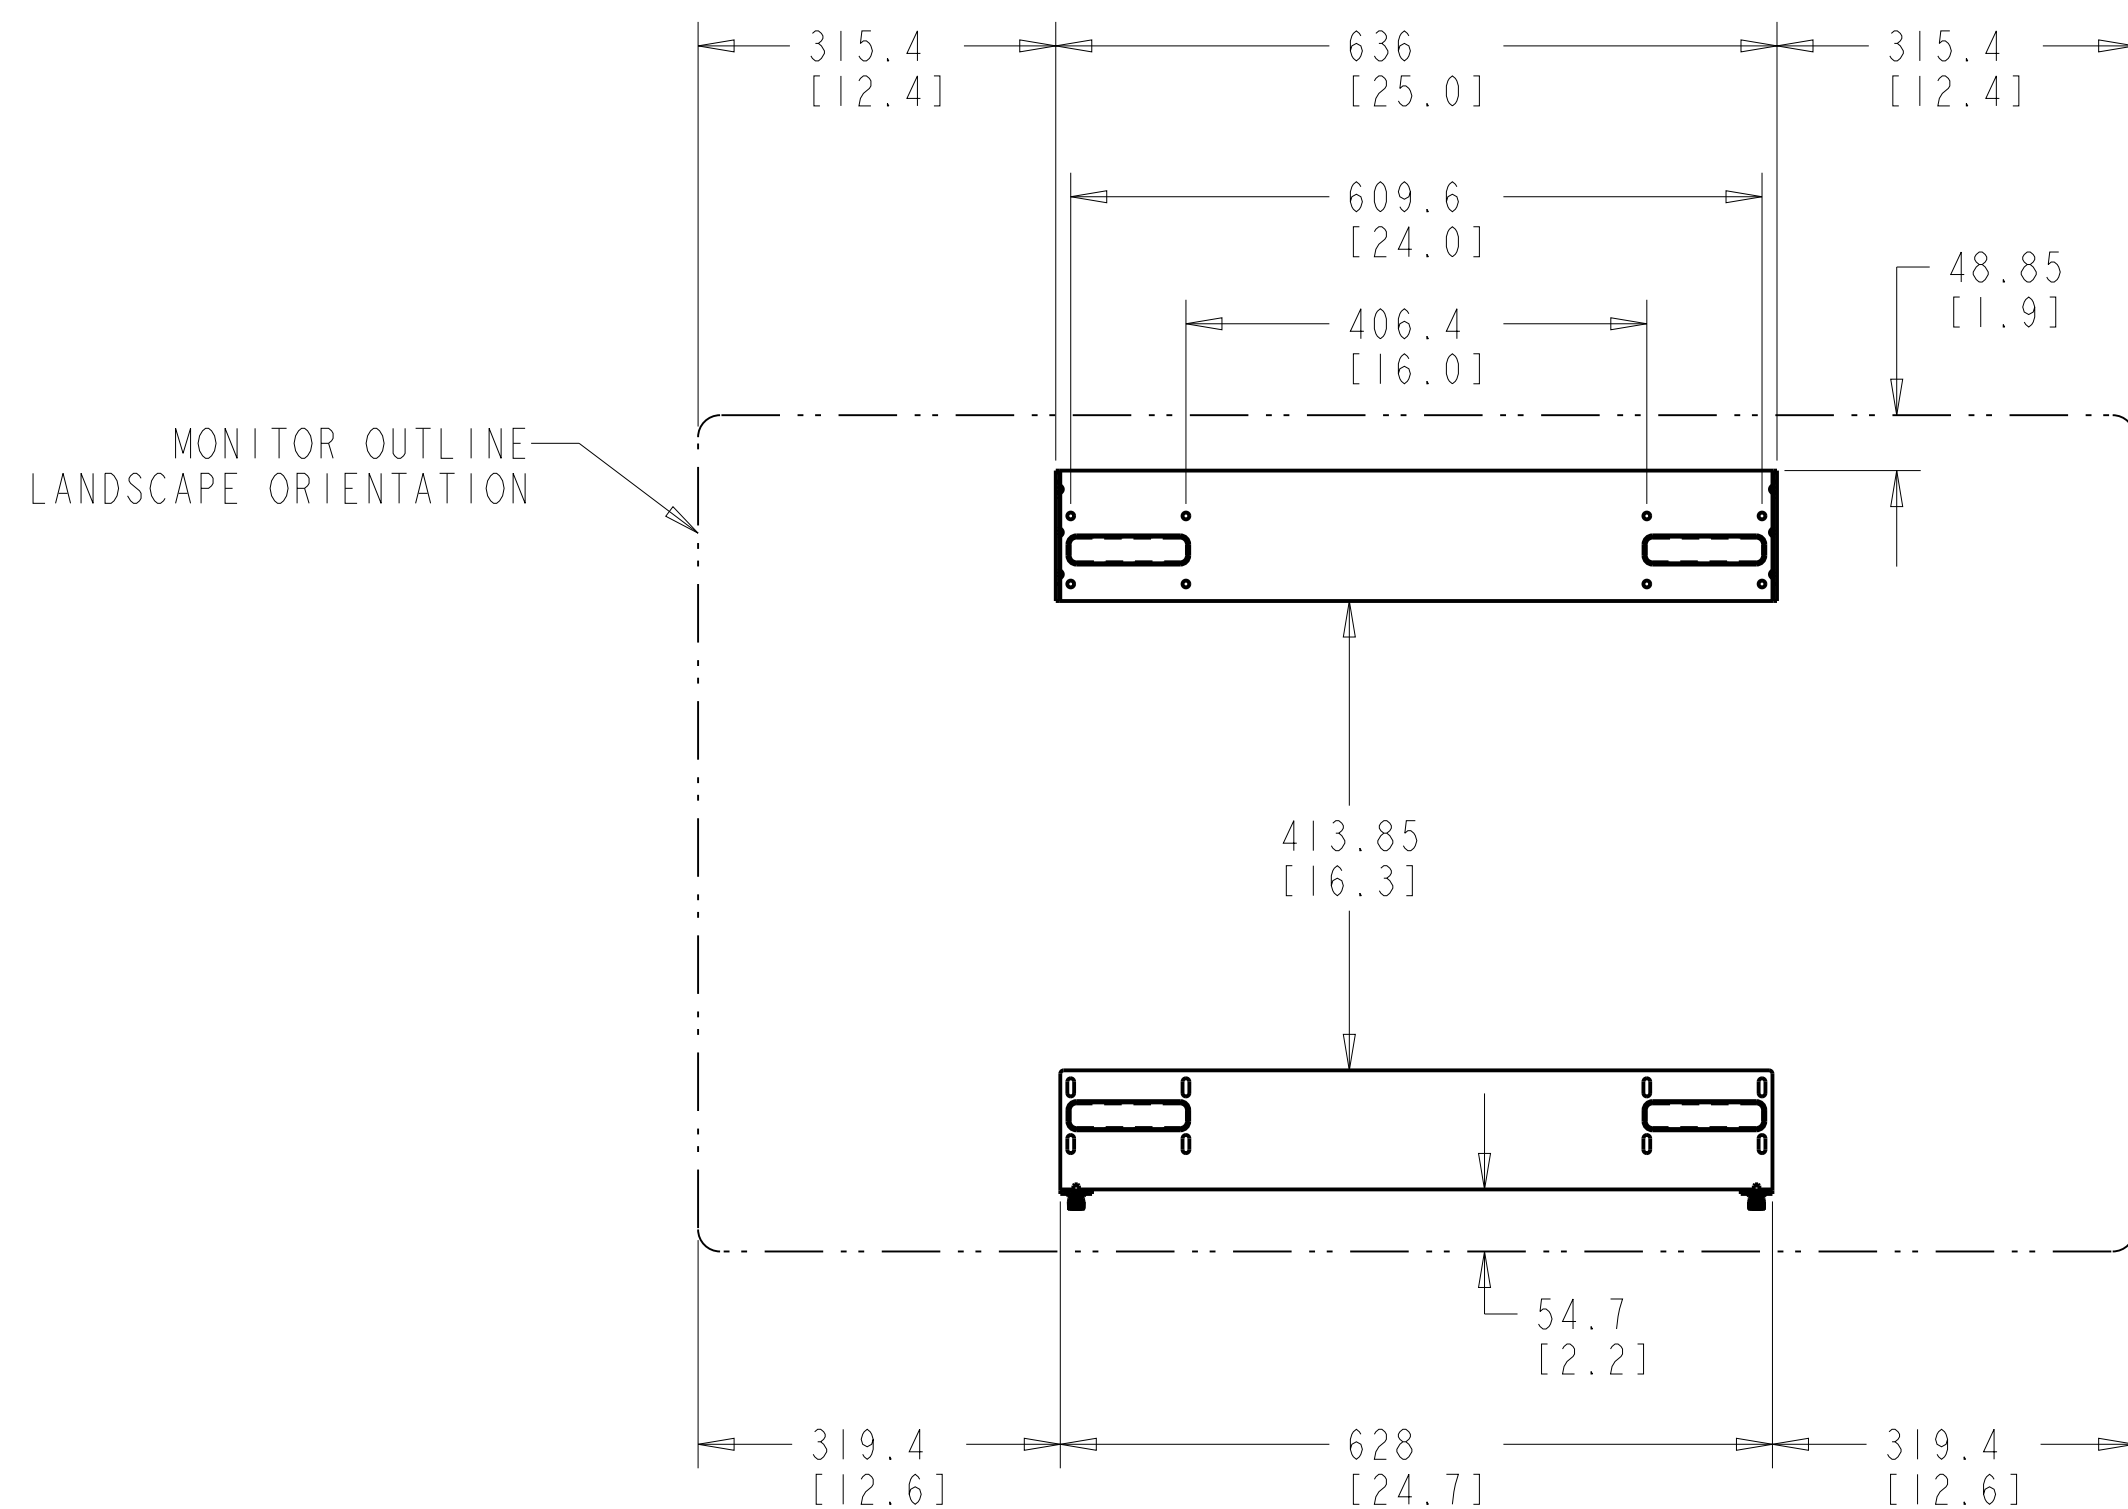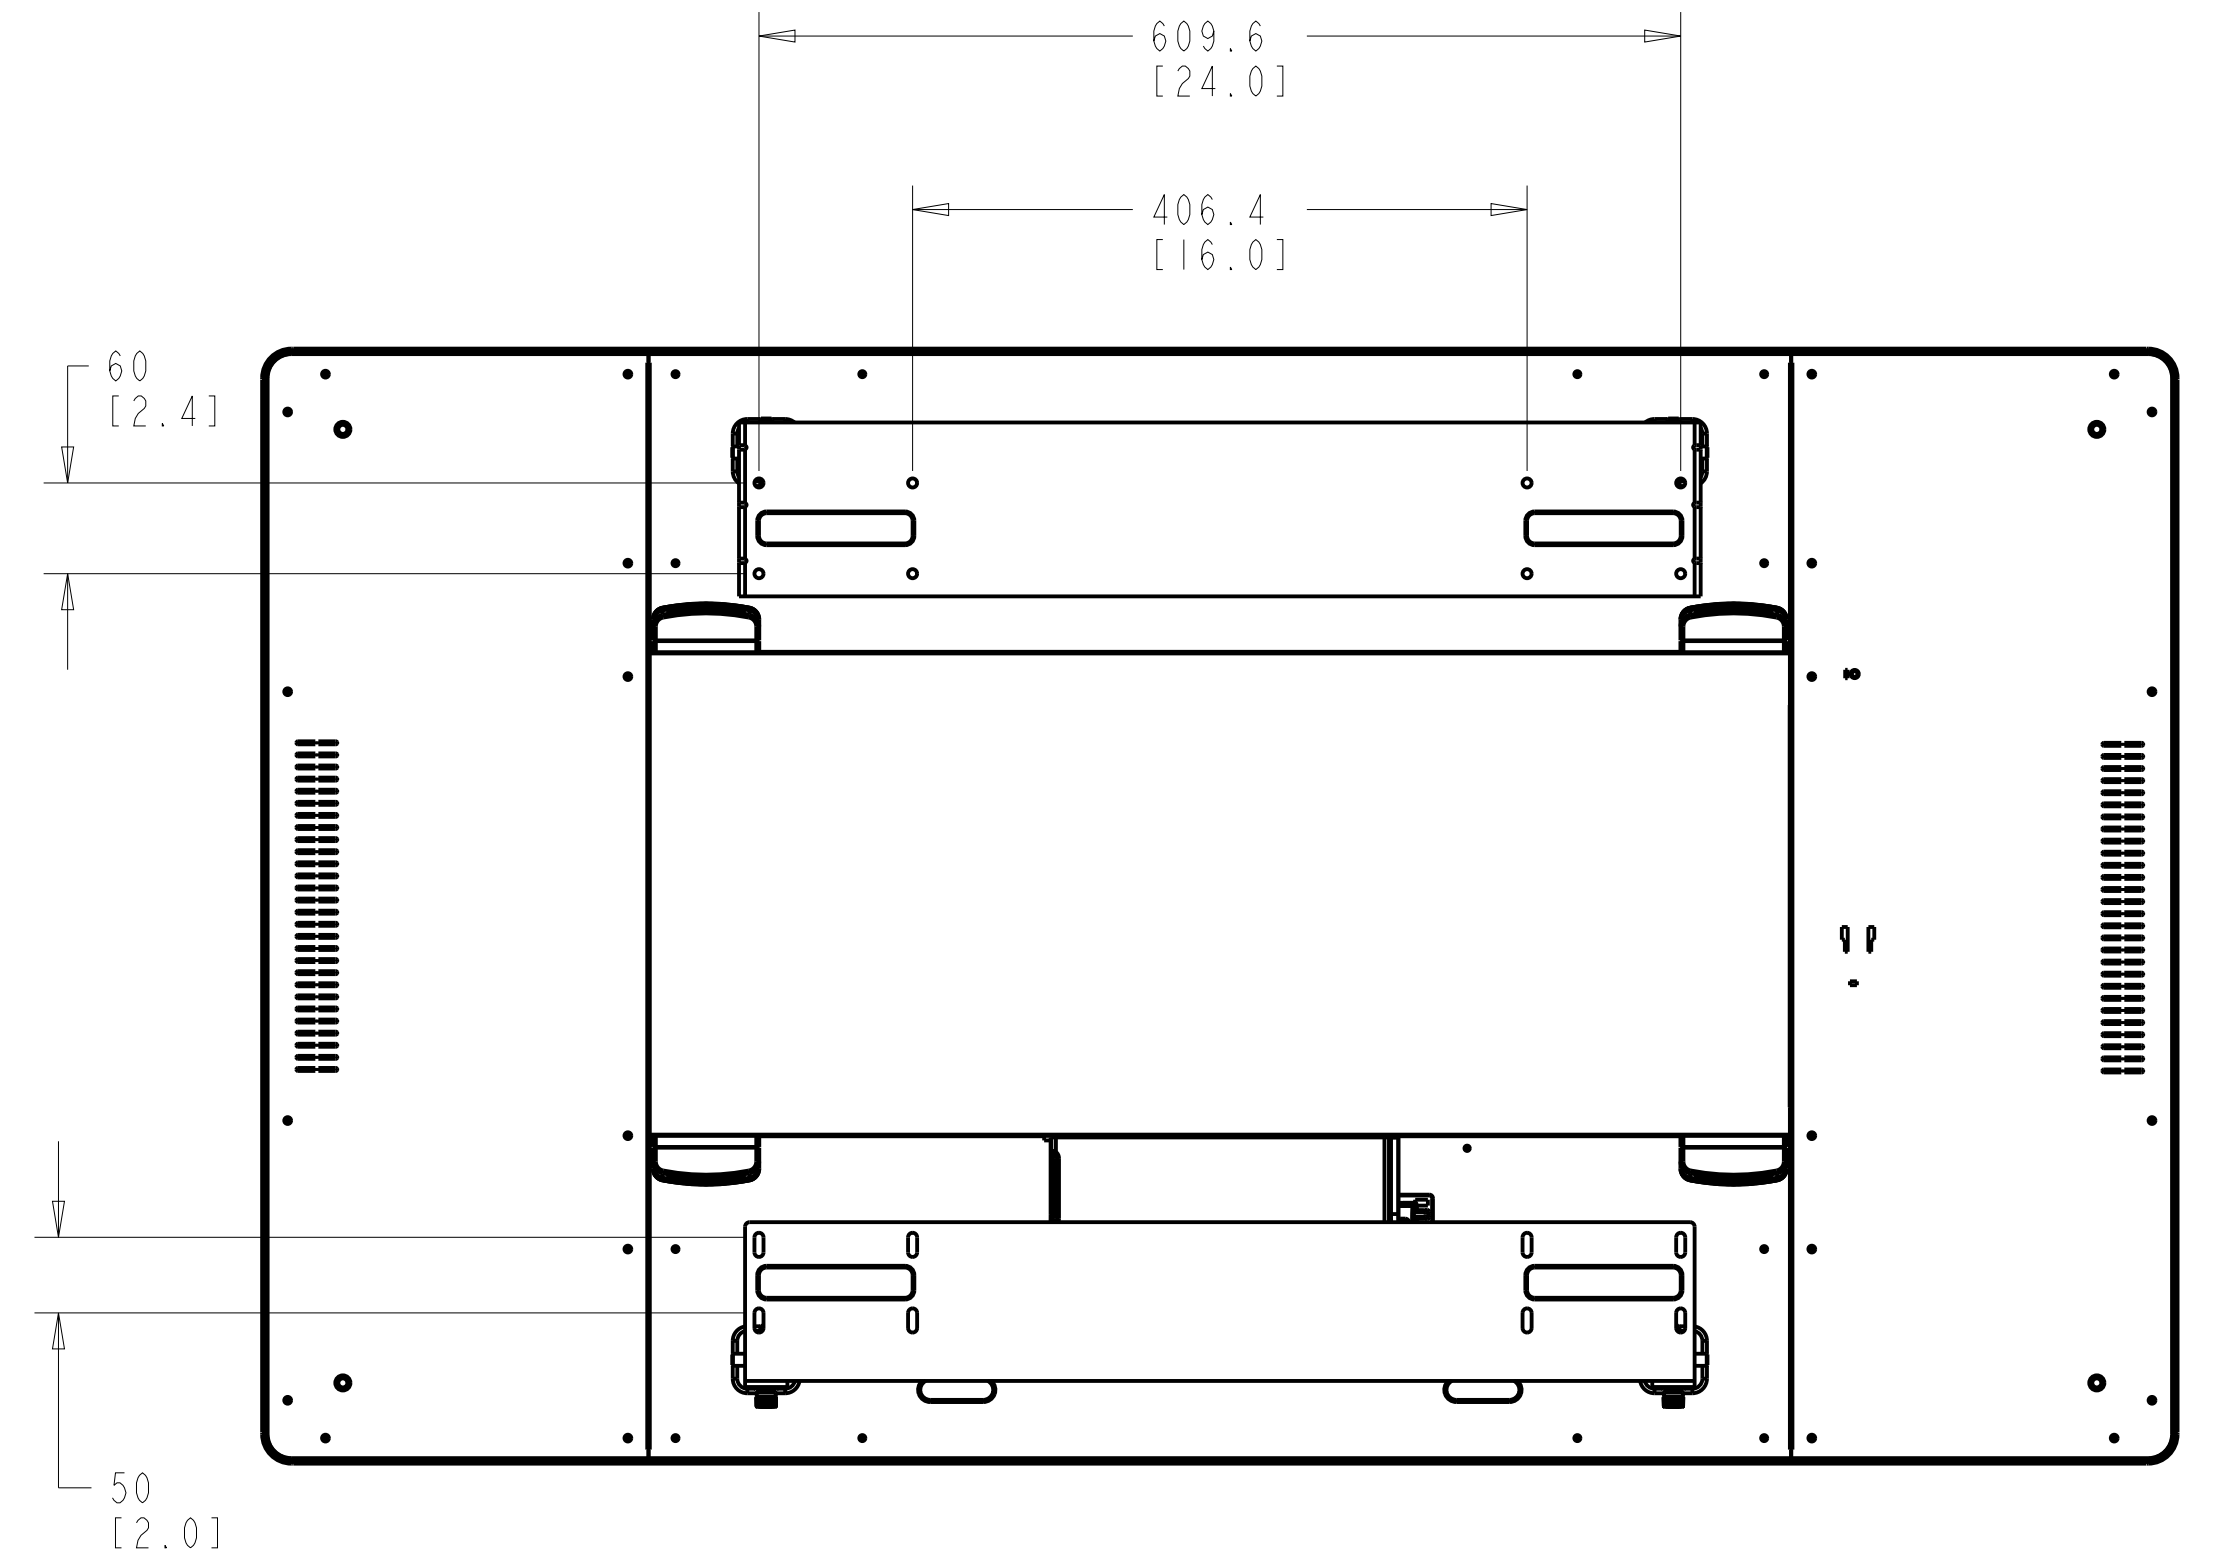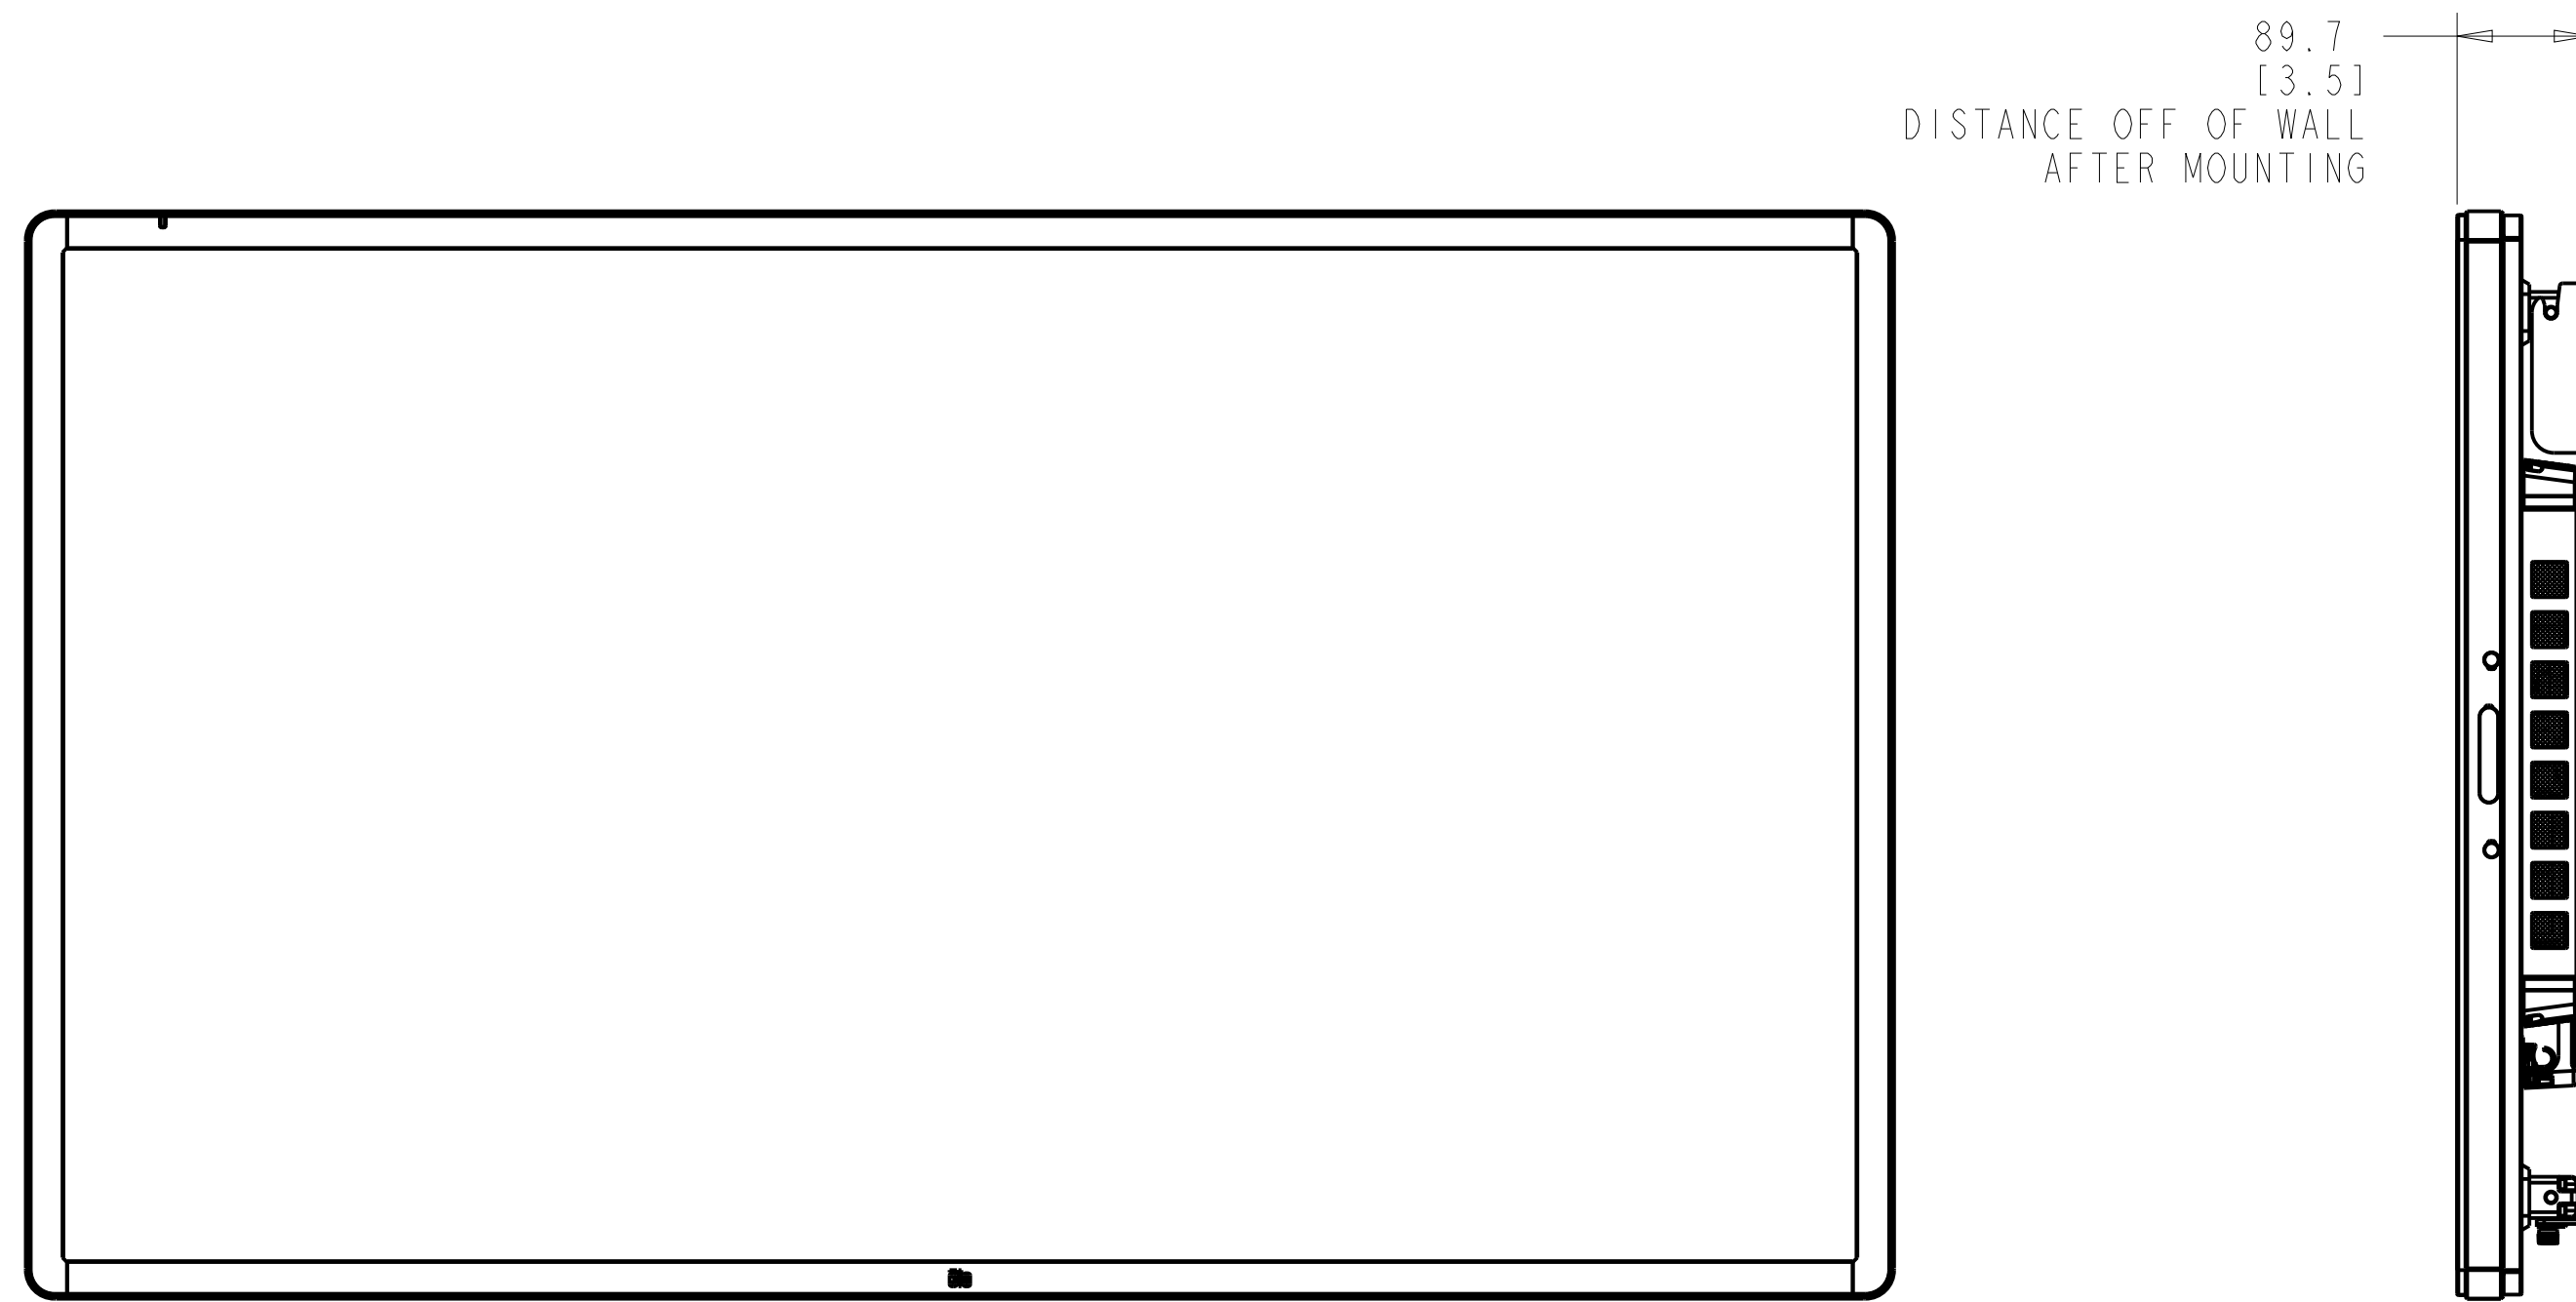


OPTIONAL RFID KIT P/N E031451

 

ANTENNA LOCATION

633.4
[24.9]
RECOMMENDED PLACEMENT ON BOTTOM SIDE

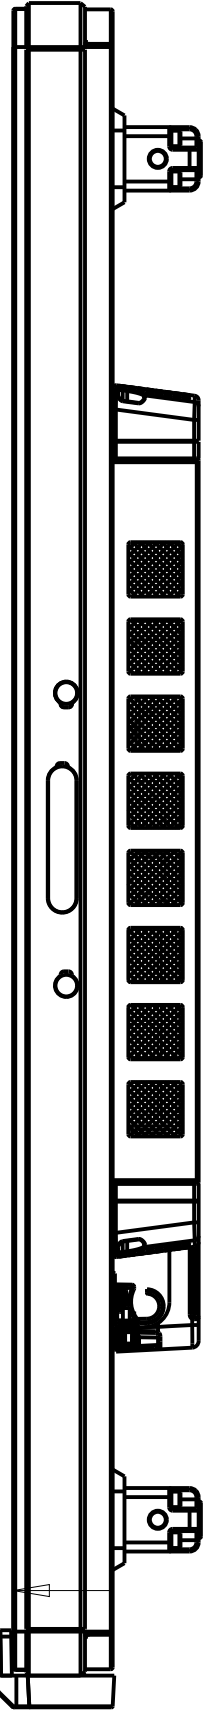

7.78
[.3]
DISTANCE ABOVE BEZEL