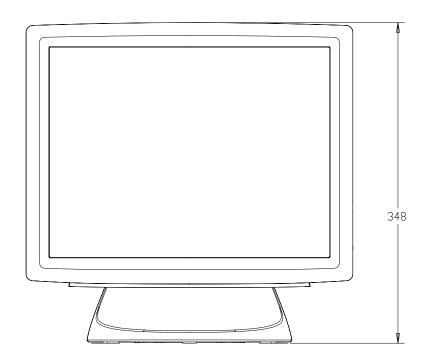
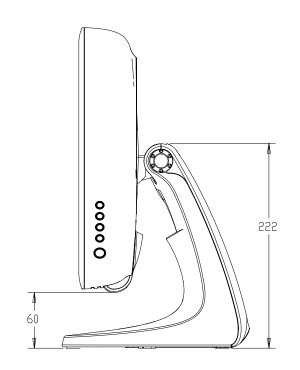
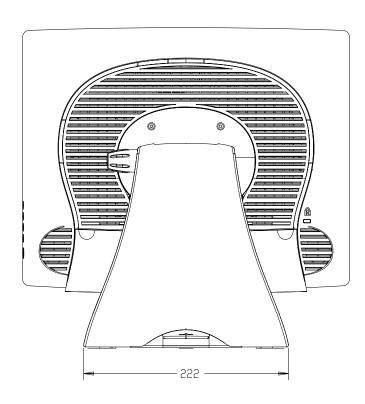


TILT: -5° FROM VERT.


TILT: 90° FROM VERT.









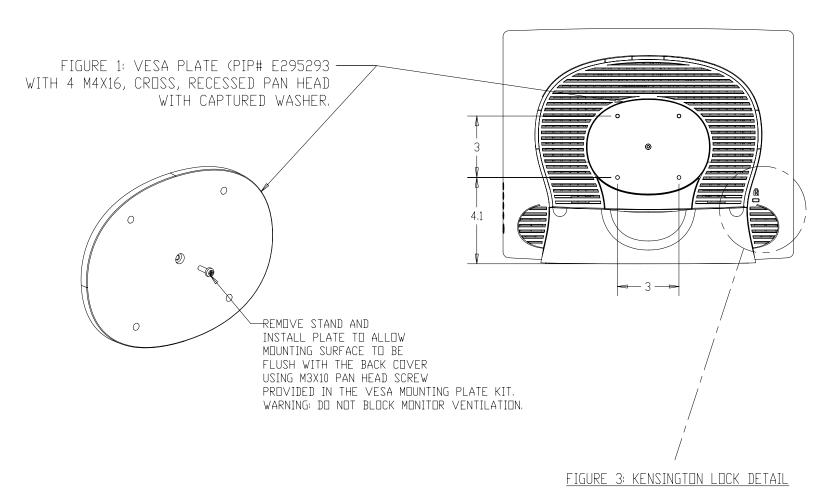



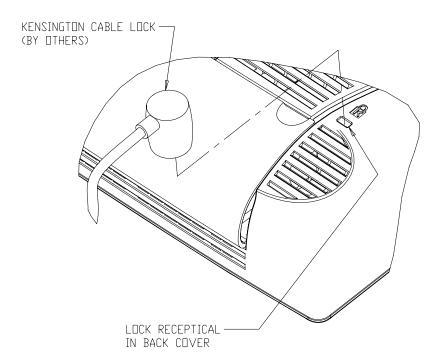



FIGURE 2: CONNECTIONS



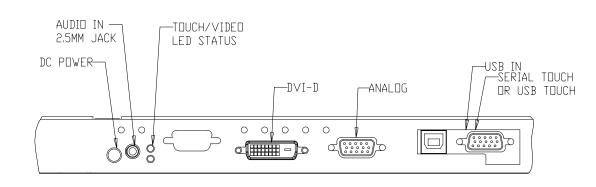

TITLE: ET1528L

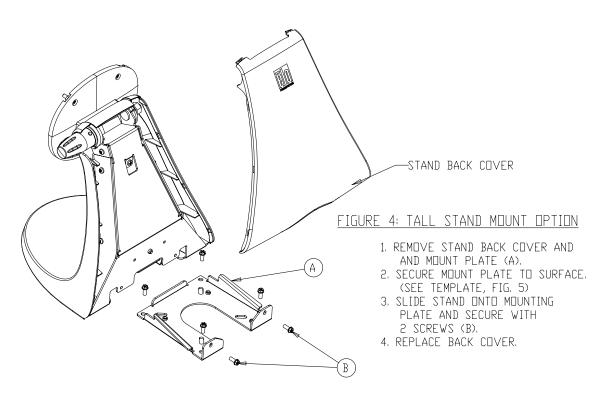


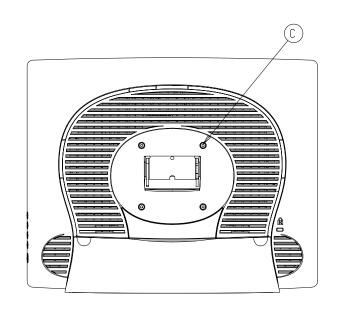

MOUNTING TO A WALL:

- 1. REMOVE THE FOUR SCREWS (C) IN ORDER TO SEPARATE THE STAND FROM THE MONITOR.
- 2. ROTATE THE MONITOR 180° (SO MONITOR WILL NOT BE UPSIDE DOWN WHEN MOUNTED IN THE POSITION SHOWN).
- 3. REINSTALL THE FOUR SCREWS (C).
- 4. ROUTE CABLES THROUGH CUTOUT (IF APPLICABLE) AND MOUNT MONITOR TO WALL USING THE TEMPLATES PROVIDED.

FIGURE 5: TALL STAND MOUNT TEMPLATE

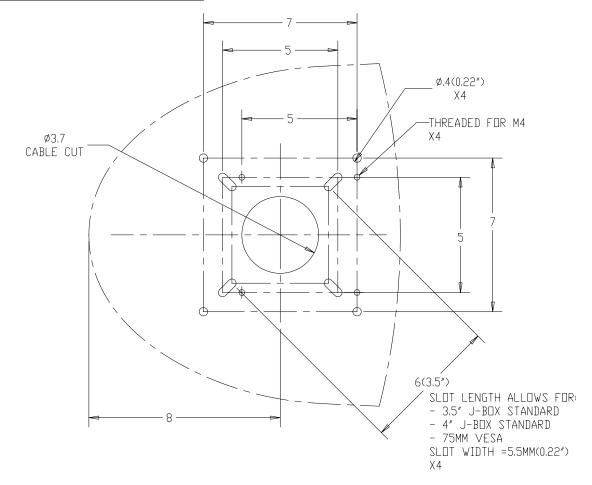

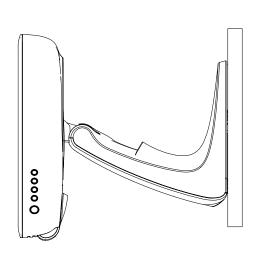


FIGURE 6: TALL STAND WALL MOUNT
SEE FIG. 4 AND TEMPLATE FIG.5
FOR FRONT MOUNT OPTION.
SEE TEMPLATE FIG.5 FOR REAR MOUNT OPTION.

00000

