 
 
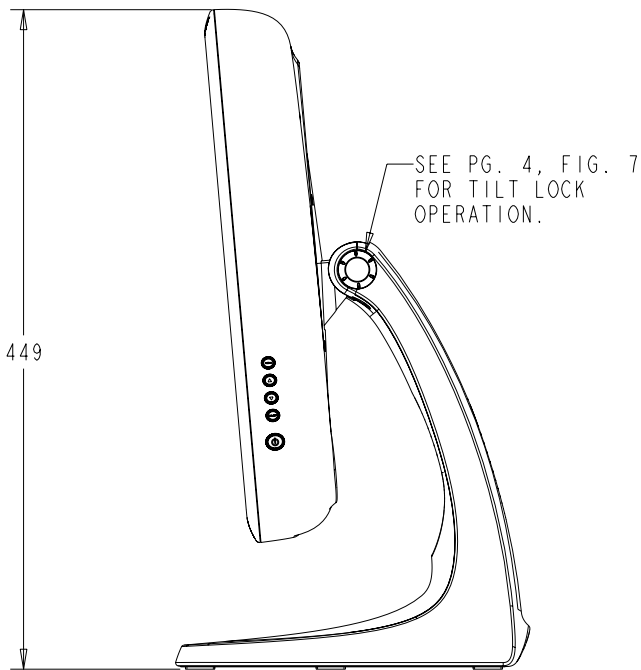 


19" LCD DESKTOP MONITOR, 3000 SERIES

 
 
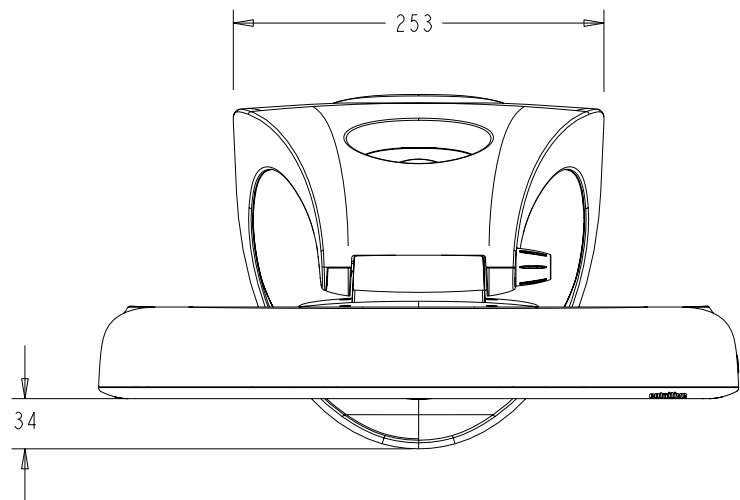 


FORWARD TILT - 5° FROM VERTICAL

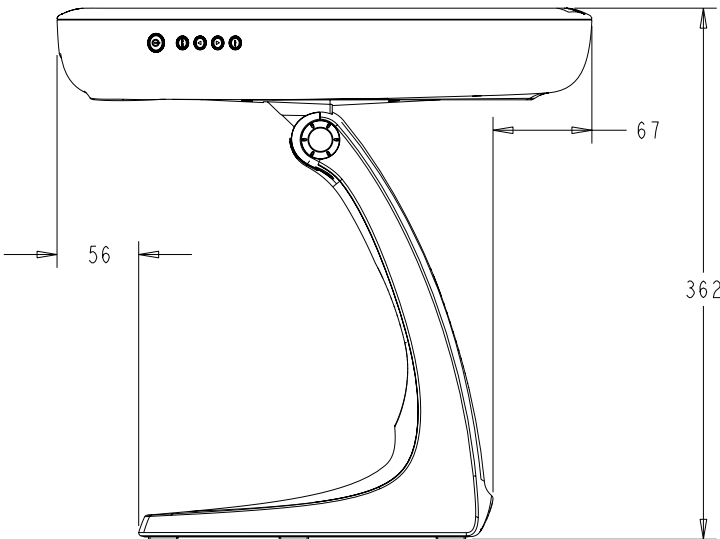

AFT TILT - 90° FROM VERTICAL

PART NUMBER TABULATION	
PIP NUMBER	PIP DESCRIPTION
E64286-000	ET1925L-0NWA-I
D44146-000	ET1925L-7SWA-I
A65490-000	ET1925L-7UWA-I
E03485-000	ET1925L-8SWA-I
D34183-000	ET1925L-8UWA-I
D72968-000	ET1927L-0NWA-I
E15667-000	ET1927L-7SWA-I
E41974-000	ET1927L-7UWA-I
D85248-000	ET1927L-8SWA-I
E99941-000	ET1927L-8UWA-I

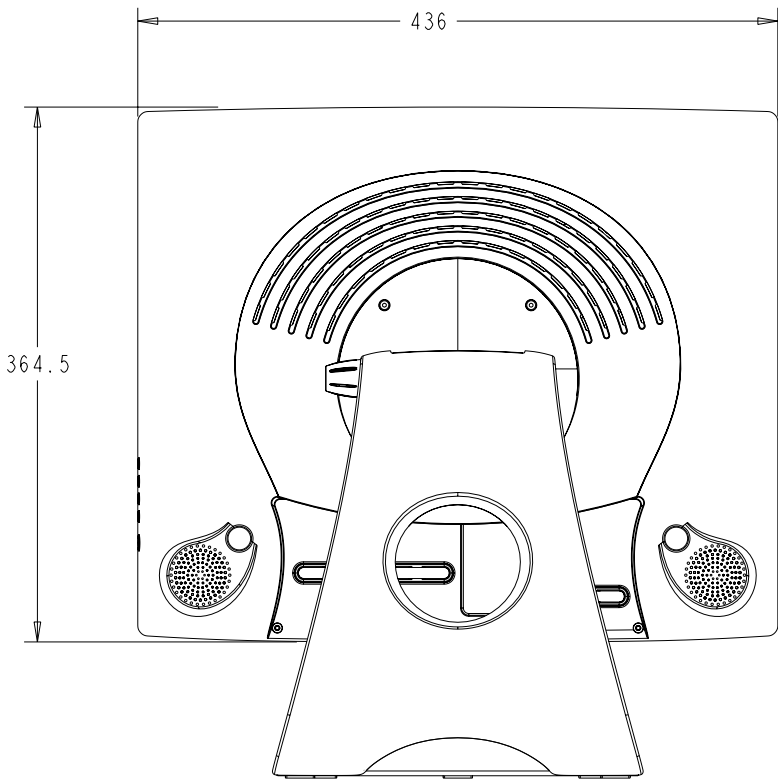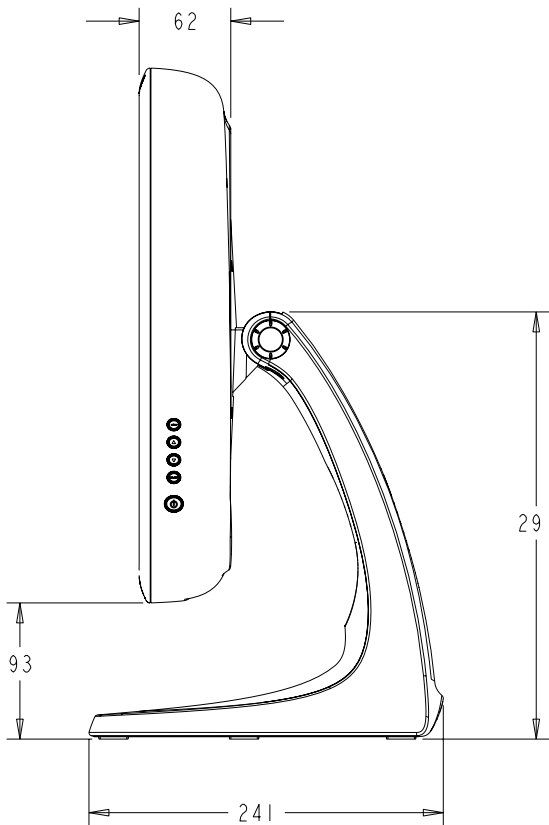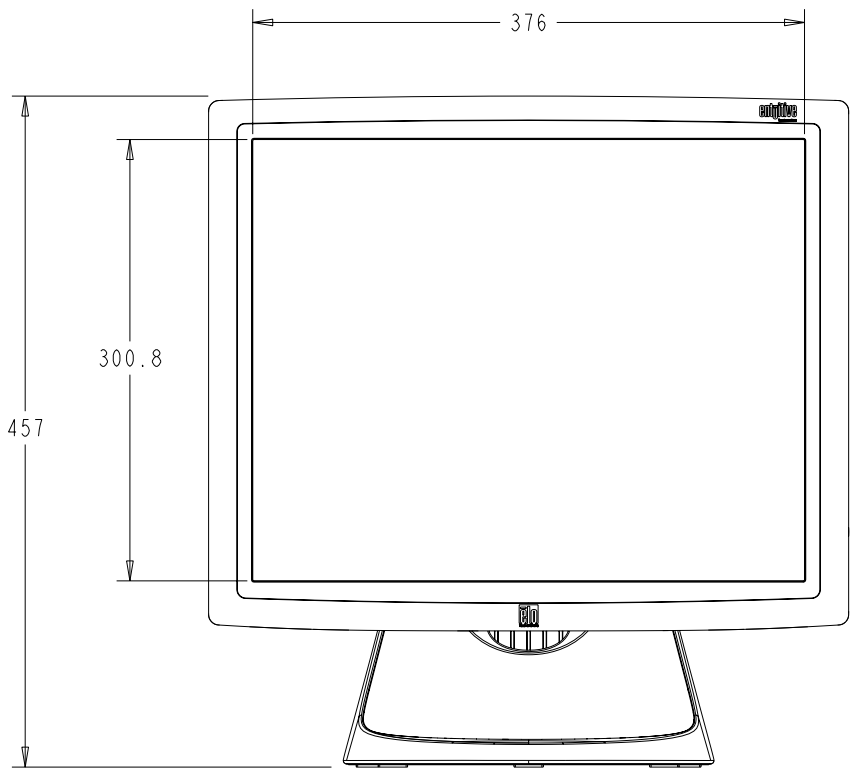

DIMENSIONS ARE IN MILLIMETERS

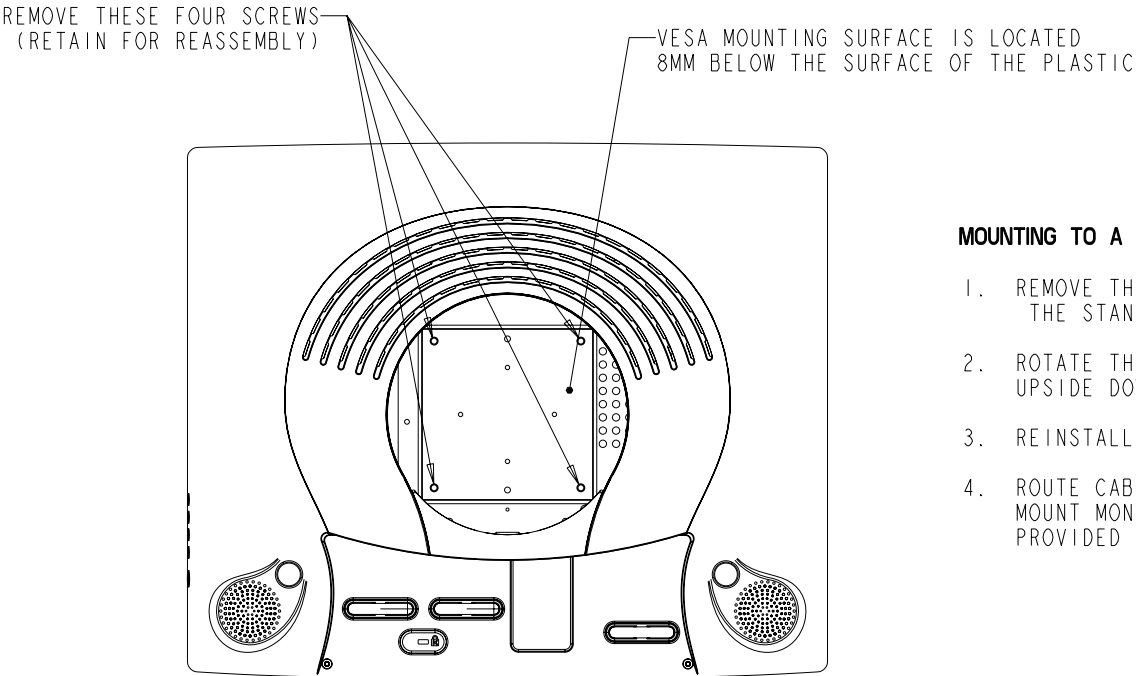 


FIGURE 1: STAND AND DISPLAY SEPARATION
(BASE REMOVED FOR EASE OF VIEW)

MOUNTING TO A WALL:

1. REMOVE THE FOUR SCREWS IN ORDER TO SEPARATE THE STAND FROM THE MONITOR (SEE FIGURE 1).
2. ROTATE THE MONITOR 180° (SO MONITOR WILL NOT BE UPSIDE DOWN WHEN MOUNTED IN THE POSITION SHOWN).
3. REINSTALL THE FOUR SCREWS.
4. ROUTE CABLES THROUGH CUTOUT (IF APPLICABLE) AND MOUNT MONITOR TO WALL USING THE TEMPLATE PROVIDED IN FIGURE 2.

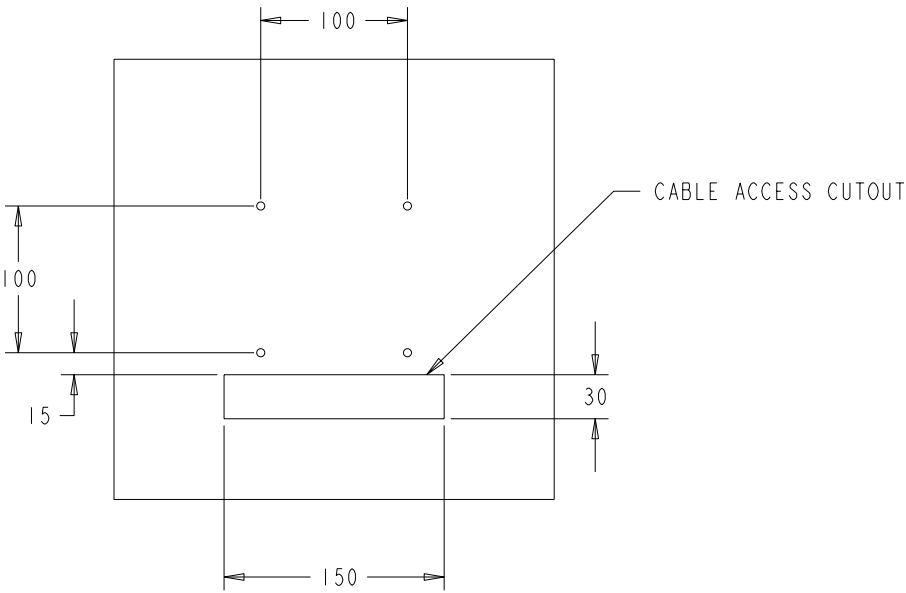 


FIGURE 2: REAR MOUNT TEMPLATE

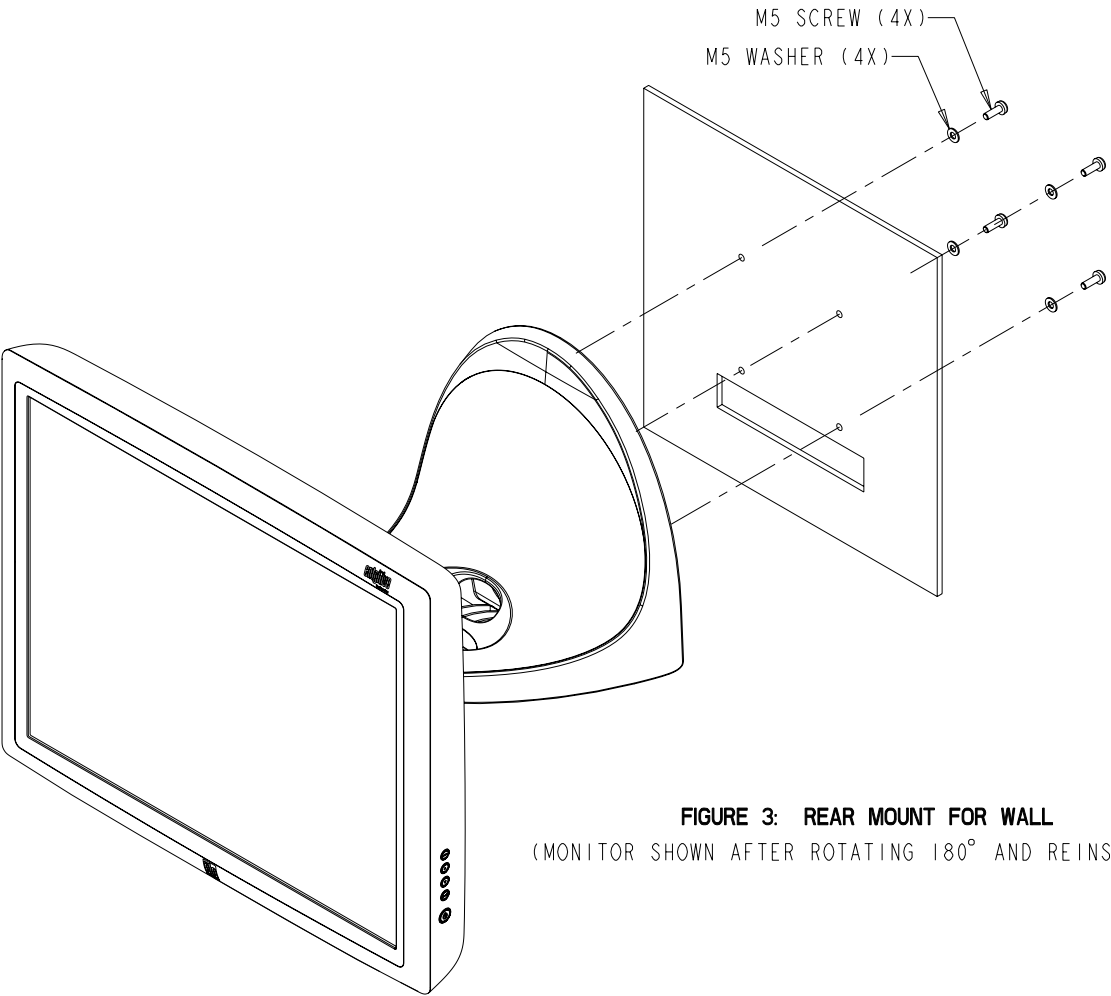 


FIGURE 3: REAR MOUNT FOR WALL
(MONITOR SHOWN AFTER ROTATING 180° AND REINSTALLING)

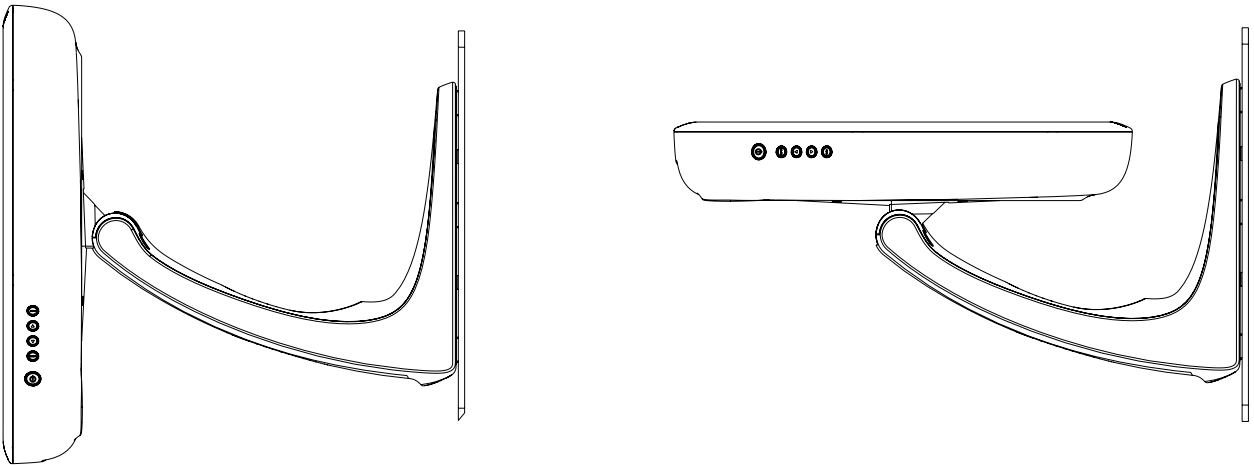 


FIGURE 4: TILT FOR WALL MOUNT
TILT RANGE = 95°

MOUNTING OPTION 2 - FRONT MOUNT:

- 1. REMOVE THE TWO SCREWS HOLDING THE FRONT COVER TO THE STAND (SEE FIGURE 5). RETAIN SCREWS FOR REASSEMBLY.
- 2. ROUTE CABLES THROUGH CUTOUT (IF APPLICABLE) AND MOUNT MONITOR TO HORIZONTAL SURFACE USING THE TEMPLATE PROVIDED IN FIGURE 4.
- 3. REASSEMBLE FRONT COVER.
- 4. SEE OPTION (1) FOR ADDITIONAL STEPS ON WALL MOUNT.

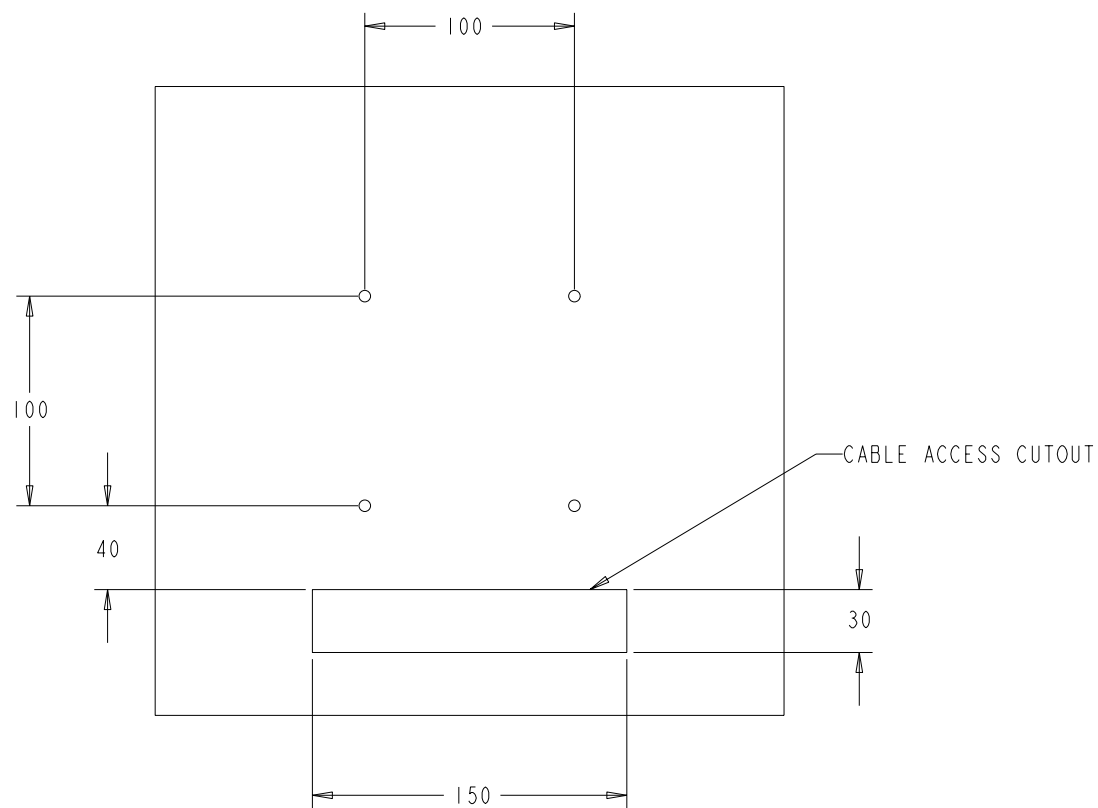 


FIGURE 5: FRONT MOUNT TEMPLATE

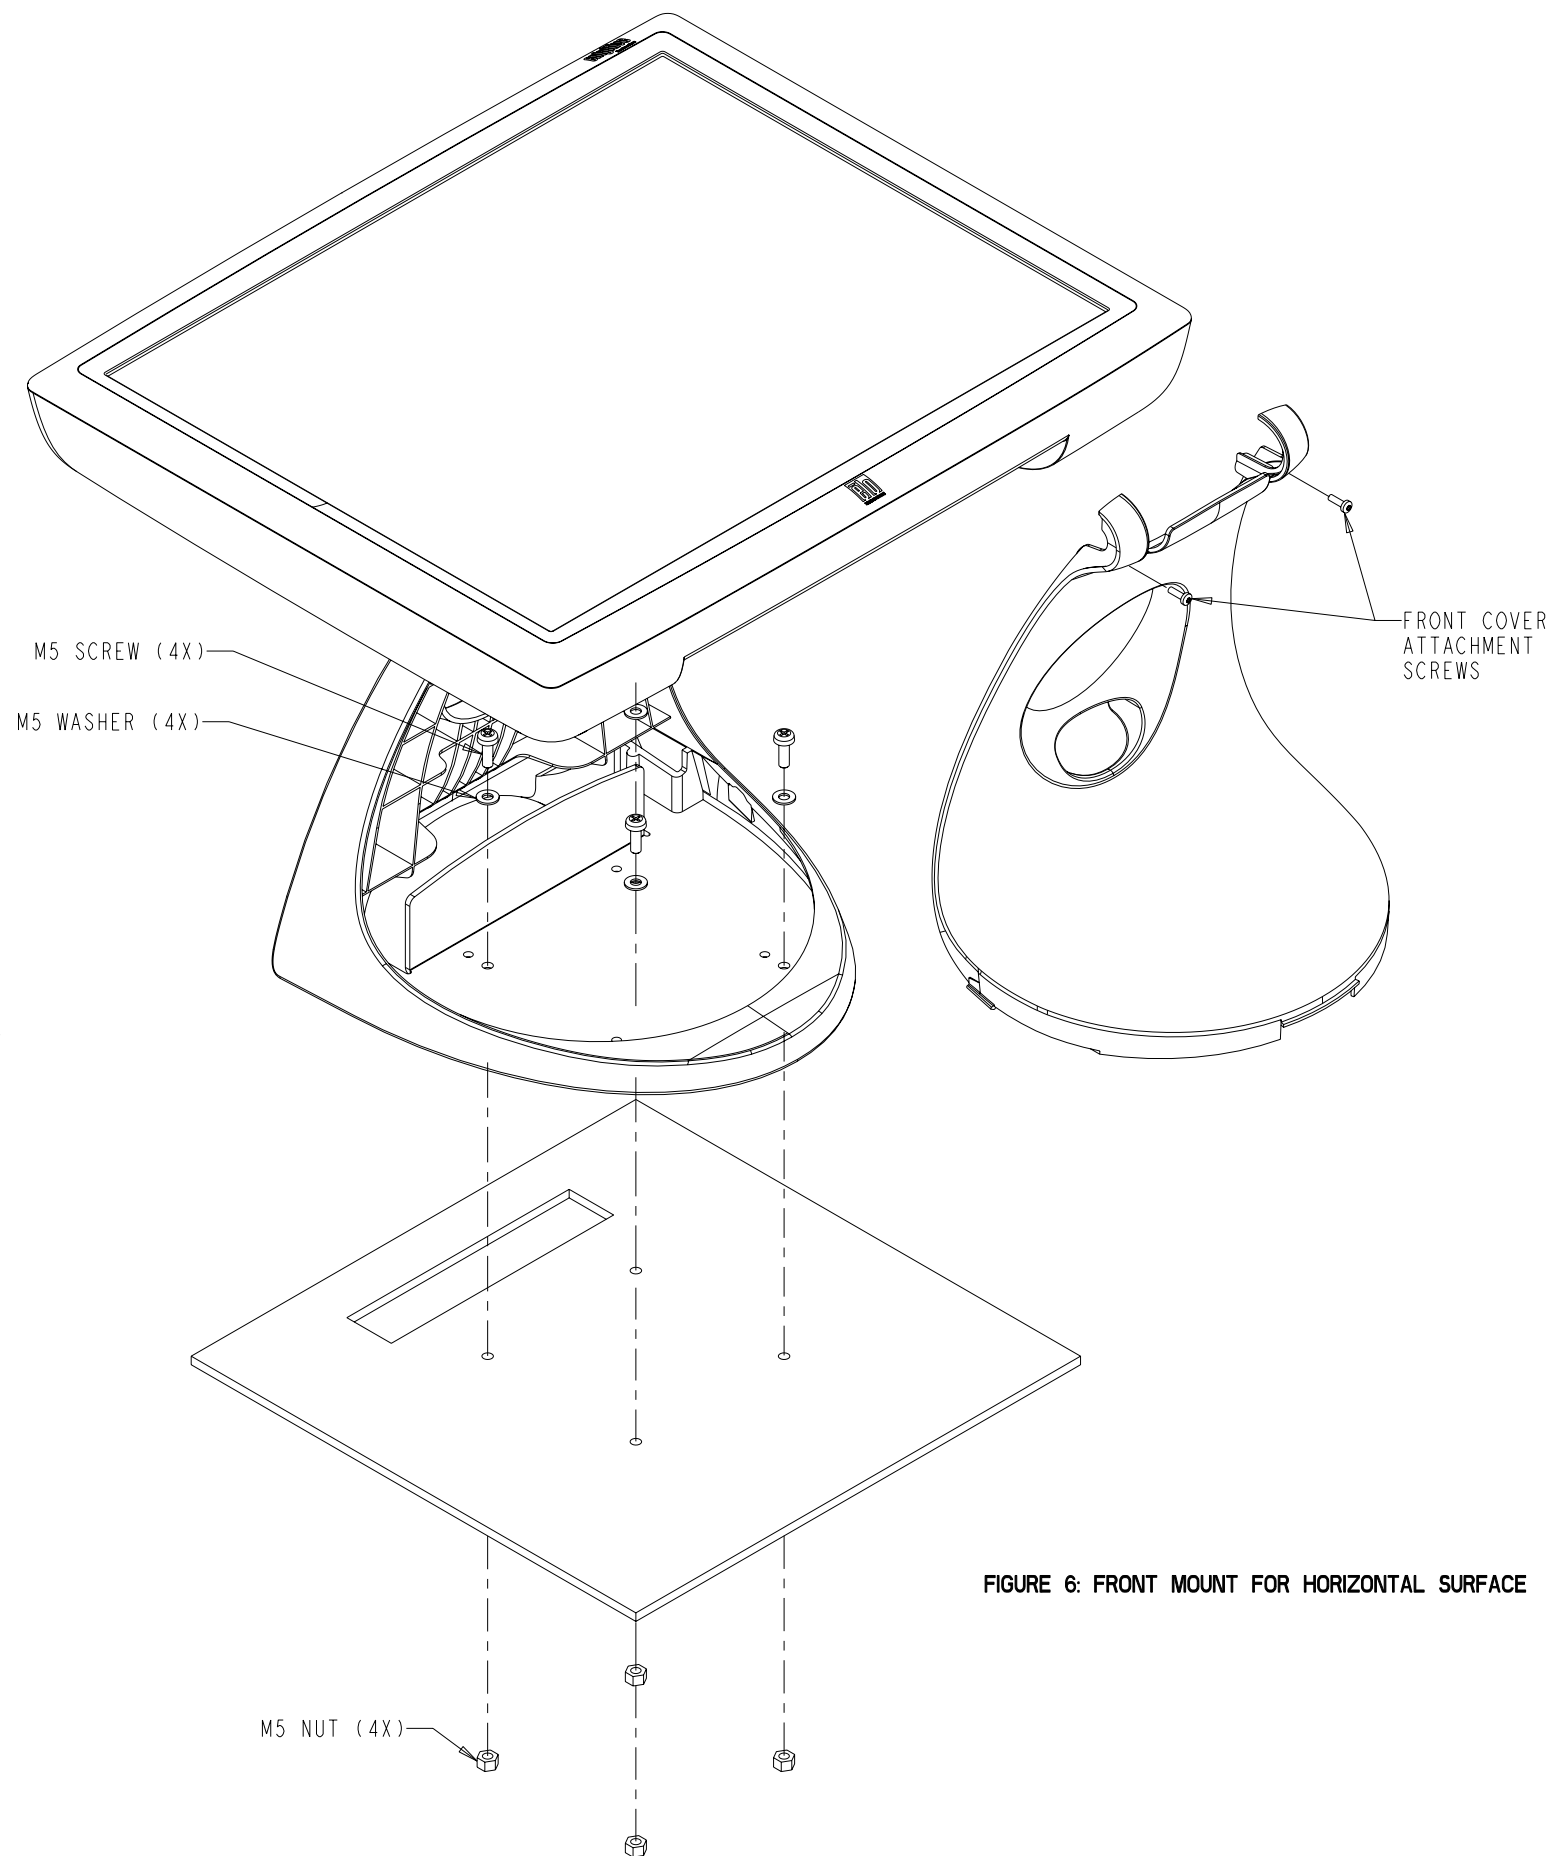 


FIGURE 6: FRONT MOUNT FOR HORIZONTAL SURFACE

FIGURE 8: VERTICAL/PORTRAIT DISPLAY ORIENTATION

SEE "MOUNTING TO A WALL" , PG.2, FOR
INSTUCTIONS IN HEAD REMOVAL/ROTATION.

 
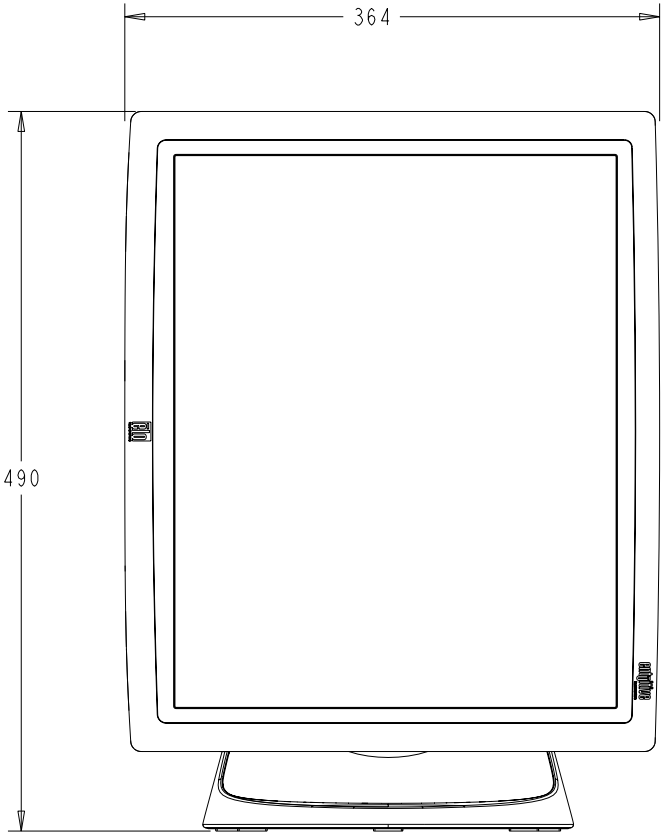 


FIGURE 7: TILT LOCK OPERATION

- 1. PIVOT DISPLAY TO DESIRED ANGLE.
- 2. ROTATE KNOB ~1 TURN CLOCKWISE TO LOCK.
- 3. ROTATE KNOB ~1 TURN COUNTER-CLOCKWISE TO UN-LOCK.

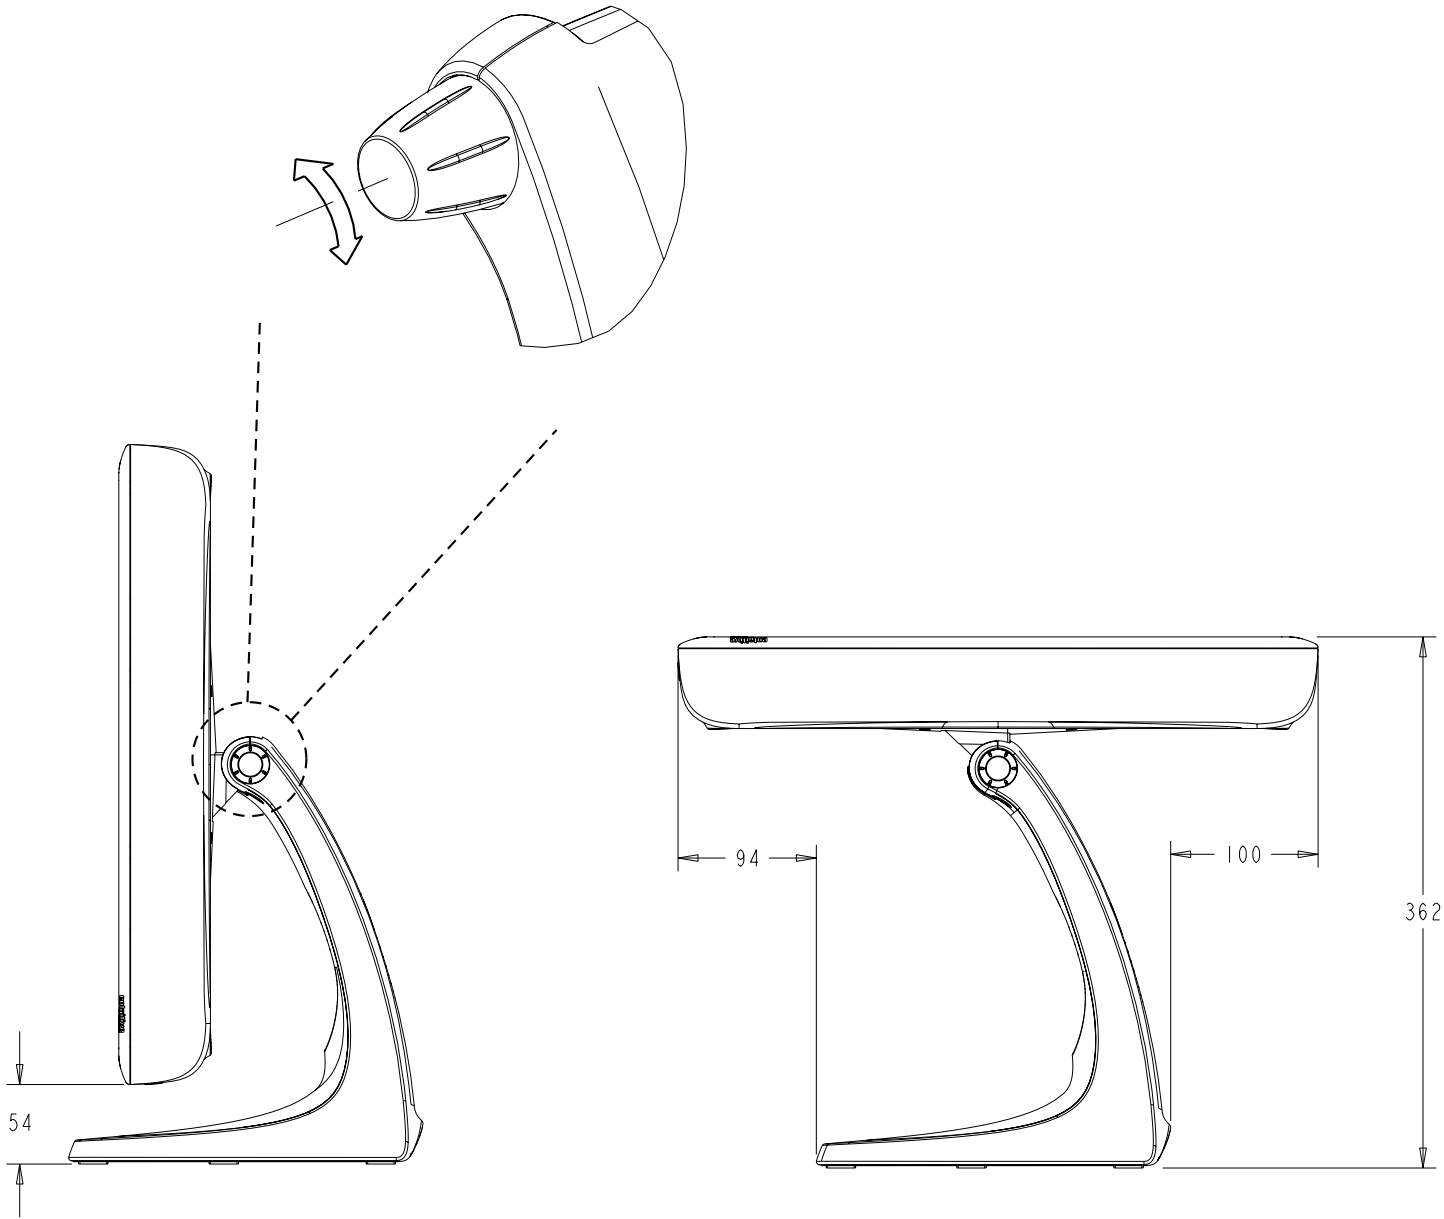

AFT TILT - 90° FROM VERTICAL

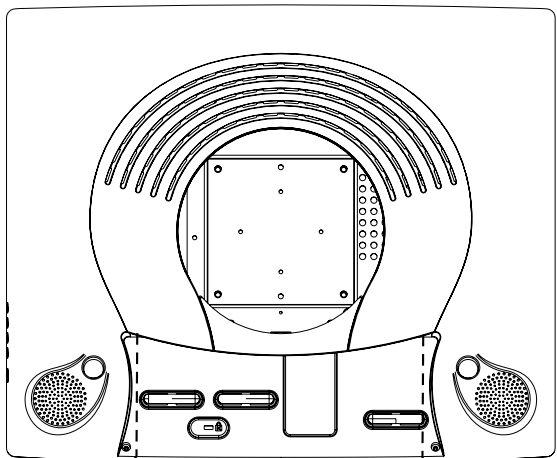 


FIGURE 9: SERIAL OPTION

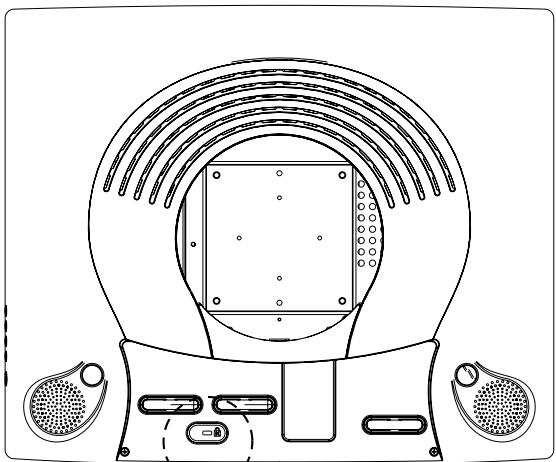 


FIGURE 11: KENSINGTON LOCK DETAIL

 
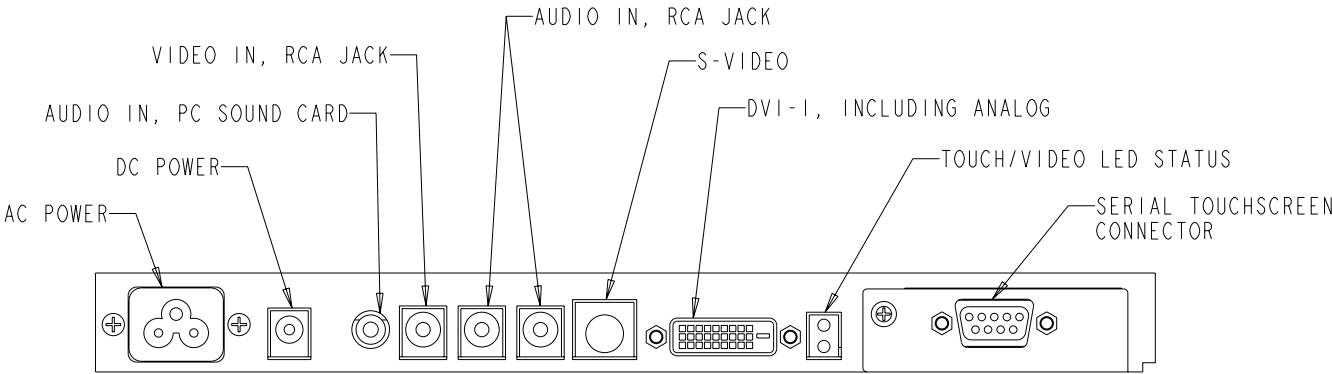 


FIGURE 10: USB OPTION



- CABLES INCLUDED:**
- DVI VIDEO CABLE
 - DVI-I TO DB15 - ANALOG VIDEO CABLE
 - RCA VIDEO CABLES
 - S-VIDEO CABLE
 - TOUCH CABLE - SERIAL OR USB
 - AUDIO CABLE
 - POWER CABLE USA AND EUROPE

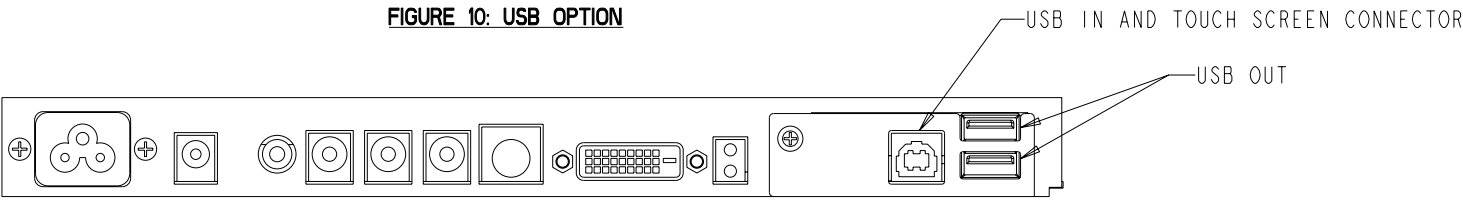