

TOUCHSYSTEMS

MS500477

DATE: 03-10-04

REV: A

ET1825L/ ET1827L MONITOR MOUNTING OPTIONS

FIGURE 1) STAND AND DISPLAY SEPARATION

CUSTOMER WALL

└-70 X 30 CABLE ACCESS HOLE


-REMOVE THESE FOUR SCREWS


(RETAIN FOR RE ASSEMBLY)


(BASE REMOVED FOR EASE OF VIEW)

 \subset

- MOUNTING TO A WALL: I.) REMOVE HINGE COVER LOCATED ON THE BACK OF THE MONITOR.
- REMOVE THE FOUR SCREWS IN ORDER TO SEPARATE THE STAND FROM THE MONITOR (SEE FIGURE 1).
- 3.) ROTATE THE MONITOR 180° (THIS IS NECESSARY SO MONITOR WILL NOT BE UPSIDE DOWN WHEN MOUNTED IN THE POSITION SHOWN).
 4.) REINSTALL THE FOUR SCREWS.
- 5.) REINSTALL THE HINGE COVER.
- 6.) ROUTE NECESSARY CABLES THROUGH_WALL (IF APPLICABLE) AND MOUNT MONITOR TO WALL USING THE TEMPLATE PROVIDED ABOVE (SEE FIGURE 2)

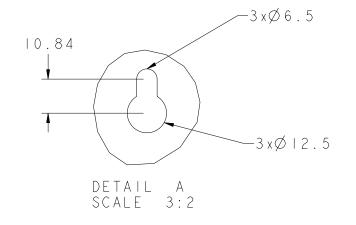

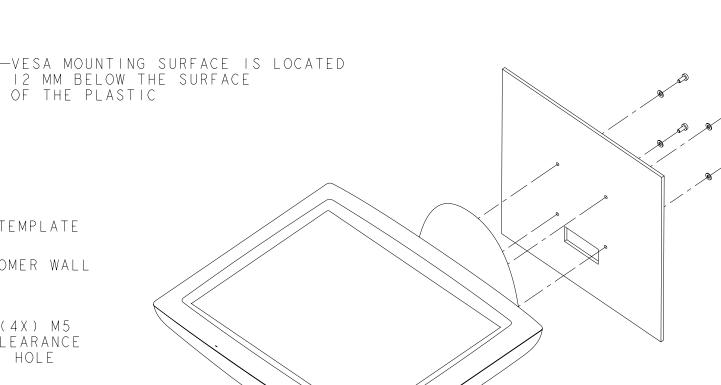

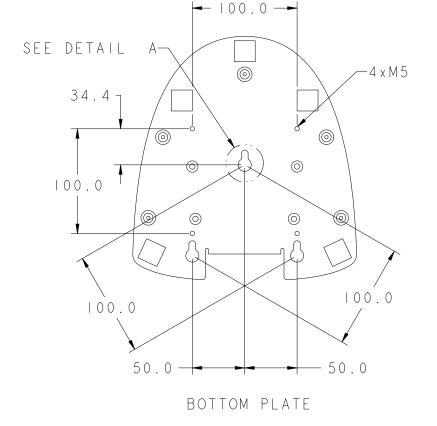

-(4X) M5 CLEARANCE HOLE └ 65.0 100.0

FIGURE 2) WALL MOUNT/ SURFACE MOUNT TEMPLATE

SECURING TO A HORIZONTAL SURFACE: I.) MOUNT TO SURFACE USING THE TEMPLATE PROVIDED IN FIGURE 2.

116

 $C \supset [$

100.0 --