



FIGURE 1: SHORT BASE MOUNTING PATTERN


- I. PIVOT DISPLAY TO DESIRED ANGLE.2. ROTATE KNOB ~I TURN CLOCKWISE TO LOCK.3. ROTATE KNOB ~I TURN COUNTER-CLOCKWISE TO UN-LOCK.

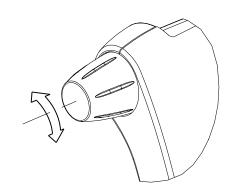


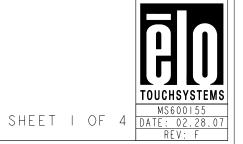


TILT 75° FROM VRTICAL


FIGURE 3: TALL STAND

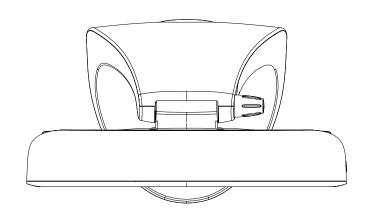


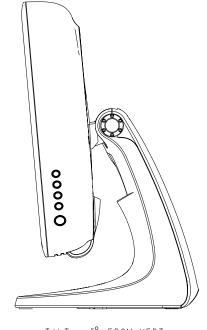


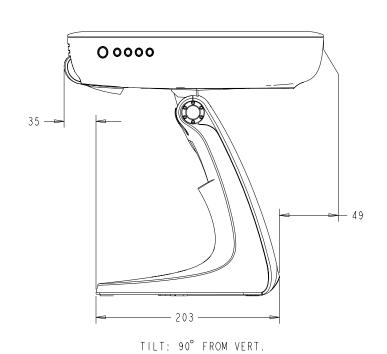

TILT: -5° FROM VERT.

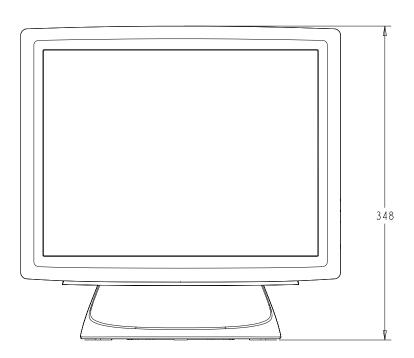

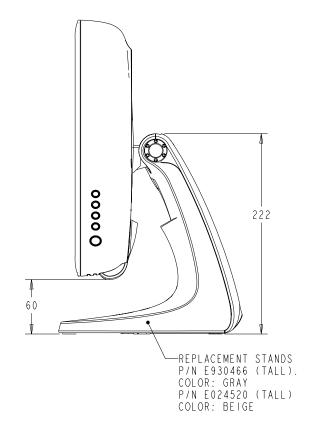

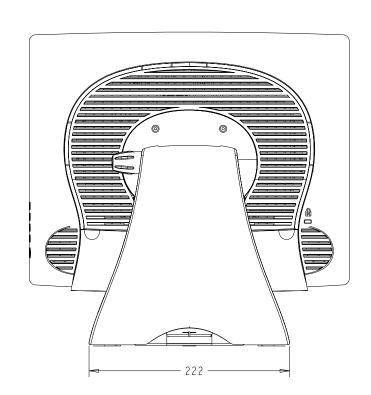

TITLE: ET1529L

FIGURE 4: TOUCH PLUS ANY ACCESSORIES

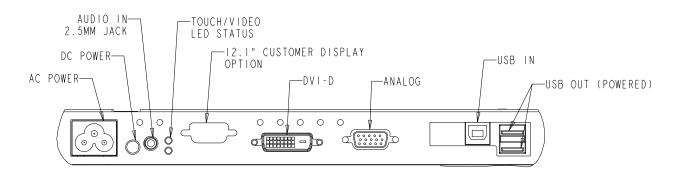


FIGURE 5: TOUCH ONLY




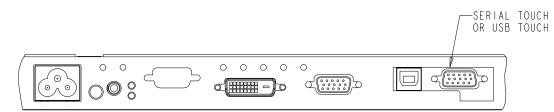


FIGURE 6: TOUCHCOMPUTER



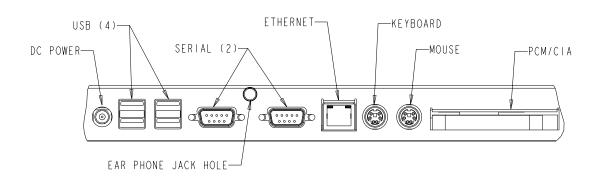

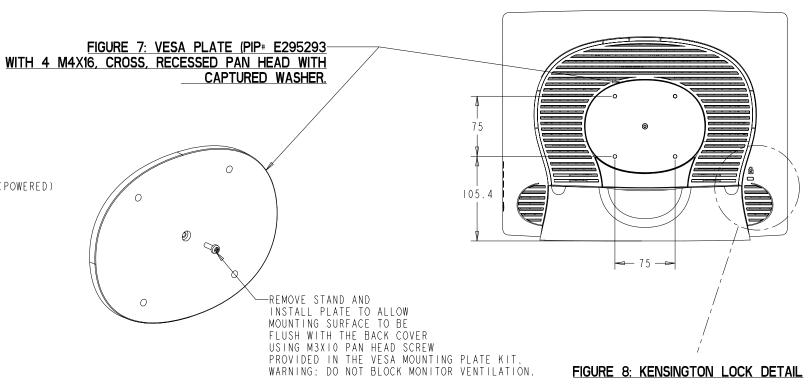

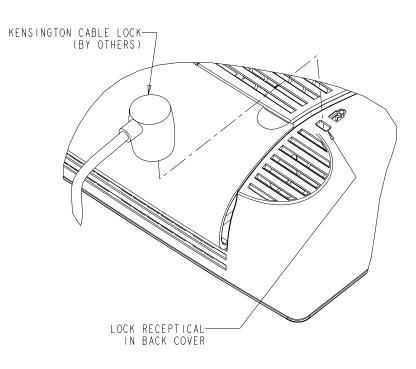

TITLE: ET1529L

00000


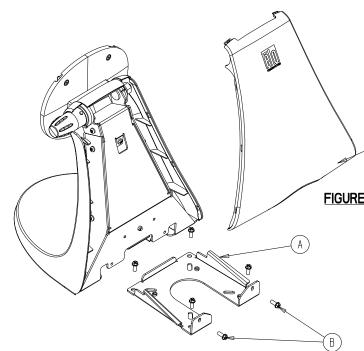



FIGURE 9: TALL STAND MOUNT OPTION

-STAND BACK COVER

- I. REMOVE STAND BACK COVER AND AND MOUNT PLATE (A).
- 2. SECURE MOUNT PLATE TO SURFACE. (SEE TEMPLATE, FIG. 10)
- 3. SLIDE STAND ONTO MOUNTING PLATE AND SECURE WITH 2 SCREWS (B).
- 4. REPLACE BACK COVER.

FIGURE 10: TALL STAND MOUNT TEMPLATE

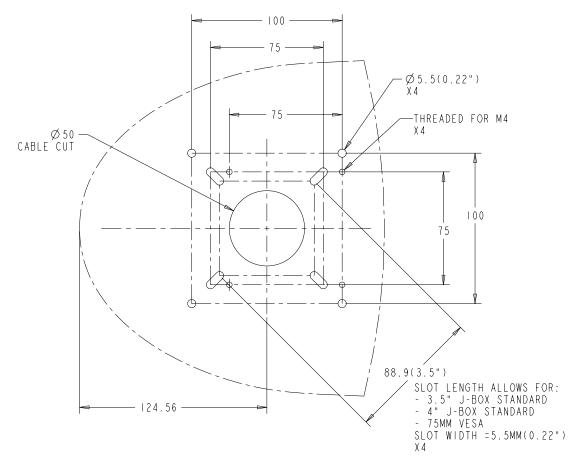

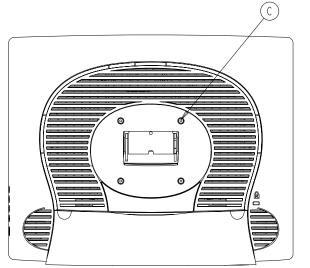

MOUNTING TO A WALL:

- I. REMOVE THE FOUR SCREWS (C) IN ORDER TO SEPARATE THE STAND FROM THE MONITOR.
- 2. ROTATE THE MONITOR 180° (SO MONITOR WILL NOT BE UPSIDE DOWN WHEN MOUNTED IN THE POSITION SHOWN).
- 3. REINSTALL THE FOUR SCREWS (C).
- ROUTE CABLES THROUGH CUTOUT (IF APPLICABLE) AND MOUNT MONITOR TO WALL USING THE TEMPLATES



FOR FRONT MOUNT OPTION. SEE TEMPLATE FIG. 10 FOR REAR MOUNT OPTION.


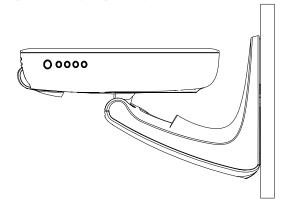


FIGURE12: SHORT STAND WALL MOUNT

SEE FIGURE I, PG. I FOR WALL MOUNT TEMPLATE



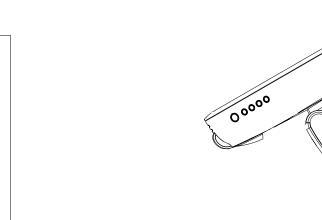

SHEET 4 OF 4 DATE: 02.28.07

