

ET1925L-7SWA-1-G

ET1925L-7UWA-1-G ET1925L-8SWA-1-G

ET1925L-8UWA-1-G

ET1927L-7SWA-1-G ET1927L-7UWA-1-G

19" LCD DESKTOP MONITOR, 3000 SERIES, RoHS

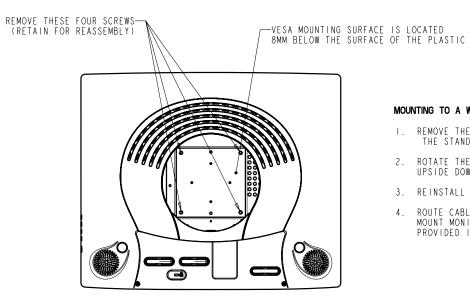
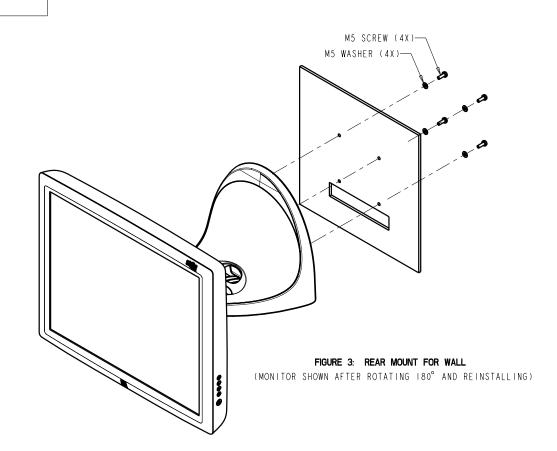
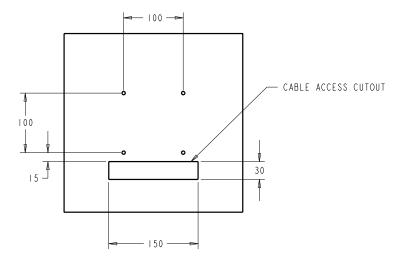


FIGURE 1: STAND AND DISPLAY SEPARATION (BASE REMOVED FOR EASE OF VIEW)

MOUNTING TO A WALL:

- I. REMOVE THE FOUR SCREWS IN ORDER TO SEPARATE
 THE STAND FROM THE MONITOR (SEE FIGURE I).
- ROTATE THE MONITOR 180° (SO MONITOR WILL NOT BE UPSIDE DOWN WHEN MOUNTED IN THE POSITION SHOWN).
- 3. REINSTALL THE FOUR SCREWS.
- 4. ROUTE CABLES THROUGH CUTOUT (IF APPLICABLE) AND MOUNT MONITOR TO WALL USING THE TEMPLATE PROVIDED IN FIGURE 2.







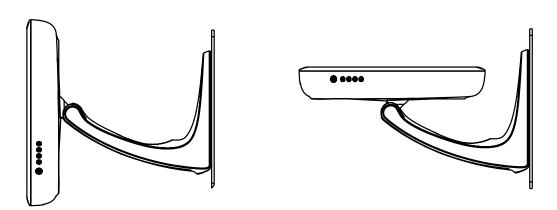


FIGURE 4: TILT FOR WALL MOUNT

TILT RANGE = 95°



DIMENSIONS ARE IN MILLIMETERS

19" LCD DESKTOP MONITOR, 3000 SERIES, RoHS MOUNTING OPTION 2 - FRONT MOUNT: REMOVE THE TWO SCREWS HOLDING THE FRONT COVER TO THE STAND (SEE FIGURE 5). RETAIN SCREWS FOR REASSEMBLY. 2. ROUTE CABLES THROUGH CUTOUT (IF APPLICABLE) AND MOUNT MONITOR TO HORIZONTAL SURFACE USING THE TEMPLATE PROVIDED IN FIGURE 4. 3. REASSEMBLE FRONT COVER. 4. SEE OPTION (I) FOR ADDITIONAL STEPS ON WALL MOUNT. --FRONT COVER ATTACHMENT SCREWS <u> — 100 —</u> M5 SCREW (4X) M5 WASHER (4X)— 100 CABLE ACCESS CUTOUT 0 40 30 — I 50 ——— FIGURE 5: FRONT MOUNT TEMPLATE FIGURE 6: FRONT MOUNT FOR HORIZONTAL SURFACE M5 NUT (4X)— DIMENSIONS ARE IN MILLIMETERS


19" LCD DESKTOP MONITOR, 3000 SERIES, RoHS


FIGURE 7: TILT LOCK OPERATION

- I. PIVOT DISPLAY TO DESIRED ANGLE.
 2. ROTATE KNOB ~! TURN CLOCKWISE TO LOCK.
 3. ROTATE KNOB ~! TURN COUNTER-CLOCKWISE TO UN-LOCK.

FIGURE 8: VERTICAL/PORTRAIT DISPLAY ORIENTATION

SEE "MOUNTING TO A WALL" , PG.2, FOR INSTUCTIONS IN HEAD REMOVAL/ROTATION.

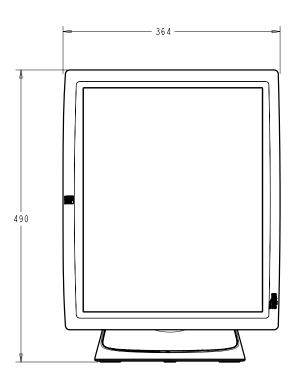

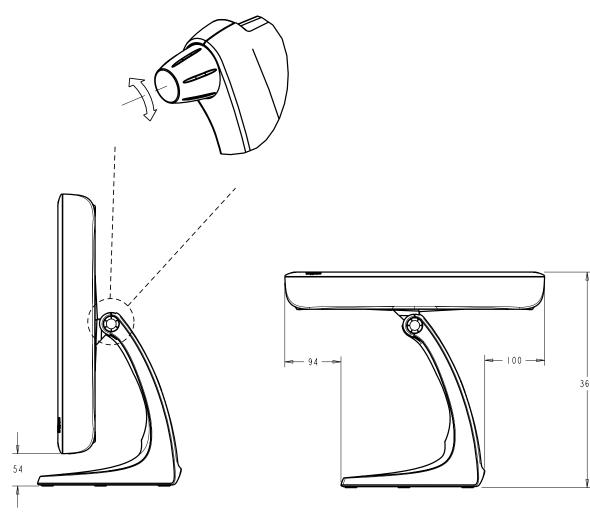

AFT TILT - 90° FROM VERTICAL



19" LCD DESKTOP MONITOR, 3000 SERIES, RoHS FIGURE 9: SERIAL OPTION —AUDIO IN, RCA JACK VIDEO IN, RCA JACK— —S-VIDEO DVI-I, INCLUDING ANALOG AUDIO IN, PC SOUND CARD--TOUCH/VIDEO LED STATUS DC POWER-—SERIAL TOUCHSCREEN CONNECTOR AC POWER-FIGURE 10: USB OPTION -USB IN AND TOUCH SCREEN CONNECTOR CABLES INCLUDED: - DVI VIDEO CABLE - DVI-I TO DBI5 - ANALOG VIDEO CABLE - RCA VIDEO CABLES - S-VIDEO CABLES - TOUCH CABLE - SERIAL OR USB - AUDIO CABLE - POWER CABLE USA AND EUROPE

