



8

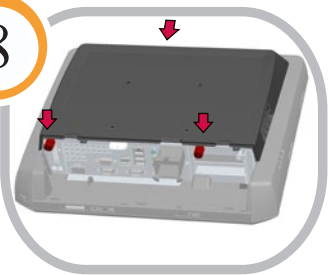

▶▶▶ Re-install the rear cover and tighten the thumb screws.

9

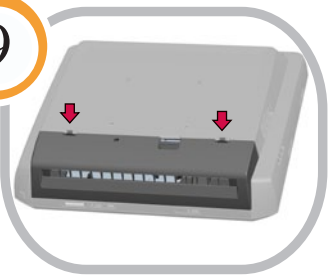

▶▶▶ Re-install the cable cover.

Included Items:

- One USB to VGA card
- One internal USB cable

Additional Notes:



Quick Installation Guide

Installing the USB to VGA card for the B-Series Touchcomputer

Caution:
The touch computer must be unplugged before any installation occurs.



www.elotouch.com



Revision A
P/N E206987

North America
Elo TouchSystem
301 Constitution Drive,
Menlo Park, CA 94025
www.elotouch.com

Elo Technical Support
Online self-help:
www.elotouch.com/go/websupport
Technical Support contacts in your region:
www.elotouch.com/go/contactsupport

Europe
Tel +32 (0)16 35 21 00
Fax +32 (0)16 35 21 01
elosales@elotouch.com


Asia-Pacific
Tel +81 (45) 478-2161
Fax +81 (45) 478-2180
www.tps.co.jp

Latin America
Tel 1-305-428-5210
Fax 1-305-717-4909
www.elotouch.com.ar




Our commitment. Your advantage.

1

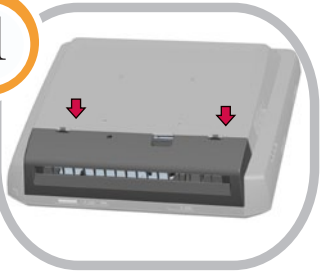


▶▶▶ Remove the cable cover.

2

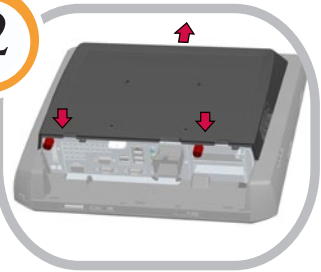


▶▶▶ Remove the rear cover by unscrewing the two thumb screws and sliding the cover upward.

3

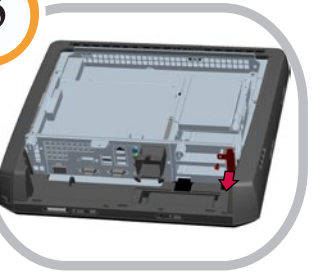


▶▶▶ Remove the PCI lock by unscrewing the mounting screw and pulling the lock upward.

4

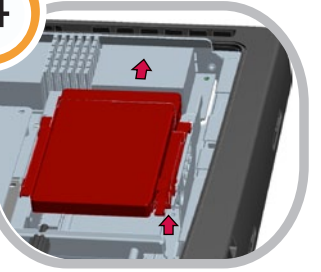


▶▶▶ Remove the primary hard drive (HDD1) by pulling up on the mounting latch and sliding it back.

5

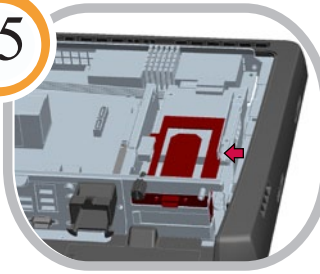


▶▶▶ Plug the USB to VGA card into the top PCI slot as shown.

6

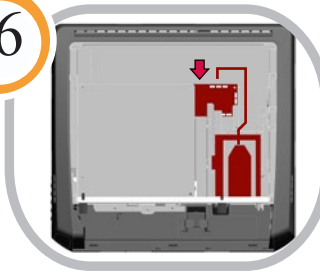


▶▶▶ Connect the internal USB cable from USB to VGA card to the an open position on the touchcomputer's USB hub as shown.

7

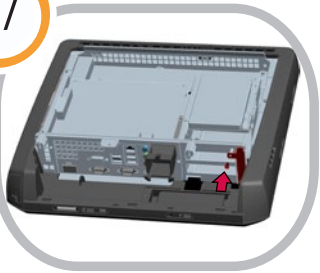

▶▶▶ Re-install the PCI lock and fasten it with the screw removed in STEP 3.

8

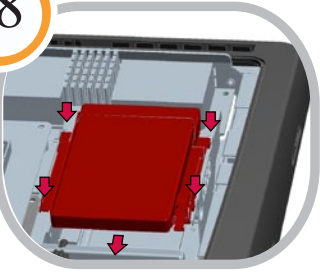

▶▶▶ Re-install the primary hard drive (HDD1) by inserting all four (4) of the hooks into the chassis holes and slide the drive forward.