

Included Items:

- One wireless USB adaptor

Quick Installation Guide

Installing the Wireless USB Adaptor for the B-Series Touchcomputer

Caution:

The touch computer must be unplugged before any installation occurs.



www.elotouch.com



Revision A
P/N E371340

North America
Elo TouchSystem
301 Constitution Drive,
Menlo Park, CA 94025
www.elotouch.com

Elo Technical Support
Online self-help:
www.elotouch.com/go/websupport
Technical Support contacts in your region:
www.elotouch.com/go/contactsupport

Europe
Tel +32 (0)16 35 21 00
Fax +32 (0)16 35 21 01
elosales@elotouch.com

Asia-Pacific
Tel +81 (45) 478-2161
Fax +81 (45) 478-2180
www.tps.co.jp

 
Latin America
Tel 1-305-428-5210
Fax 1-305-717-4909
www.elotouch.com.ar



Tyco Electronics


Our commitment. Your advantage.

1

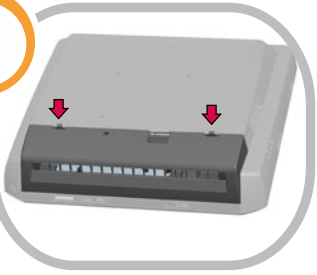

▶▶▶ Remove the cable cover.

 2

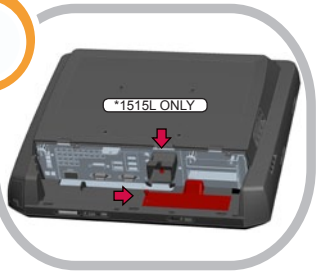


▶▶▶ Remove the wireless slot cover by unscrewing the mounting screw and lifting it up and out. NOTE: The 1515L requires the cable management clip to be removed first.

3




▶▶▶ Install the wireless USB adaptor as shown.

 4

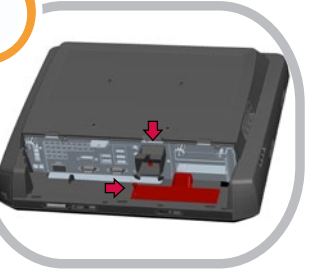


▶▶▶ Re-install the wireless access cover. Also reinstall the cable management clip if it was removed.

 5

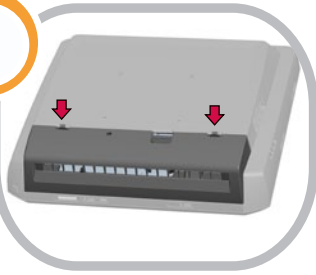


▶▶▶ Re-install the cable cover.

 6

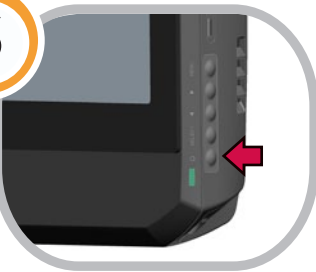

▶▶▶ Turn on the touchcomputer.

 7

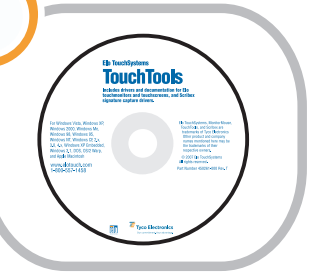

▶▶▶ Install the wireless adaptor driver located at "C:\EloTouchSystems\SetupFiles\Peripherals\USB Wireless\Utility" folder on the touchcomputer.

A copy of the driver is also included on the touchcomputer's install CD.