

Contents:

- 1x PayPoint Pro
- 2x receipt paper roll
- 1x US power cord (For PN: E158558, E158764, E158947)
- 1x EU and 1x UK power cord (For PN: E270176, E270404, E270602)
- 1x CAT5 Ethernet cable
- 1x RJ45 to DB9 adaptor cable

For software development kit please visit www.elotouch.com



www.elotouch.com

Quick Installation Guide

Elo PayPoint® for Windows

Elo Touch Solutions Technical Support

Online self-help: www.elotouch.com/go/websupport

Technical Support contacts in your region:

www.elotouch.com/go/contactsupport

Revision B
P/N E273293

North America

Elo Touch Solutions
1033 McCarthy Boulevard
Milpitas, CA 95035

800-ELO-TOUCH

Tel +1 408 597 8000

Fax +1 408 597 8050

customerservice@elotouch.com

Europe

Tel +32 (0)16 70 45 00

Fax +32 (0)16 70 45 49

elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385

Fax +86 (21) 3329 1400

www.elotouch.com.cn

Latin America

Tel 786-923-0251

Fax 305-931-0124

www.elotouch.com

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.



Installation

1




Connect power cord: Power connection is underneath the register near the back.

3




Power on the register: Press the power button

2

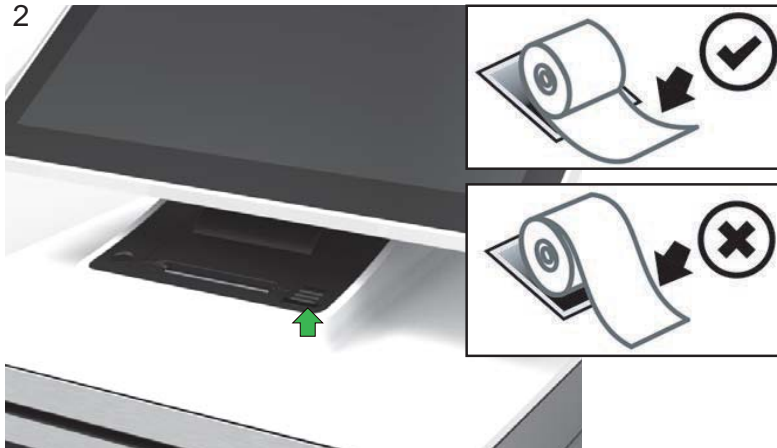

Install receipt paper: Install the paper by pressing the lid release button and lifting up on the printer lid. Note the correct paper orientation from the pictures above.

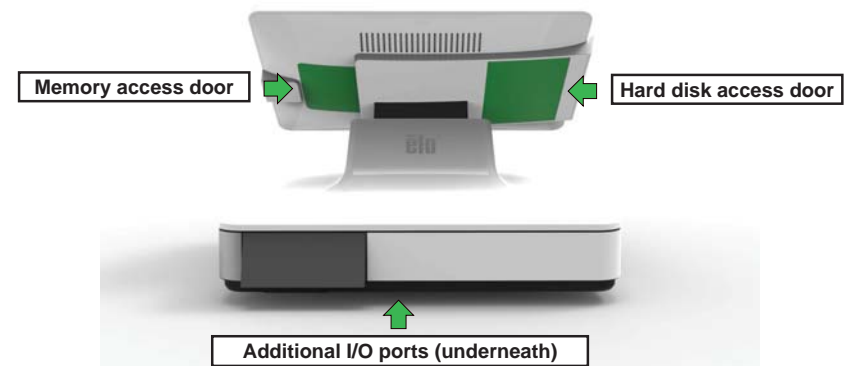

See user manual for detailed specification of I/O ports and instructions on replacing or upgrading the memory and hard disk drive.