

Quick Installation Guide

LCD Touchmonitor and Touch Driver

Revision_G
SW602681

Elo Touch Solutions Technical Support

Online self-help: www.elotouch.com/go/websupport

Technical Support contacts in your region:

www.elotouch.com/go/contactsupport

North America

Elo Touch Solutions
1033 McCarthy Boulevard
Milpitas, CA 95035

800-ELO-TOUCH

Tel +1 408 597 8000

Fax +1 408 597 8050

customerservice@elotouch.com

Europe

Tel +32 (0)16 70 45 00

Fax +32 (0)16 70 45 49

elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385

Fax +86 (21) 3329 1400

www.elotouch.com.cn

Latin America

Tel 786-923-0251

Fax 305-931-0124

www.elotouch.com



The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.

Installation

1 Power

Four power connection options are shown, each with a yellow arrow pointing to the connection point on the device. The options are: 1. AC power cord connected to a wall outlet. 2. DC power adapter connected to a power source. 3. Power brick connected to a power source. 4. Power cable connected to a power source. Each option is separated by an 'OR' icon.

4 OSD Remote (if applicable)

Two OSD remote options are shown, each with a yellow arrow pointing to the connection point on the device. The options are: 1. A standard OSD remote. 2. A USB OSD remote. Each option is separated by an 'OR' icon.

2 Video

Four video connection options are shown, each with a yellow arrow pointing to the connection point on the device. The options are: 1. HDMI cable. 2. DVI cable. 3. VGA cable. 4. DisplayPort cable. Each option is separated by an 'OR' icon.

3 Touch

Two touch connection options are shown, each with a yellow arrow pointing to the connection point on the device. The options are: 1. IOIOI connector. 2. USB touch controller. Each option is separated by an 'OR' icon.

5 Install

<http://elotouch.com/Support/Downloads/dnld.asp>

The screenshot shows the 'UNPACK AND RUN' section of the ELO Touch Solutions website. It includes instructions for unpacking the software and running the installer. Below the instructions is a 'Touch Drivers' section with a list of drivers and their versions.

Windows XP

The screenshot shows the 'Elo Touchscreen Setup' window for Windows XP. It includes the ELO TOUCH SOLUTIONS logo and the following options:

- Install Serial Touchscreen Drivers
- Install USB Touchscreen Drivers
- Install Any Touchscreen Driver

Buttons for 'Back', 'Next', and 'Cancel' are visible.

Windows 7

The screenshot shows the 'Elo Touchscreen Setup' window for Windows 7. It includes the ELO TOUCH SOLUTIONS logo and the following options:

- Install Drivers for Windows 7
- Install Drivers for Windows 7 (64-bit)
- Install Drivers for Windows 7 (32-bit)
- Install Drivers for Windows 7 (64-bit) (Optional)
- Install Drivers for Windows 7 (32-bit) (Optional)

Buttons for 'Back', 'Next', and 'Cancel' are visible.