



## 17A2

Note: ● Always handle the component by its edges.  
● Installer must be electrically grounded while performing installation steps.




1 Turn off power to the touchcomputer and unplug the power adapter from the unit.




2 Carefully place the touchcomputer facedown on a soft, flat surface. Turn touchcomputer upside down and take off the back cover insert.



3 If there is an installed DVD drive, remove the two screws attaching the DVD drive flap and remove the flap. Then pull on the DVD drive so it slides out of the touchcomputer.

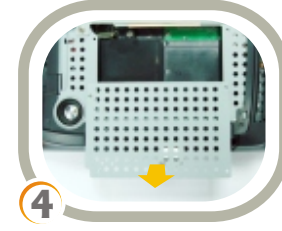

4 Unscrew the shielding that is connected by four screws and remove it.

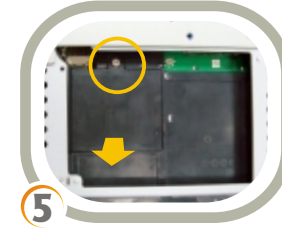


5 Unscrew the security screw and remove the MiniPCI cover.



6 Align the pins of the Wireless card with the connector at an angle and push it in until the pins are in place. Then push the Wireless card down until it clicks. If the two side locks on the connector do not click into place, remove the card and repeat the installation until the card clicks securely in place.



7 Take the cable labeled "Wireless card" and connect it to the connector labeled "MAIN" on the Wireless card.

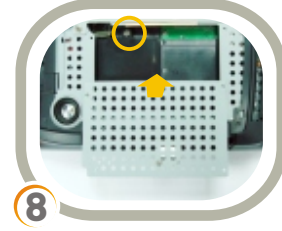

8 Reinstall the MiniPCI cover with the security screw and reinstall the shielding with the four screws.



9 If the DVD drive flap was previously removed, reinstall the flap with the two screws and reinsert the DVD drive, verifying that the drive locks securely in place.



10 Replace the back cover insert.



11 Reconnect the power adapter and power on the touchcomputer. Insert the software CD into the DVD drive (or USB DVD drive) and follow the on-screen instructions to complete the Wireless Card software installation.


## 15A2




1 Turn off power to the touchcomputer and unplug the power adapter from the unit.



2 Carefully place the touchcomputer facedown on a soft, flat surface. Turn touchcomputer upside down and take off the back cover insert.

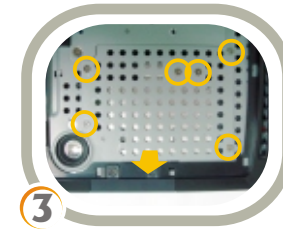


3 Unscrew the shielding that is connected by six screws and remove it.

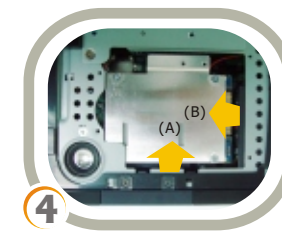


4 Remove the existing hard drive.




5 Align the pins of the Wireless card with the connector at an angle and push it in until the pins are in place. Then push the Wireless card down until it clicks. If the two side locks on the connector do not click into place, remove the card and repeat the installation until the card clicks securely in place.

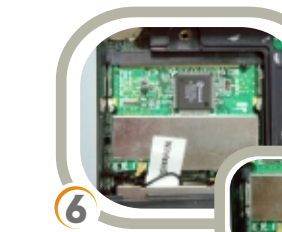

6 Take the cable labeled "Wireless card" and connect it to the connector labeled "MAIN" on the Wireless card.

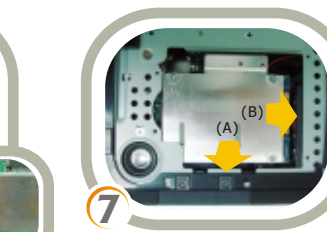

7 Replace the hard drive into the hard drive space. Push the hard drive up until it snap locks into the connector.

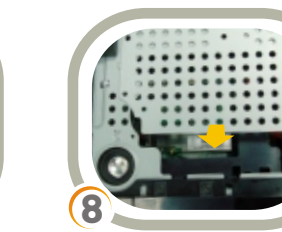

8 Reinstall the shielding with the six screws.



9 Replace the back cover insert.



10 Reconnect the power adapter and power on the touchcomputer. Insert the software CD into the DVD drive (or USB DVD drive) and follow the on-screen instructions to complete the Wireless Card software installation.

# Quick Installation Guide

## Installing the Wireless card for the 17A2/15A2

Note: This wireless card is intended to be used only with a 17A2 or 15A2 touchcomputer. Elo Touchsystems is not liable for any damages incurred while using this device in any non-specified manner.



[www.elotouch.com](http://www.elotouch.com)



Revision B  
P/N E247787

North America  
Elo TouchSystems  
301 Constitution Drive  
Menlo Park, CA 94025  
www.elotouch.com

Elo Technical Support  
Online self-help:  
[www.elotouch.com/go/web-support](http://www.elotouch.com/go/web-support)  
Technical Support contacts in your region:  
[www.elotouch.com/go/contact-support](http://www.elotouch.com/go/contact-support)

Europe  
Tel +32 (0)16 35 21 00  
Fax +32 (0)16 35 21 01  
elosales@elotouch.com

Asia-Pacific  
Tel +81 (45) 478-2161  
Fax +81 (45) 478-2180  
www.tps.co.jp

Latin America  
Tel 1-305-428-5210  
Fax 1-305-717-4909  
www.elotouch.com.ar

For current Elo news, product updates and announcements, register to receive our TouchMonitor newsletter at [www.elotouch.com/go/news](http://www.elotouch.com/go/news)



**Tyco Electronics**

Our commitment. Your advantage.