
Note: For ESY17A2 and ESY15A2 touchcomputers, the software for the peripheral is already installed on the touchcomputer. For the ET1729L touchmonitor, refer to the following:

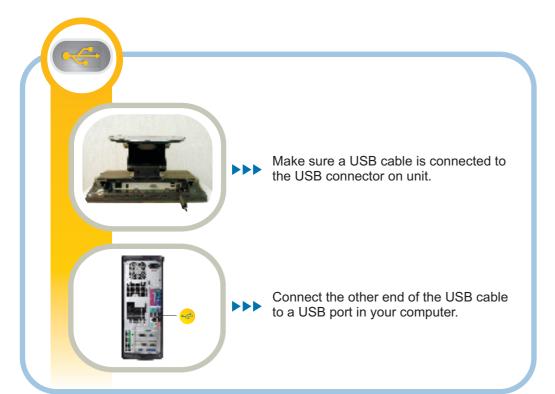



Quick Installation Guide

Installing the Customer Display for 1729/17A2/15A2

Caution:

Before attaching the Customer Display to your monitor, make sure that power to the monitor and computer is off.



Europe





Elo TouchSystem
301 Constitution Drive,
Menlo Park, CA 94025

Online self-help: www.elotouch.com/go/websupport Technical Support contacts in your region: www.elotouch.com/go/contactsupport Europe Tel +32 (0)16 35 21 00 Fax +32 (0)16 35 21 01 elosales@elotouch.com

www.elotouch.com

Asia-Pacific Tel +81 (45) 478-2161 Fax +81 (45) 478-2180 Latin America
Tel 1-305-428-5210
Fax 1-305-717-4909







>>> Turn off power to the unit and computer.



Turn unit upside down and take off the back cover insert.



Unsecure the Customer Display door from the unit's top side.



Place the Customer Display onto the rear of the unit, along the unit's top side.



Secure the Customer Display to the unit using two screws from the Customer Display Kit.



Insert the connector of the cable accompanying the Customer
Display into the mating connector on the accessory hub in the rear of the unit.



Replace the back cover insert.



Place the unit upright then turn on.