
Note: For ESY17A2 and ESY15A2 touchcomputers, the software for the peripheral is already installed on the touchcomputer. For the ET1729L touchmonitor, refer to the following:

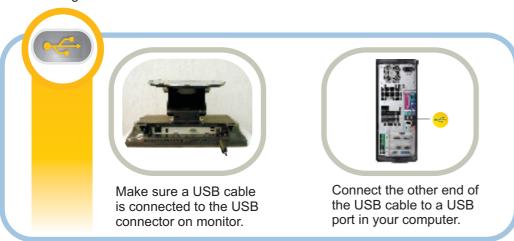

<sup>\*</sup>For necessary drivers please refer to:

D:\Touch Monitor Peripherals\Fingerprint Reader\Fingerprint Reader 1729 17A2\ Drivers\

Note: "D" refers to the drive in which the TouchTools CD is located.



## **Quick Installation Guide**

## Installing the Biometric FPR for 1729/17A2/15A2

Caution:

Before attaching the Biometric FPR to your monitor, make sure that power to the monitor and computer is off.









North America Elo TouchSystem 301 Constitution Drive, Menlo Park, CA 94025 www.elotouch.com

Online self-help:
www.elotouch.com/go/websupport
Technical Support contacts in your region:
www.elotouch.com/go/contactsupport

Europe
Tel +32 (0)16 35 21 00
Fax +32 (0)16 35 21 01
elosales@elotouch.com

Asia-Pacific
Tel +81 (45) 478-2161
Fax +81 (45) 478-2180

Latin America
Tel 1-305-428-5210
Fax 1-305-717-4909







Turn off power to the unit and computer.



Turn unit upside down and take off the back cover insert



Unsecure the Biometric FPR door from the unit's top side.



Place the Biometric FPR onto the rear of the unit, along the unit's top side.



Secure the Biometric FPR to the unit using two screws from the Biometric FPR Kit.



Insert the connector of the cable accompanying the Biometric FPR into the mating connector on the accessory hub in the rear of the unit.



Replace the back cover insert.



Place the unit upright then turn on.