



Quick Installation Guide

Magnetic Stripe Reader for 1519/1919L LCD Desktop

© 2010 Tyco Electronics. All rights reserved.
Elo TouchSystems, TE logo, and Tyco Electronics are trademarks.



North America
Elo TouchSystems
301 Constitution Drive
Menlo Park, CA 94025
www.elotouch.com
1-800-557-1458



Elo Technical Support
Online self-help:
www.elotouch.com/go/websupport
Technical Support contacts in your region:
www.elotouch.com/go/contactsupport

www.elotouch.com



Europe
Tel +32 (0)16 35 21 00
Fax +32 (0)16 35 21 01
elosales@elotouch.com

Asia-Pacific
Tel +81 (45) 478-2161
Fax +81 (45) 478-2180
www.tps.co.jp



Revision A
P/N E128907

Latin America
www.elotouch.com.ar

For current Elo news, product updates and announcements, register to receive our TouchMonitor newsletter at www.elotouch.com/go/news



Our commitment. Your advantage.

Magnetic Stripe Reader (MSR)

Installation Instructions

1



Open the box containing the MSR kit.


2



Verify kit contents:

- ▶ 1 MSR
- ▶ 2 mounting screws (Phillips head)
- ▶ 1 TouchTools CD

3

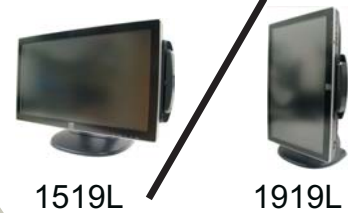

1519L: Install the MSR on the right side in portrait or landscape mode.

1919L: Install the MSR on any of the four sides of the monitor.

4



Remove the two Mylar tabs from the desired side of the installation using a sharp, pointed tool.

5



Align the MSR to the exposed mounting holes. Screw the MSR to the monitor using a Phillips screwdriver.

6



Attach the USB cable from the MSR to the USB port on the rear of the computer.