

Included items:

One E-Series Touchcomputer
One US Power Cable
One European Power Cable
One Driver CD
One Wall Mount Kit
One Screw to Secure Front Cover
One Power Brick

中国 RoHS (China RoHS)

根据中国《电子信息产品污染控制管理办法》，以下部分列出本公司产品中可能包含的有毒和/或有害物质的名称和含量

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
塑料部件	○	○	○	○	○	○
金属部件	X	○	○	○	○	○
电线电缆组件	X	○	○	○	○	○
LCD 屏	X	○	○	○	○	○
触控屏	X	○	○	○	○	○
电路模组	X	○	○	○	○	○
软件 (CD 等)	○	○	○	○	○	○

O: 表示该有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求，对于所有显示 X 的情况，本公司按照 EU RoHS 采用了豁免的豁免指标。

产品标示说明

- (1) 依据 SJ/T11364-2006 要求，本公司电子信息产品均注明以下污染控制标志。本产品环保使用期限为 10 年，在下列温度和湿度使用的条件下，不会发生外泄或突变，使用该电子信息产品不会对环境造成严重污染或对其人身财产造成严重损害。
- *操作条件 温度：0°C-35°C (32°F-95°F) /湿度 20%-80% (不凝结)
*储存条件 温度：-30°C-60°C (-22°F-140°F) /湿度 5%-95% (不凝结)



- (2) 本公司鼓励并建议客户将本产品依据所在地的相关法令，进行回收及再利用，切勿随意与一般垃圾丢弃。



www.elotouch.com

Quick Installation Guide

E-Series LCD Multifunction Touchcomputer

Elo Touch Solutions Technical Support

Online self-help: www.elotouch.com/go/websupport

Technical Support contacts in your region:

www.elotouch.com/go/contactsupport

North America

Elo Touch Solutions
1033 McCarthy Boulevard
Milpitas, CA 95035

800-ELO-TOUCH

Tel +1 408 597 8000

Fax +1 408 597 8050

customerservice@elotouch.com

Europe

Tel +32 (0)16 70 45 00

Fax +32 (0)16 70 45 49

elosales@elotouch.com

Asia-Pacific

Tel +86 (21) 3329 1385

Fax +86 (21) 3329 1400

www.elotouch.com.cn

Latin America

Tel 786-923-0251

Fax 305-931-0124

www.elotouch.com



The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo (logo) and Elo Touch Solutions are trademarks of Elo and its Affiliates.



Installation

Download the latest drivers from: http://www.elotouch.com/files/driver_packs/E255263_15E1_Drivers_CD.zip

1




Please Note:

Touchscreen will not work with protective film on front and edges of screen. Remove both films before attempting to use this product.

2

Tilt display back and remove cover A. Cover B can also be removed for additional access.

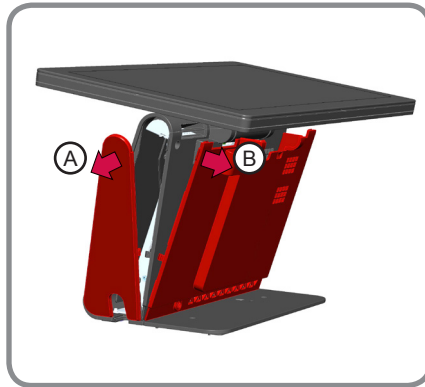


3

Connect power




4

Additional Ports/Connections

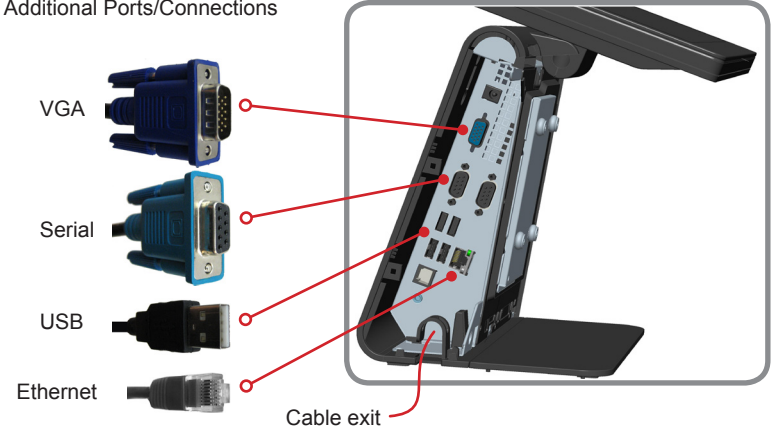

5

Re-install cover A and B.

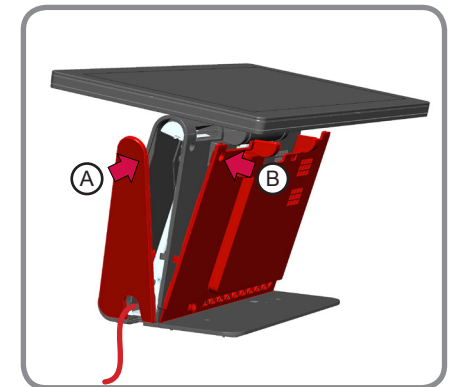

6

Power on

