



13

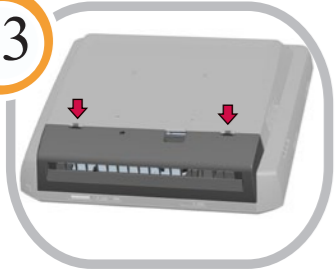

▶▶▶ Re-install the cable cover.

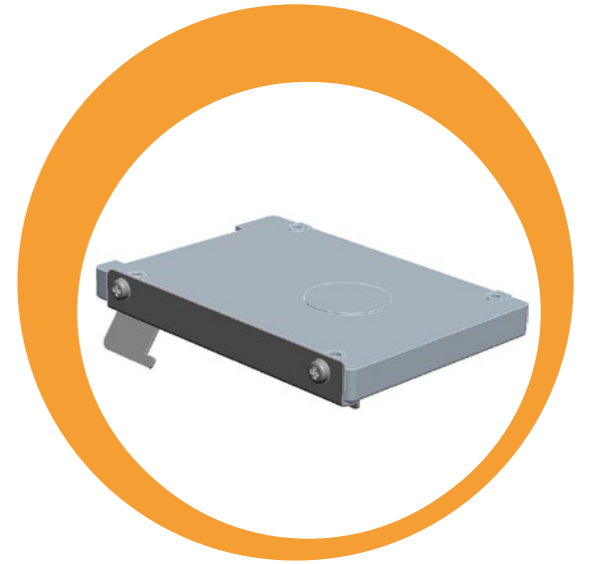

Quick Installation Guide

Installing the second hard disk drive for the B-Series Touchcomputer

Caution:
The touch computer must be unplugged before any installation occurs.

Included Items:

- 1 hard disk drive
- 2 Mounting screws
- 1 drive mounting bracket (pre-installed)
- 1 SATA cable



North America
Elo TouchSystem
301 Constitution Drive,
Menlo Park, CA 94025
www.elotouch.com



Elo Technical Support
Online self-help:
www.elotouch.com/go/websupport
Technical Support contacts in your region:
www.elotouch.com/go/contactsupport

www.elotouch.com



Europe
Tel +32 (0)16 35 21 00
Fax +32 (0)16 35 21 01
elosaes@elotouch.com

Asia-Pacific
Tel +81 (45) 478-2161
Fax +81 (45) 478-2180
www.tps.co.jp




Revision A
P/N E845903

Latin America
Tel 1-305-428-5210
Fax 1-305-717-4909
www.elotouch.com.ar




Tyco Electronics


Our commitment. Your advantage.

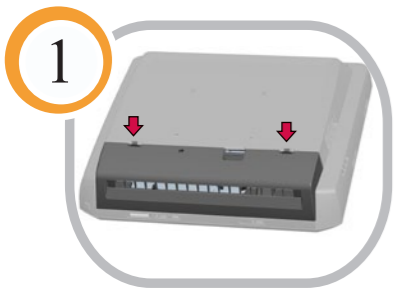


▶▶▶ Remove the cable cover.

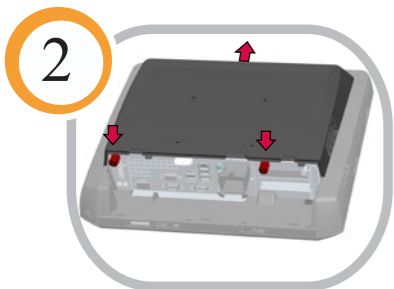


▶▶▶ Remove the rear cover by unscrewing the two thumb screws and sliding the cover upward.

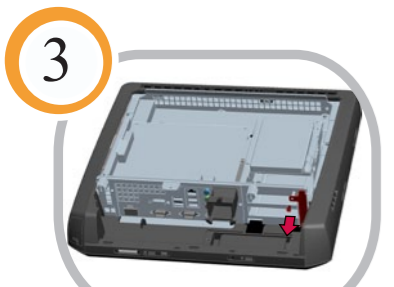


▶▶▶ Remove the PCI lock by unscrewing the mounting screw and pulling the lock upward.

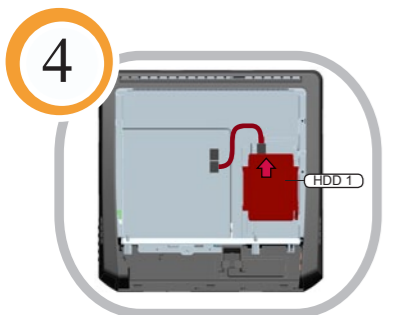


▶▶▶ Unplug the SATA cable from the primary hard drive and from the motherboard.

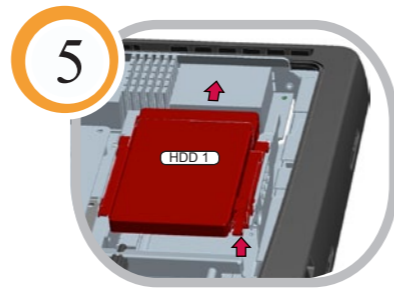


▶▶▶ Remove the primary hard drive (HDD 1) by pulling up on the mounting latch and sliding it back.

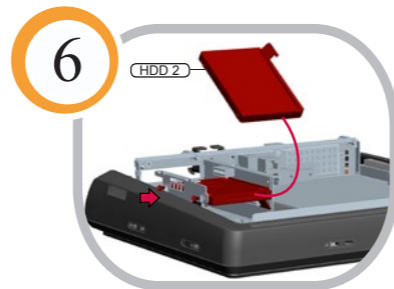


▶▶▶ Install the second hard drive (HDD 2) in the position shown and fasten it to the chassis with the included mounting screws.

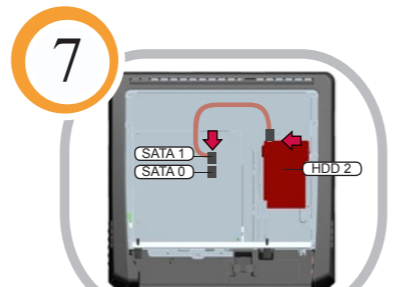


▶▶▶ Connect the second hard drive (HDD 2) to the SATA 1 connection on the motherboard.

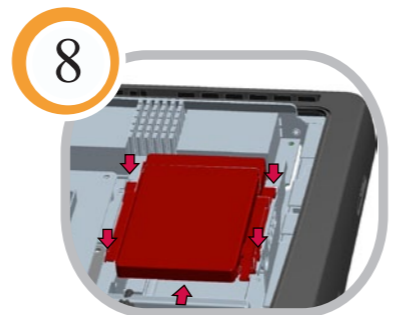


▶▶▶ Re-install the primary hard drive (HDD 1) by inserting all four (4) of the hooks into the chassis holes and slide the drive forward.

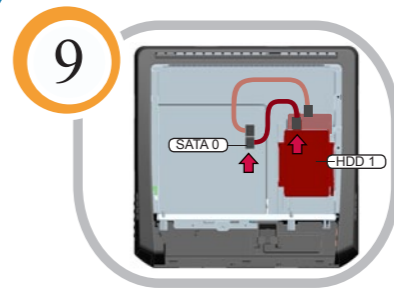


▶▶▶ Connect the primary hard drive (HDD 1) to the SATA 0 connection on the motherboard.

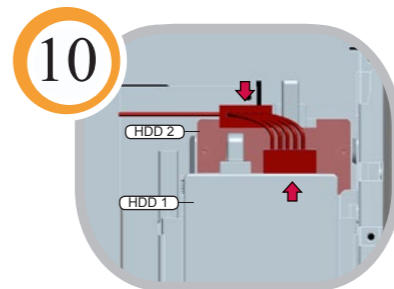

▶▶▶ Install the power cables for both drives as shown.

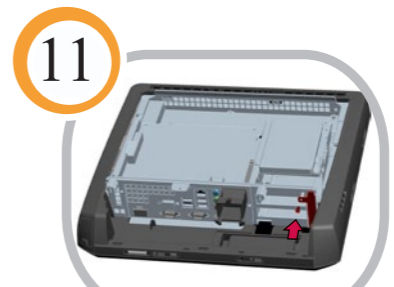

▶▶▶ Re-install the PCI lock and fasten it with the screw removed in STEP 3.

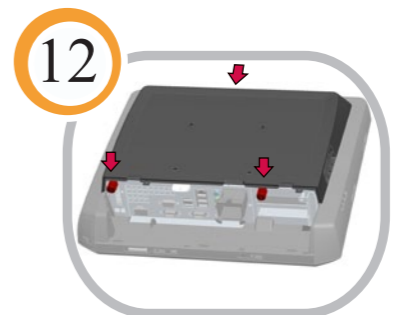

▶▶▶ Re-install the rear cover and tighten the thumb screws.