


▶▶▶ Re-install the rear cover and tighten the thumb screws.

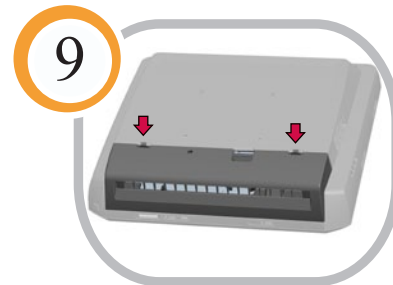

▶▶▶ Re-install the cable cover.

- Included Items:
- One modem card

Additional Notes: Installation of this peripheral requires installation of PCIeXI adaptor kit (P/N E827958)



# Quick Installation Guide

Installing the modem card for the B-Series Touchcomputer

Caution:  
The touch computer must be unplugged before any installation occurs.



[www.elotouch.com](http://www.elotouch.com)



Revision 1  
P/N E469894

**North America**  
Elo Touchsystems  
301 Constitution Drive  
Menlo Park, CA 94025  
[www.elotouch.com](http://www.elotouch.com)

**Elo Technical Support**  
Online self-help:  
[www.elotouch.com/go/websupport](http://www.elotouch.com/go/websupport)  
Technical Support contacts in your region:  
[www.elotouch.com/go/contactsupport](http://www.elotouch.com/go/contactsupport)

**Europe**  
Tel +32 (0)16 35 21 00  
Fax +32 (0)16 35 21 01  
[elosales@elotouch.com](mailto:elosales@elotouch.com)


**Asia-Pacific**  
Tel +81 (45) 478-2161  
Fax +81 (45) 478-2180  
[www.tps.co.jp](http://www.tps.co.jp)

**Latin America**  
Tel 1-305-428-5210  
Fax 1-305-717-4909  
[www.elotouch.com.ar](http://www.elotouch.com.ar)

Elo (logo), Elo TouchSystems, TE (logo) and Tyco Electronics are trademarks of the Tyco Electronics group of companies and its licensors.




**Tyco Electronics**  
Our commitment. Your advantage.

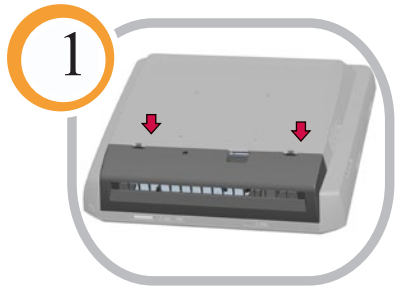


1

▶▶▶ Remove the cable cover.

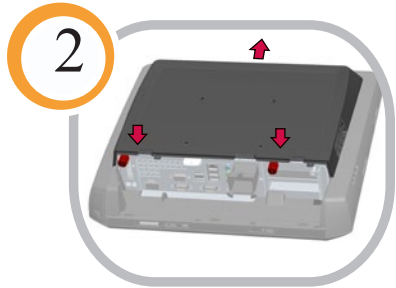


2

▶▶▶ Remove the rear cover by unscrewing the two thumb screws and sliding the cover upward.

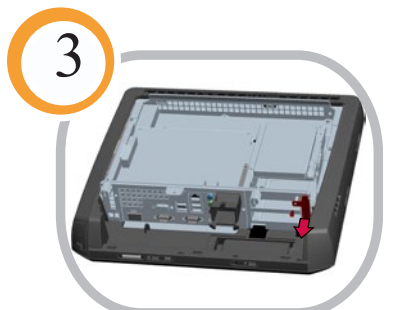


3

▶▶▶ Remove the PCI lock by unscrewing the mounting screw and pulling the lock upward.

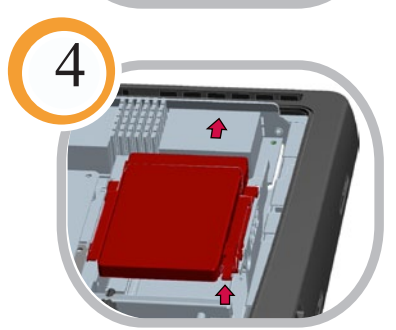


4

▶▶▶ Remove the primary hard drive (HDD1) by pulling up on the mounting latch and sliding it back.

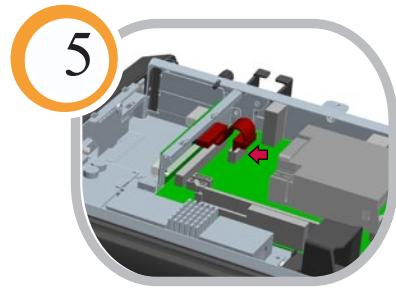


5

▶▶▶ Install the Elo PCIeXI adaptor kit (P/N E827958) if not already installed.

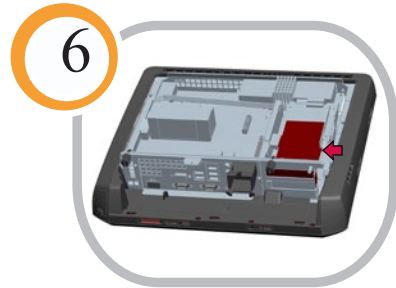


6

▶▶▶ Plug the modem card into the top PCI slot as shown.

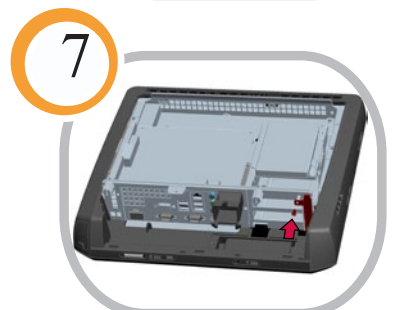

7

▶▶▶ Re-install the PCI lock and fasten it with the screw removed in STEP 3.

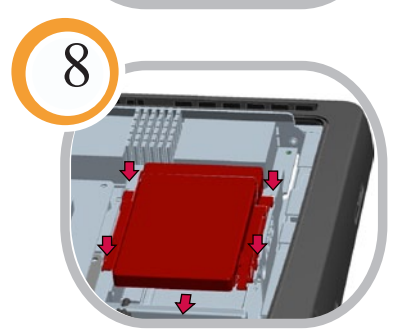

8

▶▶▶ Re-install the primary hard drive (HDD1) by inserting all four (4) of the hooks into the chassis holes and slide the drive forward.