

Included Items

- 1 Webcam or MSR
- 2 M3 x 20mm mounting screws
- 1 Cable clip kit (1 clip and 1 screw)

Elo Technical Support

Online self-help:
www.elotouch.com/go/websupport

Technical Support contacts in your region:
www.elotouch.com/go/contactsupport

North America

Elo Touchsystems
301 Constitution Drive
Menlo Park, CA 94025
www.elotouch.com

Europe

Tel +32 (0)16 35 21 00
Fax +32 (0)16 35 21 01
elosales@elotouch.com

Asia-Pacific

Tel +81 (45) 478-2161
Fax +81 (45) 478-2180
www.tps.co.jp

Latin America

Tel 1-305-428-5210
Fax 1-305-717-4909
www.elotouch.com.ar

Quick Install Guide 2201 Touchmonitor Peripherals

- Webcam Kit
- MSR Kit

DISCLAIMER:

Tyco Electronics Corporation and its Affiliates in the TE Touch Solutions business unit of the TE Connectivity Ltd. family of companies (collectively "TE") reserves the right to change or update, without notice, any information contained herein; to change, without notice, the design, construction, materials, processing or specifications of any products; and to discontinue or limit production or distribution of any products.


No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Tyco Electronics Corporation.

Elo (logo), Elo TouchSystems, TE Connectivity, TE connectivity (logo) and TE (logo) are trademarks of the TE Connectivity Ltd. family of companies.




Installation


- 1 Choose a location to install the peripheral.

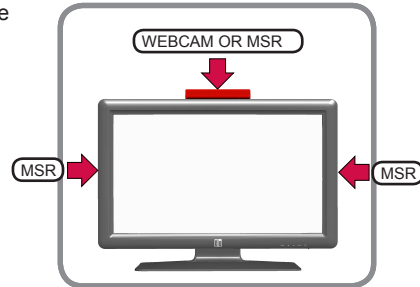


- 2 Located the two mounting hole covers on the back of the monitor for the chosen location.

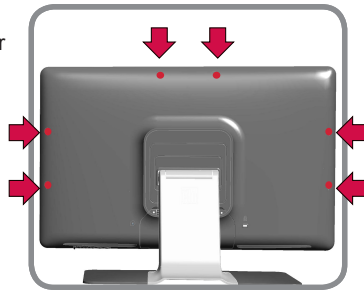


- 3 Peel off hole covers by inserting a small tool under the lip on the covers.

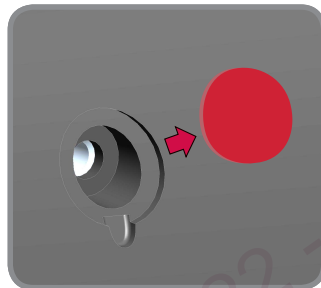

- 4 Fasten the peripheral to the touchmonitor using the two M3 x 20mm screws included in the kit.

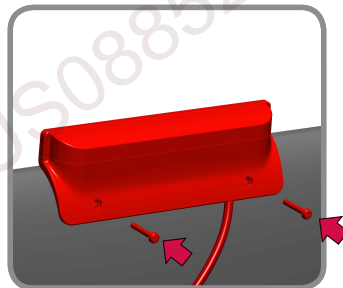


- 5 Tilt the monitor back to access the cable routing cover on the front of the stand.

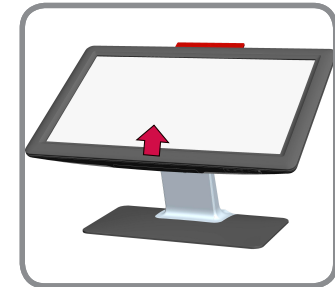

- 6 Remove the cable routing cover by pushing down on the snap near the cable opening.



- 7 Route the peripherals' USB cable through the channel in the stand and out the back. Then replace the cable cover.

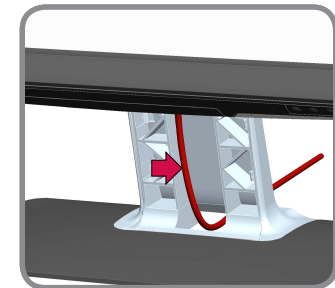

- 8 Optional: Install the cable clip. Snap the clip over the cable and then fasten the clip to the rear of the monitor using the screw provided in the kit.

